

GE
Automation & Controls
Programmable Control Products

PACSystems* Industrial PROFINET Managed Ethernet Switches Web Configuration Tool Guide

GFK-3062
September 2019

Warnings, Cautions, and Notes as Used in this Publication

GFL-002



Warning

Warning notices are used in this publication to emphasize that hazardous voltages, currents, temperatures, or other conditions that could cause personal injury, exist in this equipment or may be associated with its use.

In situations where inattention could cause either personal injury or damage to equipment, a Warning notice is used.



Caution

Caution notices are used where equipment might be damaged if care is not taken.



Attention

Indicates a procedure or condition that should be strictly followed.

Note: Notes merely call attention to information that is especially significant to understanding and operating the equipment.

These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met during installation, operation, and maintenance. The information is supplied for informational purposes only, and GE makes no warranty as to the accuracy of the information included herein. Changes, modifications, and/or improvements to equipment and specifications are made periodically and these changes may or may not be reflected herein. It is understood that GE may make changes, modifications, or improvements to the equipment referenced herein or to the document itself at any time. This document is intended for trained personnel familiar with the GE products referenced herein.

GE may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not provide any license whatsoever to any of these patents.

GE PROVIDES THE FOLLOWING DOCUMENT AND THE INFORMATION INCLUDED THEREIN AS-IS AND WITHOUT WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED STATUTORY WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE.

* indicates a trademark of General Electric Company and/or its subsidiaries.
All other trademarks are the property of their respective owners.

©Copyright 2002-2017 General Electric Company.
All Rights Reserved

If you purchased this product through an Authorized Channel Partner, please contact the seller directly.

General Contact Information

Online technical support and GlobalCare	www.geautomation.com/support
Additional information	www.geautomation.com
Solution Provider	solutionprovider.ip@ge.com

Technical Support

If you have technical problems that cannot be resolved with the information in this manual, please contact us by telephone or email, or on the web at www.geautomation.com/support

Americas

Phone	1-800-433-2682
International Americas Direct Dial	1-780-420-2010 (if toll free 800-option is unavailable)
Customer Care Email	digitalsupport@ge.com
Primary language of support	English

Europe, the Middle East, and Africa

Phone	+800-1-433-2682
EMEA Direct Dial	+ 420-296-183-331 (if toll free 800-option is unavailable or if dialing from a mobile telephone)
Customer Care Email	digitalsupport.emea@ge.com
Primary languages of support	English, French, German, Italian, Spanish

Asia Pacific

Phone	+86-21-3877-7006 (India, Indonesia, and Pakistan)
	+86-400-820-8208 (rest of Asia)
Customer Care Email	digitalsupport.apac@ge.com
Primary languages of support	Chinese, English

Table of Contents

PACSystems* Industrial PROFINET Managed Ethernet Switches Web Configuration Tool Guide User Manual GFK-3062.....	iii
Table of Contents.....	ii
List of Tables.....	iii
Table of Figures.....	iv
Chapter 1 Overview.....	5
1.1 Revisions in this Manual.....	5
1.2 PACSystems Documentation.....	5
1.3 Overview.....	5
1.4 PROFINET I/O Introduction.....	6
1.4.1 Network Structure Overview.....	6
1.4.2 I/O Controller.....	6
1.4.3 I/O Supervisor.....	6
1.4.4 I/O Device.....	7
1.5 Device Description— GSD.....	7
1.6 Media Redundancy— MRP.....	7
Chapter 2 PROFINET I/O Command on Switch.....	9
2.1 Configuration.....	9
2.2 Monitor (MRP, LLDP).....	9
Chapter 3 PROFINET I/O Attributes Support.....	13
3.1 Cyclic I/O Data (RTC).....	13
Chapter 4 Hardware Configuration.....	19
Chapter 5 Configuration and Monitor.....	21
Appendix A.....	27
Appendix A PROFINET I/O Acyclic Data.....	27
Acyclic I/O Data (RTA).....	27

List of Tables

Table 3-1 Slot1: Device Data.....	13
Table 3-2 Slot2: Port Status.....	14
Table 3-3 Slot3: Port Alarm Setting.....	15
Table 3-4 Slot4: MRP Group1	16
Table 3-5 Slot5: MRP Group2	17
Table A-1 System Data (Slot 0x0, Subslot 0x1, Index 0x1).....	27
Table A-2 Port Data (Slot 0x0, Subslot 0x8001~0x800e, Index 0x1).....	30
Table A-3 MRP Group 1 (Slot 0x0, Subslot 0x1, Index 0x3).....	30
Table A-4 MRP Group 2 (Slot 0x0, Subslot 0x1, Index 0x3).....	31

Table of Figures

Figure 1-1 PROFINET Network Structure.....	6
Figure 1-2 Input GSD File.....	7
Figure 1-3 MRP.....	8
Figure 4-1 MRP.....	19
Figure 4-2 MRP.....	19
Figure 4-3 MRP.....	20
Figure 5-1 monitor.....	21
Figure 5-2 monitor.....	22
Figure 5-3 monitor.....	23
Figure 5-4 monitor.....	24
Figure 5-5 monitor.....	24
Figure 5-6 monitor.....	25
Figure 5-7 monitor.....	25
Figure 5-8 monitor.....	25
Figure 5-9 monitor.....	26

Chapter 1 Overview

1.1 Revisions in this Manual

Rev	Date	Description
	Aug-2019	<ul style="list-style-type: none">Initial release.

1.2 PACSystems Documentation

1.2.1 PACSystems Manuals

<i>PACSystems RX7i, RX3i and RSTi-EP CPU Reference Manual</i>	GFK-2222
<i>PACSystems RX7i, RX3i and RSTi-EP CPU Programmer's Reference Manual</i>	GFK-2950
<i>PACSystems RX7i, RX3i and RSTi-EP TCP/IP Ethernet Communications User Manual</i>	GFK-2224
<i>PACSystems TCP/IP Ethernet Communications Station Manager User Manual</i>	GFK-2225
<i>PACSystems Memory Xchange Modules User's Manual</i>	GFK-2300
<i>PACSystems Hot Standby CPU Redundancy User Manual</i>	GFK-2308
<i>Proficy Machine Edition Logic Developer Getting Started</i>	GFK-1918
<i>Proficy Process Systems Getting Started Guide</i>	GFK-2487
<i>PACSystems RXi, RX3i, RX7i and RSTi-EP Controller Secure Deployment Guide</i>	GFK-2830
<i>PACSystems RX3i Systems Manual</i>	GFK-2314
<i>PACSystems RX3i Ethernet Network Interface Unit User's Manual</i>	GFK-2439
<i>PACSystems RX3i PROFINET Scanner Manual</i>	GFK-2737
<i>PACSystems RX3i & RSTi-EP PROFINET I/O Controller Manual</i>	GFK-2571
<i>PACSystems Industrial PROFINET Managed Ethernet Switches Important Product Information (IPI)</i>	GFK-3028
<i>PACSystems Industrial PROFINET Managed Ethernet Switches User's Manual</i>	GFK-3030
<i>PACSystems Industrial PROFINET Managed Ethernet Switches CLI Command Reference Guide</i>	GFK-3061
<i>PACSystems Industrial PROFINET Managed Ethernet Switches Secure Deployment Guide (SDG)</i>	GFK-3063
<i>PACSystems Industrial PROFINET Managed Ethernet Switches MRP Application Guide</i>	GFK-2070
<i>PACSystems Industrial PROFINET Managed Ethernet Switches Installation & Maintenance Requirements</i>	GFK-3098

In addition to these manuals, datasheets and product update documents describe individual modules and product revisions. The most recent PACSystems documentation is available on the GE Intelligent Platforms support website <http://geautomation.com/support>

1.3 Overview

GE Intelligent Platforms GLM serial switch is a full Gigabit, rack-mount type Ethernet switch, providing 10, or 14 Gigabit Ethernet ports to update the existing network to a full gigabit speed infrastructure. A full Gigabit network provides higher overall throughput than a legacy Fast Ethernet network, and reduce the response time for timing sensitive applications that may mix of video, voice and data in its traffic pipe.

The PROFINET which is the Ethernet based automation standard of PROFIBUS International and covers all requirements of the automation technology is also implemented in GE Intelligent Platforms GLM serial switch. The PROFINET overview and how to use GE Intelligent Platforms PROFINET switch are in the following chapters.

1.4 PROFINET I/O Introduction

PROFINET is an industrial communication network based on Ethernet for all applications views from PROFIBUS International (PI). It covers the key markets and key technologies in automation both today and in the future. With PROFINET I/O implementation, production and process automation can be easily done. Besides, data exchanges on PROFINET I/O are done between I/O controller (PLC, etc.) and I/O devices (field devices).

1.4.1 Network Structure Overview

There are three major roles in PROFINET I/O network structure. They are I/O controller, I/O supervisor, and I/O devices. It follows the provider and consumer model for data exchange. The detail descriptions are below.

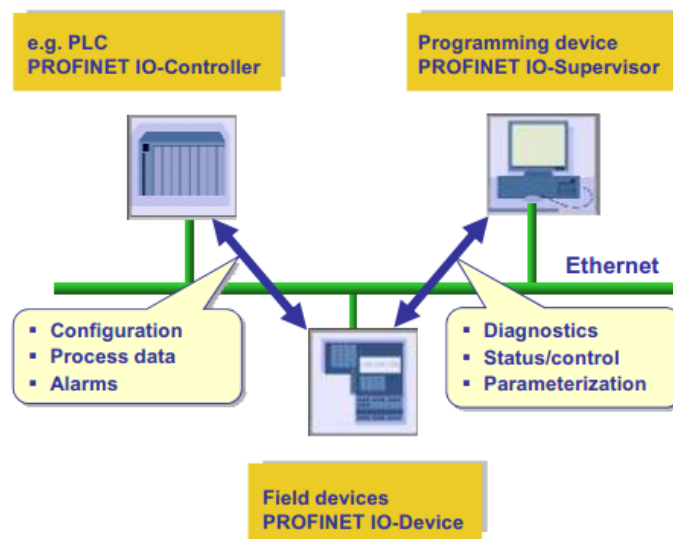


Figure 1-1 PROFINET Network Structure

1.4.2 I/O Controller

I/O Controller is a role to control the I/O device. In PROFINET I/O networking, it may exist exact one controller. However, it allows several controllers to implement system redundancy. The typical controller is the programmable logic controller (PLC) where the automation program runs.

1.4.3 I/O Supervisor

I/O supervisor maybe a programming device which control I/O controller, personal computer, or HMI device for commissioning or diagnostic use.

1.4.4 I/O Device

I/O device is a distributed field device which connected to one or more I/O controllers via PROFINET I/O. It sends switch data to controller periodically by supported cycle time.

GE Intelligent Platforms' PROFINET switch acts as a PROFINET I/O device. It supports many useful attributes for I/O controller to configure or monitor. The detail attributes are described under GSD file and following subject.

1.5 Device Description — GSD

The GSD file (General Station Description) is an XML based description language for PROFINET I/O Device. It uses to describe the features and functions of the PROFINET device model. Before configuring an I/O controller, the configuration tool needs a GSDML file for each type of device on the network. Find your GSD file in the CD before start to run PROFINET.

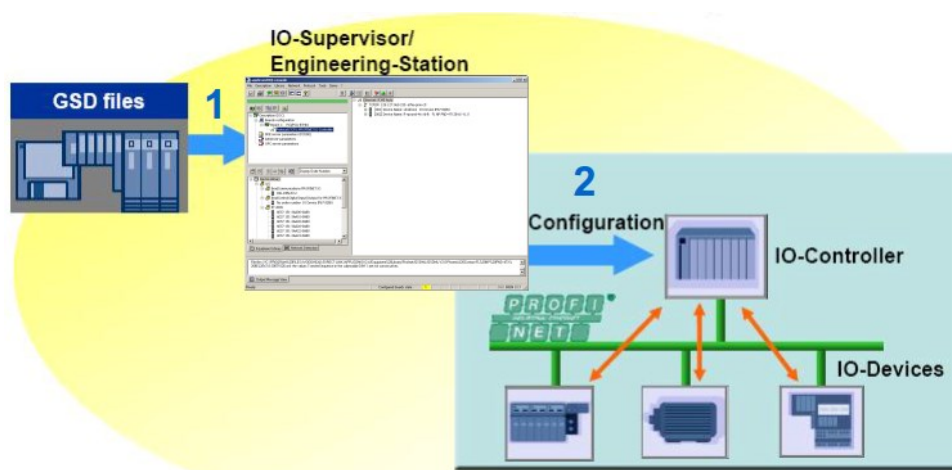


Figure 1-2 Input GSD File

1.6 Media Redundancy — MRP

It introduces Media Redundancy Protocol (MRP) in PROFINET IO to prevent network broken caused by link loss or network device error. MRP is a special protocol for ring network setups. Ring networks are the preferred redundant network setups in the field area of Industrial Ethernet PROFINET networks. MRP guarantees quick network reconfiguration after the loss of a network link.

Within MRP, two device roles are defined: the Media Redundancy Manager (MRM) role, typically taken by either the IO-Controller or a switch in a ring, and the Media Redundancy Client (MRC) role, typically taken by PROFINET IO devices.

Both MRM and MRC have two designated ring ports. The links of these ring ports with other devices ring ports form the ring. See below figure.

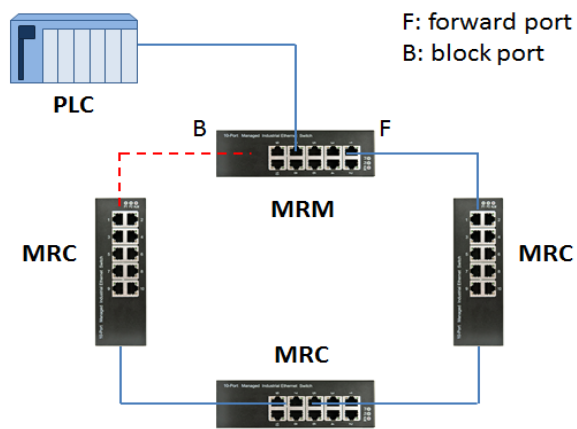


Figure 1-3 MRP

Chapter 2 PROFINET I/O Command on Switch

2.1 Configuration

- Enable PROFINET
No command. (PROFINET function always on)
- Set PROFINET Name
configure terminal
profinet
devname <name>

Example:

```
GLM082# configure terminal
GLM082(config)# profinet
GLM082(profinet-config)# devname IO-Device-01
GLM082(profinet-config)#
```

2.2 Monitor (MRP, LLDP)

- Device Name
show profinet name

Example:

```
GLM082# show profinet name
Name of Station      : GLM082
```

- MRP Status
show profinet mrp all
show profinet mrp group <1,2>

Example:

```
GLM082#show profinet mrp all
```

```
MRP Group 1 Info:
```

```
=====
```

```
Role                : Manager  
Ring Port1          : 1  
Ring Port2          : 2  
Vlan                : 0  
Manager Priority     : 0xa000  
Topology Change Interval : 1
```

- LLDP Information

100BASE-TX full duplex mode	
100BASE-TX half duplex mode	
10BASE-T full duplex mode	
10BASE-T half duplex mode	
Port MAU type - 1000BaseTFD	
Profinet - Port Delay	: Port Rx Delay Local - 0
Port Rx Delay Remote	- 0
Port Tx Delay Local	- 0
Test Monitoring Count	: 3
Non Blocking MRC Supported	: 0
Test Monitoring Extended Count	: 25
React on Link Change	: 1
Check Media Redundancy	: 1
Domain Name	: mrpdomain-1
Real Role State	: 1
Real Ring State	: 1
Ring Port1 PortState	: FORWARDING
Ring Port2 PortState	: BLOCKED
MRP Group 2 Info:	
=====	
Role	: Client
Ring Port1	: 3
Ring Port2	: 4
Vlan	: 0
Link Down Interval	: 20
Link Up Interval	: 20
Link Change Count	: 4
Blocked State Supported	: 1
Domain Name	: mrpdomain-2
Ring Port1 PortState	: FORWARDING
Ring Port2 PortState	: BLOCKED

```
GLM082#show lldp neighbors
Local Interface   : GigabitEthernet 1/2
-----
Chassis ID       : 00-05-65-72-E7-69
Port ID         : port-001
Port Description  : port-001
System Name      : GLM082
System Description : 8 ports - 2SFP
System Capabilities : Bridge(+)
Management Address : 192.168.0.3 (IPv4)
Profinet - Port Status : RT Class 2 Port Status - OFF
                  RT Class 3 Port Status - OFF
Profinet - Chassis MAC : Chassis MAC : 00-05-65-72-E7-69
IEEE 802.3 - MAC/PHY : Port Auto Negotiation - Enable
                  Port Auto Capability - 1000BASE-T full duplex mode
```

Chapter 3 PROFINET I/O Attributes Support

3.1 Cyclic I/O Data (RTC)

GE Intelligent Platforms PROFINET switch provides PROFINET I/O cyclic data which sends information between PROFINET switch and the controller periodically. The default transfer frequency of PROFINET cyclic data is 128 ms. There are 3 available values defined in GSD file: 128, 256, or 512 ms.

The following tables show GE Intelligent Platforms PROFINET I/O switch which supports 5 RTC modules. The second byte for module 2 to 5 depends on the port count of device. (max 14 ports for GE Intelligent Platforms model)

Table 3-1 Slot1: Device Data

Category	Direction	Byte	Bit	Name	Description
Device	Input	0	0	Alarm Status	0 is No Alarm, 1 is Alarm happened.
			1	Power 1	0 is Fail, 1 is OK
			2	Power 2	0 is Fail, 1 is OK
			3	Ring	0 is disabled, 1 is enabled
			4	Ring Status	0 is Fail, 1 is Normal
			5	Module OK Status	0 is Not OK, 1 is OK

Table 3-2 Slot2: Port Status

Category	Direction	Byte	Bit	Name	Description
Port Status	Input	0	0	Port 1 Connection	0 is not connected, 1 is connected
			1	Port 2 Connection	0 is not connected, 1 is connected
			2	Port 3 Connection	0 is not connected, 1 is connected
			3	Port 4 Connection	0 is not connected, 1 is connected
			4	Port 5 Connection	0 is not connected, 1 is connected
			5	Port 6 Connection	0 is not connected, 1 is connected
			6	Port 7 Connection	0 is not connected, 1 is connected
			7	Port 8 Connection	0 is not connected, 1 is connected
		1	0	Port 9 Connection	0 is not connected, 1 is connected
			1	Port 10 Connection	0 is not connected, 1 is connected
			2	Port 11 Connection	0 is not connected, 1 is connected
			3	Port 12 Connection	0 is not connected, 1 is connected
			4	Port 13 Connection	0 is not connected, 1 is connected
			5	Port 14 Connection	0 is not connected, 1 is connected

Table 3-3 Slot3: Port Alarm Setting

Category	Direction	Byte	Bit	Name	Description
Port Setting	Input Output	0	0	Port 1 Alarm	0 is not send Alarm, 1 is send Alarm
			1	Port 2 Alarm	0 is not send Alarm, 1 is send Alarm
			2	Port 3 Alarm	0 is not send Alarm, 1 is send Alarm
			3	Port 4 Alarm	0 is not send Alarm, 1 is send Alarm
			4	Port 5 Alarm	0 is not send Alarm, 1 is send Alarm
			5	Port 6 Alarm	0 is not send Alarm, 1 is send Alarm
			6	Port 7 Alarm	0 is not send Alarm, 1 is send Alarm
			7	Port 8 Alarm	0 is not send Alarm, 1 is send Alarm
		1	0	Port 9 Alarm	0 is not send Alarm, 1 is send Alarm
			1	Port 10 Alarm	0 is not send Alarm, 1 is send Alarm
			2	Port 11 Alarm	0 is not send Alarm, 1 is send Alarm
			3	Port 12 Alarm	0 is not send Alarm, 1 is send Alarm
			4	Port 13 Alarm	0 is not send Alarm, 1 is send Alarm
			5	Port 14 Alarm	0 is not send Alarm, 1 is send Alarm

Table 3-4 Slot4: MRP Group1

Category	Direction	Byte	Bit	Name	Description
MRP Group1	Input	0	0	MRP Group1 Mode	0 is Disable MRP, 1 is Enable MRP
			1	MRP Group1 Role	0 is MRC, 1 is MRM
			2	MRP Group1 Ring Status	0 is Open, 1 is Close
MRP Group1 Port	Input	1	0	Port1 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			1	Port2 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			2	Port3 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			3	Port4 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			4	Port5 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			5	Port6 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			6	Port7 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			7	Port8 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
		2	0	Port9 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			1	Port10 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			2	Port11 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			3	Port12 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			4	Port13 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port
			5	Port14 is MRP-G1 Ring port	0 is not Ring port, 1 is Ring port

Table 3-5 Slot5: MRP Group2

Category	Direction	Byte	Bit	Name	Description
MRP Group2	Input	0	0	MRP Group2 Mode	0 is Disable MRP, 1 is Enable MRP
			1	MRP Group2 Role	0 is MRC, 1 is MRM
			2	MRP Group2 Ring Status	0 is Open, 1 is Close
MRP Group2 Port	Input	1	0	Port1 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			1	Port2 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			2	Port3 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			3	Port4 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			4	Port5 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			5	Port6 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			6	Port7 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			7	Port8 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
		2	0	Port9 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			1	Port10 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			2	Port11 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			3	Port12 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			4	Port13 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port
			5	Port14 is MRP-G2 Ring port	0 is not Ring port, 1 is Ring port

Slot6: Ring Group1

Category	Direction	Byte	Bit	Name	Description
Ring Group1	Input	0	0	Ring Group1 Mode	0 is Disable Ring, 1 is Enable Ring
			1	Ring Group1 Role	0 is Ring Slave, 1 is Ring Master
			2	Ring Status	0 is Failure, 1 is Normal Condition
Ring Group1 Ports	Input	1	0...3	Ring Port 1 Number	Port ID number (1 thru 14)
			4...6	Reserved	
			7	Port 1 Status	0=Forwarded, 1=Blocked
		2	0...3	Ring Port 2 Number	Port ID number (1 thru 14)
			4...6	Reserved	
			7	Port 2 Status	0=Forwarded, 1=Blocked

Slot7: MRE Group1

Category	Direction	Byte	Bit	Name	Description
MRE Group1	Input	0	0	MRE Group1 Mode	0 is Disable Ring, 1 is Enable Ring
			1	MRE Group1 Role	0 is Ring Slave, 1 is Ring Master
			2	Ring Status	0 is Failure, 1 is Normal Condition
		1	0...3	Ring Port Number	Port ID number (1 thru 14)
			4...6	Reserved	
			7	Port Status	0=Forwarded, 1=Blocked

Slot8: MRE Group2

Category	Direction	Byte	Bit	Name	Description
MRE Group2	Input	0	0	MRE Group2 Mode	0 is Disable Ring, 1 is Enable Ring
			1	MRE Group2 Role	0 is Ring Slave, 1 is Ring Master
			2	Ring Status	0 is Failure, 1 is Normal Condition
		1	0...3	Ring Port Number	Port ID number (1 thru 14)
			4...6	Reserved	
			7	Port Status	0=Forwarded, 1=Blocked

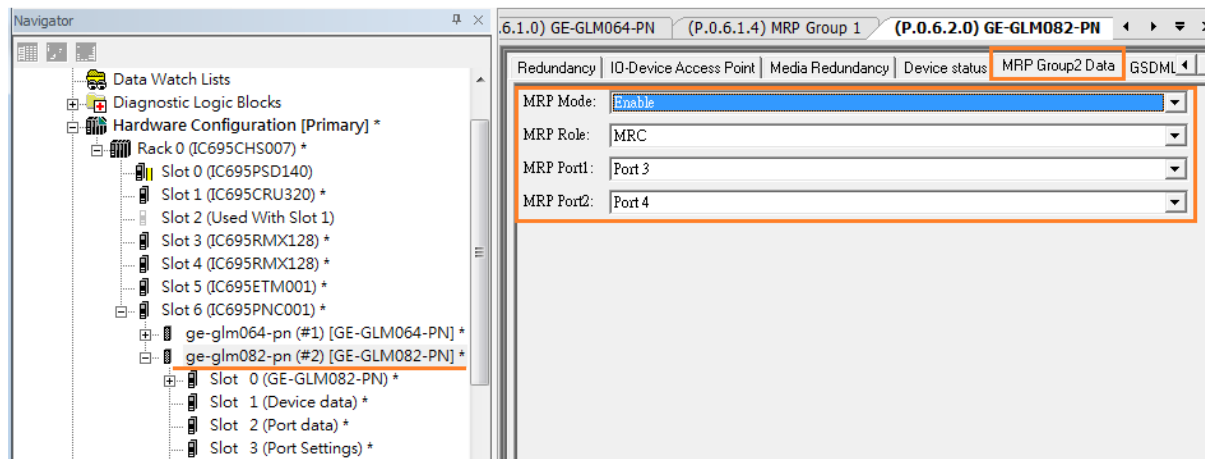


Figure 4-3 MRP

Chapter 5 Configuration and Monitor

After implement [Download Active Target], to monitor the I/O date, both 2 CRU320s shall be set to “RUN TO ENABLE” on the embedded switch.

To configure and monitor the status on I/O device, the Proficy Machine Edition supports the memory control mechanism for I/O data access. The memory control interface is implemented by [Reference View Table].

Click [Reference View Table] and click the right bottom and select [New].

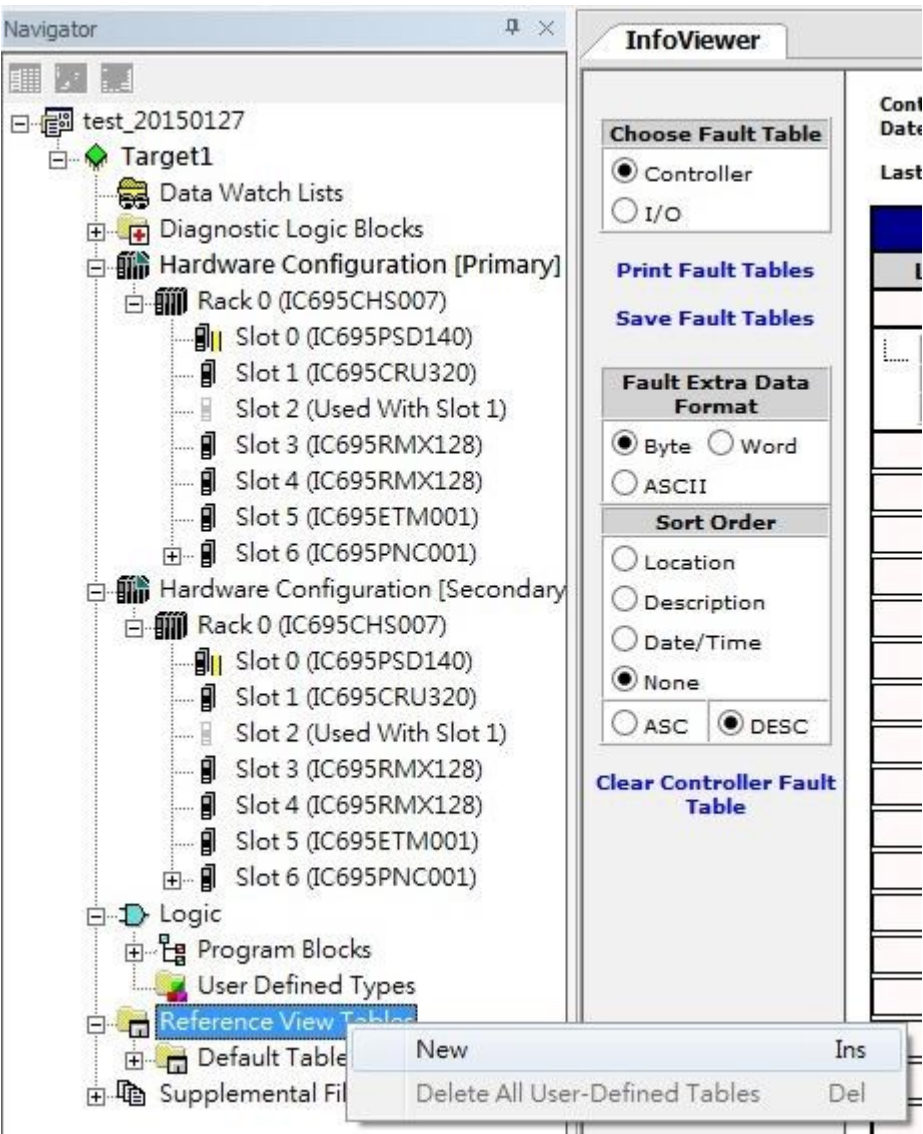


Figure 5-1 monitor

Specify the name of the table, here we named it “TestView”.

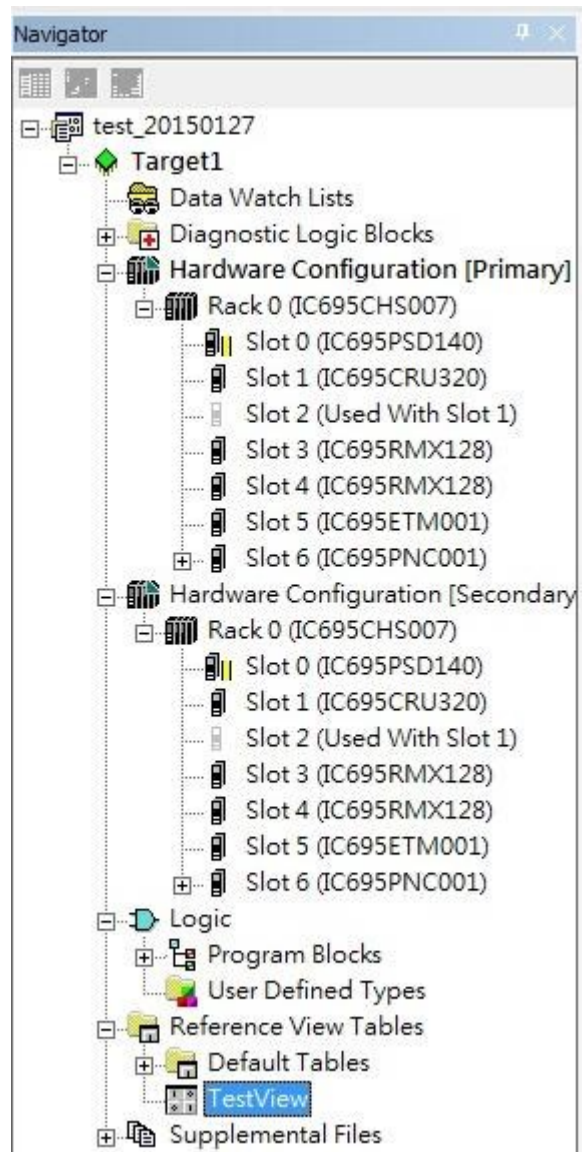


Figure 5-2 monitor

Press the new table “TestView”, then the table is shown.

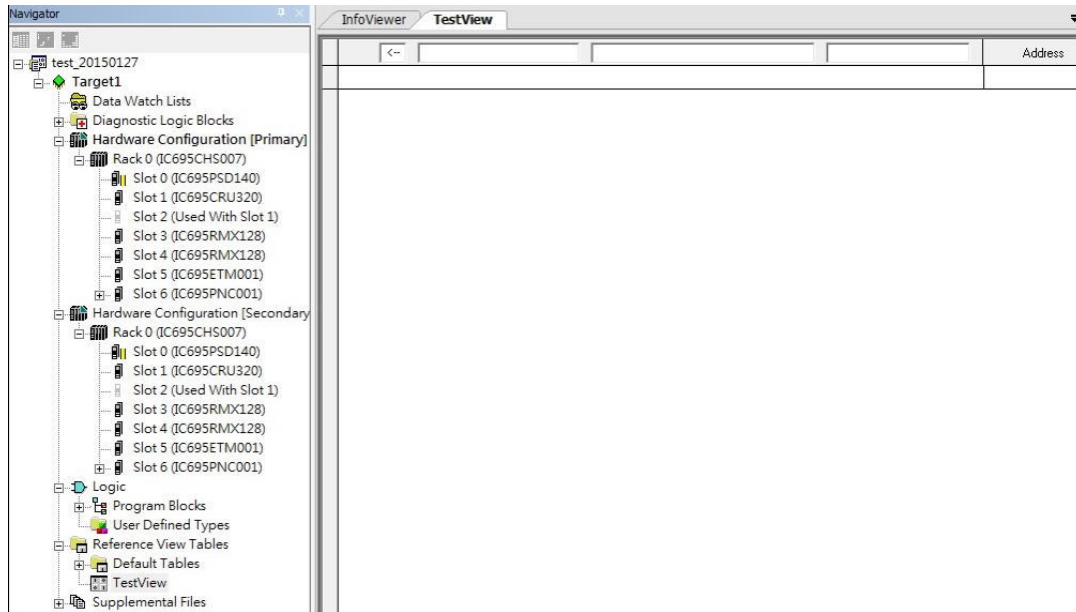


Figure 5-3 monitor

To configure and monitor the status of the I/O Device, the port link status alarm enable / disable and the state are illustrated as the demonstration case. The port link status alarm control function is supported and defined in the GSDML file.

Click [Slot 3 (port setting)] as the following picture.

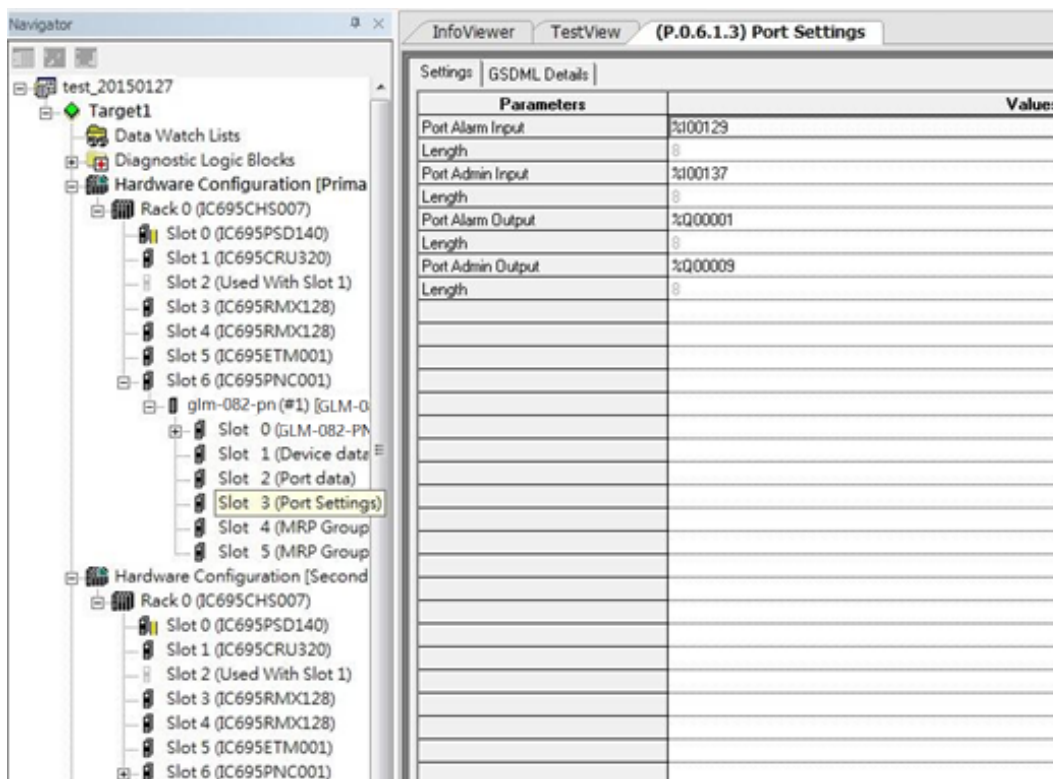


Figure 5-4 monitor

The [Port Alarm Output] is the configuration interface to enable / disable the port alarm, the address is [%Q00001] with the length of 8 bits. The symbol Q means the output direction from I/O Controller.

The [Port Alarm Input] is the monitor interface to fetch the port alarm status, the address is [%I00129] with the length of 8 bits. The symbol I means the input direction to I/O Controller.

First, we copy the address of [Port Alarm Output], [%Q00001] to the table.

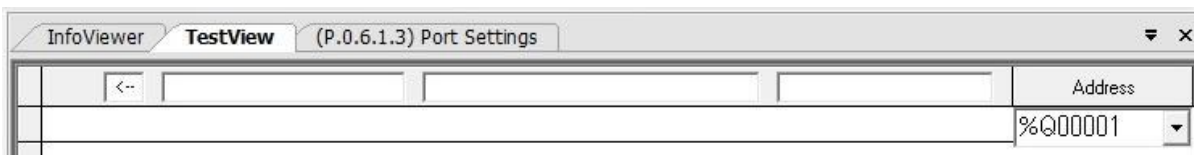


Figure 5-5 monitor

Then we copy the address of [Port Alarm Input] to the table.

InfoViewer TestView (P.0.6.1.3) Port Settings							
	<--						Address
0000	00000000	00000000	00000000	00000000	00000000	00000000	%Q00001
0000	00000000	00001100	00000011	00000011	00000001	00000000	%I00129

Figure 5-6 monitor

As we can see in the figure above, the alarm of port 3 is enabled (according to value 1, bit 2, address [%Q00001] and the definition of GSDML file). Also, the value 1, bit 2, address [%I00129] represents that there is an alarm occurs in port 3 since the connection is fail.

To disable the port 3 link status alarm, we can modify the value in bit 2, address [%Q00001] as 0, then the alarm status is eliminated.

InfoViewer TestView (P.0.6.1.3) Port Settings							
	<--	Binary	00000000		%Q00003		Address
0000	00000000	00000000	00000000	00000000	00000000	00000000	%Q00001
0000	00000000	00001100	00000011	00000011	00000001	00000000	%I00129

Figure 5-7 monitor

Also, we can see the current state of the I/O Device. Now the port 3 is linkdown and the alarm LED is off since the link status alarm is disabled.



Figure 5-8 monitor

Now we re-enable the port 3 link status alarm.

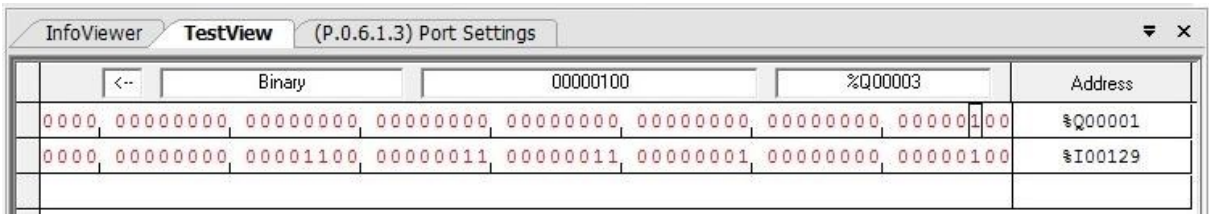


Figure 5-9 monitor

As we can see in the figure above, the link status alarm is enabled in port 3 and the link status is occurred. Also, the alarm LED is on because is port 3 link status is enabled and the link status is down.

Appendix A

Appendix A PROFINET I/O Acyclic Data

Acyclic I/O Data (RTA)

GE Intelligent Platforms PROFINET switch also provides PROFINET I/O acyclic data for more flexible settings and monitoring. Thus, it allows to read or to write the supported attributes. It uses PROFINET acyclic data to achieve communication in the network. For writable attributes, a controller, like Proficy Machine Edition tool, or engineering deployment software needed to edit it. The following tables show GE Intelligent Platforms PROFINET I/O switch which supports 4 RTA modules.

- ro: Ready Only
- rw: Read and Write

Table A-1 System Data (Slot 0x0, Subslot 0x1, Index 0x1)

Byte	Name	Access	Value	Description
0	Device Status	ro	0	Unavailable(Do not support)
			1	OK(default)
			2	Device bootup fails
1	Alarm Status	ro	0	Unavailable(Do not support)
			1	No Alarm(default)
			2	Alarm happened
2	Power 1 Status	ro	0	Unavailable (Do not support)
			1	OK
			2	Power 1 fails
3	Power 2 Status	ro	0	Unavailable (Do not support)
			1	OK
			2	Power 2 fails
4	Redundant Mode	ro	0	MRP
			1	RSTP/MSTP
			2	Ring/Coupling/Dual Homing/Chain/Balancing Chain
			3	No Redundant
5	Ring-1 Mode (config value)	ro	0	Unavailable(Do not support)
			1	Enabled
			2	Disabled

Byte	Name	Access	Value	Description
6	Ring-1 Role	ro	0	Unavailable(Do not support)
			1	Ring Master
			2	Ring Slave
7	Ring-1 State	ro	0	Unavailable (Do not support)
			1	Disabled
			2	Normal
			3	Fail
8	Ring-2 Mode (config value)	ro	0	Unavailable(Do not support)
			1	Enabled
			2	Disabled
9	Ring-2 Role	ro	0	Unavailable(Do not support)
			1	Ring Master
			2	Ring Slave
			3	Coupling Primary
			4	Coupling Backup
			5	Dual Homing
10	Ring-2 State	ro	0	Unavailable (Do not support)
			1	Disabled
			2	Normal
			3	Fail
11	Ring-3 Mode (config value)	ro	0	Unavailable(Do not support)
			1	Enabled
			2	Disabled
12	Ring-3 Role	ro	0	Unavailable(Do not support)
			1	Chain Head
			2	Chain Tail
			3	Chain Member
			4	Balancing Chain Terminal 1
			5	Balancing Chain Terminal 2
			6	Balancing Chain Central Block
			7	Balancing Chain Member

Byte	Name	Access	Value	Description
13	Ring-3 State	ro	0	Unavailable (Do not support)
			1	Disabled
			2	Normal
			3	Fail

Table A-2 Port Data (Slot 0x0, Subslot 0x8001~0x800e, Index 0x1)

Byte	Name	Access	Value	Description
0	Port Alarm	ro	0	Do not send alarm
			1	Send alarm when port link down
1	Port Setting State	ro	0	Unavailable(Do not support)
			1	Off
			2	On
2	Port Link State	ro	0	Unavailable(Do not support)
			1	Link is up
			2	Link is down
3	Port Speed	ro	0	Unavailable (Link down show Unavailable)
			1	10 Mbps
			2	100 Mbps
			3	1G bps
4	Port Duplex	ro	0	Unavailable (Link down show Unavailable)
			1	Half
			2	Full
5	Port Auto-negotiation	ro	0	Unavailable(Do not support)
			1	Off
			2	On

Table A-3 MRP Group 1 (Slot 0x0, Subslot 0x1, Index 0x3)

Byte	Name	Access	Value	Description
0	MRP Mode	rw	0	Disable MRP (Default)
			1	Enable MRP
1	MRP Role	rw	0	MRC (Default)
			1	MRM
2	Ring Port1 of MRP	rw	0~13	Port ID of Ring port1, 0 is Default value. (0 is meaning port1, 1 is meaning port2 ...etc,)
3	Ring Port2 of MRP	rw	0~13	Port ID of Ring port1, 1 is Default value. (0 is meaning port1, 1 is meaning port2 ...etc,)

Table A-4 MRP Group 2 (Slot 0x0, Subslot 0x1, Index 0x3)

Byte	Name	Access	Value	Description
0	MRP Mode	rw	0	Disable MRP (Default)
			1	Enable MRP
1	MRP Role	rw	0	MRC (Default)
			1	MRM
2	Ring Port1 of MRP	rw	0~13	Port ID of Ring port1, 2 is Default value. (0 is meaning port1, 1 is meaning port2 ...etc,)
3	Ring Port2 of MRP	rw	0~13	Port ID of Ring port1, 3 is Default value. (0 is meaning port1, 1 is meaning port2 ...etc,)

Table A-5 Ring Group 1 (Slot 0x0, Subslot 0x1, Index 0x4)

Byte	Name	Access	Value	Description
0	Ring Mode	rw	0	Disable Ring (Default)
			1	Enable Ring
1	Ring Role	rw	0	SLAVE (Default)
			1	MASTER
2	Ring Port1	rw	1~14	Port ID of Ring port1, 1 is Default value. (1 is meaning port1, 2 is meaning port2 ...etc,)
3	Ring Port2	rw	1~14	Port ID of Ring port1, 2 is Default value. (1 is meaning port1, 2 is meaning port2 ...etc,)

Table A-6 MRE Group 1 (Slot 0x0, Subslot 0x1, Index 0x5)

Byte	Name	Access	Value	Description
0	MRE Mode	rw	0	Disable MRE (Default)
			1	Enable MRE
1	MRE Role	rw	0	SLAVE (Default)
			1	MASTER
2	MRE Port	rw	1~14	Port ID of Ring port1, 5 is Default value. (1 is meaning port1, 2 is meaning port2 ...etc,)

Table A-7 MRE Group 2 (Slot 0x0, Subslot 0x1, Index 0x6)

Byte	Name	Access	Value	Description
0	MRE Mode	rw	0	Disable MRE (Default)
			1	Enable MRE
1	MRE Role	rw	0	SLAVE (Default)
			1	MASTER
2	MRE Port	rw	1~14	Port ID of Ring port1, 6 is Default value. (1 is meaning port1, 2 is meaning port2 ...etc,)



**GE Automation and Controls
Information Centers**

Headquarters:

1-800-433-2682 or 1-434-978-5100

Global regional phone numbers
are available on our web site

www.geautomation.com

Additional Resources

For more information, please visit our
web site:

www.geautomation.com

*Trademark of General Electric Company.

All other brands or names are property of their respective holders.

GFK-3062