

# RXi2-EP

Industrial PC (IPC)



# Document History

Rev	Date	Description
F	2023-02	Removed Slim Mounting
E	2021-09	UKCA Update
D	2021-03	Update to IEC/UL62368
C	2019-11	Emerson rebranding
B	2018-03	Initial version

## Warnings and Caution Notes as Used in this Publication

### **WARNING**

Warning notices are used in this publication to emphasize that hazardous voltages, currents, temperatures, or other conditions that could cause personal injury exist in this equipment or may be associated with its use.

In situations where inattention could cause either personal injury or damage to equipment, a Warning notice is used.

### **CAUTION**

Caution notices are used where equipment might be damaged if care is not taken.

---

### **Important**

Important notices are used when special attention is needed.

---

**Note:** Notes merely call attention to information that is especially significant to understanding and operating the equipment.

These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met during installation, operation, and maintenance. The information is supplied for informational purposes only, and Emerson makes no warranty as to the accuracy of the information included herein. Changes, modifications, and/or improvements to equipment and specifications are made periodically and these changes may or may not be reflected herein. It is understood that Emerson may make changes, modifications, or improvements to the equipment referenced herein or to the document itself at any time. This document is intended for trained personnel familiar with the Emerson products referenced herein.

Emerson may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not provide any license whatsoever to any of these patents.

Emerson provides the following document and the information included therein as-is and without warranty of any kind, expressed or implied, including but not limited to any implied statutory warranty of merchantability or fitness for particular purpose.

# Contents

<b>Section 1: Overview .....</b>	<b>1</b>
1.1 Capability and Compatibility .....	4
1.2 Software Requirements .....	4
1.3 Features .....	5
<b>Section 2: Unpacking and Inspection .....</b>	<b>7</b>
2.1 Package Contents .....	7
2.2 Available Options and Accessories .....	8
2.3 ESD and EMI .....	8
2.4 Unpack and Inspect .....	10
2.5 Handling .....	11
<b>Section 3: Mounting .....</b>	<b>12</b>
3.1 Wall Mounting with Mounting Plates .....	13
3.2 Wall Mounting Through Wall .....	14
<b>Section 4: Installation and Startup .....</b>	<b>15</b>
4.1 General Installation Guidelines .....	15
4.2 Required Materials .....	16
4.2.1 Power Supply .....	16
4.2.2 Keyboard .....	16
4.2.3 Video Monitor .....	16
4.3 Minimum System Requirements .....	16
4.4 Power-On Self-Test (POST) .....	17
4.5 Installation Procedures .....	18
4.5.1 PCIe Board Installation .....	18
4.5.2 Mini PCIe Add-on Board Installation .....	23
4.5.3 SIM Card Interface Installation .....	26
4.5.4 M.2 A-Key Add-on Board Installation .....	28
4.5.5 M.2 M-Key Add-on Board Installation .....	30
4.6 Initial Startup .....	31
4.7 UEFI Firmware Setup .....	31
4.8 RTC Battery Replacement .....	32

<b>Section 5:</b>	<b>Hardware Interface .....</b>	<b>33</b>
5.1	Interface.....	35
5.1.1	Status LEDs .....	35
5.1.2	Power Button.....	36
5.1.3	TPM Button .....	36
5.1.4	Ethernet Ports (Eth1, Eth2, Eth3, Eth4, Eth5) .....	37
5.1.5	Ethernet LEDs.....	38
5.1.6	DisplayPort.....	39
5.1.7	USB 3.0 Connectors .....	40
5.1.8	Power Connectors .....	41
5.1.9	Internal SATA Connector .....	41
5.1.10	CFast Connector .....	42
5.1.11	Serial (COM) Ports.....	42
5.1.12	SATA 2.5 inch Drive Tray Replacement.....	44
5.2	Additional Devices .....	49
5.2.1	Temperature Sensor .....	49
5.2.2	NVSRAM.....	49
<b>Section 6:</b>	<b>Hardware and Firmware Programmable Devices .....</b>	<b>50</b>
6.1	SMBUS Devices.....	50
6.2	Ethernet .....	50
6.3	PCIe Ports .....	51
<b>Section 7:</b>	<b>Specifications .....</b>	<b>53</b>
7.1	Power Consumption .....	53
7.1.1	Power Budget for Add-on Devices .....	54
7.2	Environmental Specifications .....	54
7.2.1	Ambient Temperatures and Humidity.....	54
7.2.2	Shock and Vibration without 2.5 inch Mass Storage .....	54
7.2.3	Shock and Vibration with 2.5 inch Mass Storage .....	54
7.2.4	Altitude .....	55
7.2.5	Regulations and Certification.....	55
7.2.6	Battery .....	56
7.3	Technical Specification.....	56

**Appendix.A: Open Source Software (OSS) List (V0.x) ..... 57**

**Appendix.B: Acronyms and Abbreviations..... 58**

**Appendix.C: Glossary ..... 60**

**General Contact Information..... 63**

**Technical Support ..... 63**

# List of Tables

Table 2-1	Delivery Volume .....	7
Table 2-2	Available Options .....	8
Table 2-3	Available Accessories.....	8
Table 5-1	Status LEDs .....	35
Table 5-2	Ethernet Interface.....	37
Table 5-3	ETH1 to ETH4 LEDs .....	38
Table 5-4	ETH5 LEDs .....	38
Table 5-5	DisplayPort Interface Signals.....	39
Table 5-6	USB Port 1-2 Signals.....	40
Table 5-7	USB Port 3-4 Signals .....	40
Table 5-8	Power Connectors .....	41
Table 5-9	Serial Ports .....	43
Table 5-10	THRM LED Indication.....	49
Table 6-1	SMBus Devices .....	50
Table 6-2	I2C Bus Device.....	50
Table 6-3	PCI Routing .....	51
Table 7-1	Input Power .....	53
Table 7-2	Power Entry.....	53
Table 7-3	Temperature Specifications .....	54
Table 7-4	Temperature Specifications .....	54
Table 7-5	Maximum Altitude .....	55
Table 7-6	Regulations and Certification.....	55
Table 7-7	Technical Specification.....	56
Table 7-8	Software license terms.....	57

# List of Figures

Figure 1-1	0-slot RXi2-EP IPC .....	2
Figure 1-2	1-slot RXi2-EP IPC .....	2
Figure 1-3	2-slot RAID RXi2-EP IPC .....	3
Figure 1-4	4-slot RXi2-EP IPC .....	3
Figure 1-5	4-slot RAID RXi2-EP IPC .....	4
Figure 1-6	2-slot RXi2-EP IPC System Block Diagram .....	6
Figure 2-1	RXi2-EP IPC Packaging .....	10
Figure 3-1	Heat Dissipation Clearance .....	12
Figure 3-2	Flat Wall Mounting with Mounting Plates .....	13
Figure 3-3	Flat Wall Mounting Through Wall .....	14
Figure 4-1	RXi2-EP Top Cover .....	18
Figure 4-2	PCIe Support Bracket Screws .....	19
Figure 4-3	Removed PCIe Support Bracket and Screws .....	19
Figure 4-4	Removed PCIe Slot Cover .....	20
Figure 4-5	PCIe Board Bracket Inserted into Slot .....	20
Figure 4-6	PCIe Board Bracket Inserted into PCIe Connector .....	21
Figure 4-7	Reattached PCIe Support Bracket .....	21
Figure 4-8	Reattached PCIe Bracket Screws .....	22
Figure 4-9	Card Holder Adjustment .....	22
Figure 4-10	Reattached Top Cover .....	23
Figure 4-11	Short Position for mPCIe Bracket .....	24
Figure 4-12	Long Position for mPCIe Bracket .....	24
Figure 4-13	mPCIe Board Inserted .....	25
Figure 4-14	mPCIe Board Mounted to RXi2-EP IPC .....	25
Figure 4-15	SIM Interface Connected to mPCIe – Unlocked but Closed .....	26
Figure 4-16	SIM Card Holder Open .....	26
Figure 4-17	Inserted SIM card .....	27
Figure 4-18	SIM Card Holder Closed and Locked .....	27
Figure 4-19	RXi2-EP IPC Connector Slot .....	28
Figure 4-20	M.2 A-Key Insertion into Connector Slot .....	28
Figure 4-21	M.2 A-Key Mounted to RXi2-EP IPC .....	29
Figure 4-22	RXi2-EP IPC Connector Slot .....	30
Figure 4-23	M.2 M-Key Insertion into Connector Slot .....	30
Figure 4-24	M.2 M-Key Mounted to RXi2-EP IPC .....	31
Figure 4-25	RTC Battery (Removed Top Cover) .....	32
Figure 5-1	RXi2-EP IPC Hardware Interface Overview .....	34
Figure 5-2	RXi2-EP IPC Hardware Interface Overview (2-slot Option) .....	35
Figure 5-3	Status LEDs .....	35
Figure 5-4	Power Button .....	36
Figure 5-5	Ethernet Interface Ports (1-slot Option) .....	37
Figure 5-6	RJ-45 Pinout .....	37
Figure 5-7	RXi2-EP IPC GBE .....	38
Figure 5-8	DisplayPort Interface Ports (2-slot Option) .....	39



Figure 5-9	USB 3.0 Connectors .....	40
Figure 5-10	Power Connectors .....	41
Figure 5-11	CFast Connector .....	42
Figure 5-12	Serial Ports – 0-Slot Variant .....	42
Figure 5-13	Serial Ports – 4-Slot Variant .....	42
Figure 5-14	Pin Assignment .....	43
Figure 5-15	2.5 inch SATA Drive Device Tray Location .....	44
Figure 5-16	Removing Storage Device Tray from Mounted Position.....	45
Figure 5-17	Storage Device Tray Fully Open Position .....	45
Figure 5-18	Removal of Storage Device Tray .....	46
Figure 5-19	Storage Device Tray Screws .....	46
Figure 5-20	Insert the replacement hard drive .....	47
Figure 5-21	Insert the storage device tray .....	47
Figure 5-22	Insert the tray .....	48
Figure 7-1	RXi2-EP Data Nameplate .....	55

# Section 1: Overview

A Computer-On-Module (COM) is a module containing all components necessary for a bootable host computer packaged as a super component. A COM requires a carrier board to connect I/O and power up. COMs are used to build modular solutions and offer Original Equipment Manufacturer (OEMs) fast time-to-market with reduced development cost. Like integrated circuits, they provide OEMs with significant freedom in meeting form-fit-function requirements. For these reasons, the COM methodology has gained much popularity with OEMs in the embedded industry.

The RXi2-EP IPC industrial computing platform delivers compact, rugged, mid to high performance computing and high-performance graphics capabilities to run HMI, historian, and analytics applications for real time control of operations. It offers the expandability of 0, 1, 2, or 4 (mini and low profile) PCI Express (PCIe) slots and CFast storage.

The RXi2-EP IPC (NextGenIPC) is composed of the following components:

- bCOM6L17 COM Express module based on AMD R-Series CPU
- CEC09 COM Express carrier board
- PERC12 (1-slot), PERC10 (2-slot) and PERC11 (4-slot) PCIe riser board
- PIP24VDC power supply module
- SRC SATA riser board for additional 2.5 inch mass storage devices support
- Industrial grade enclosure with heatsink for the module and carrier components

This chapter describes features, capabilities, and compatibilities of the RXi2-EP IPC and its components.

---

**Figure 1-1 0-slot RXi2-EP IPC**



---

**Figure 1-2 1-slot RXi2-EP IPC**



---

**Figure 1-3 2-slot RAID RXi2-EP IPC**



---

**Figure 1-4 4-slot RXi2-EP IPC**



**Figure 1-5 4-slot RAID RXi2-EP IPC**



## 1.1 Capability and Compatibility

The bCOM6L17 COM Express module is a fully IBM-AT compatible single board computer module containing many functions in a very small form-factor. It is based on the PICMG COM Express Module Base Specification V2.1 Type 6. The bCOM6L17 uses the AMD x86 Bald Eagle CPU and the AMD A77E chipset to provide most of the interface for Type 6.

The CEC09 COM Express carrier board is also compliant with the PICMG COM Express Module Base Specification V2.1 Type 6.

The PERC10 and PERC11 PCI Express (PCIe) riser boards provide signals from the Edge connector interface to a PCIe packet switch device (limited to PCIe Gen2) through PCIe expansion slots. The PERC12 riser board provides signals from the Edge and is a passive device that supports a PCIe Gen3 link.

The PIP24VDC power supply module provides a voltage input of nominal 24 V ( $\pm 25\%$ ).

## 1.2 Software Requirements


- Microsoft® Windows® 7 Professional 64-Bit
- Microsoft Windows 10 Professional 64-Bit
- Linux® Kernel 4.8

## 1.3 Features

RXi2-EP IPC module features are as follows:

- Processor
  - RX427BB, quad core, 2.7 GHz, L2 4 MB, 8CUs 600 MHz, DDR3 2133 MHz, 35 W
  - RX225FB, dual core, 2.2 GHz, L2 2 MB, 3CUs 464 MHz, DDR3 1600 MHz, 17 W
- System memory:
  - 4 GB up to 16 GB DDR3 SDRAM (soldered) with ECC
  - Organized dual channel with two ranks each
- 2x DisplayPort
- 4x USB 3.0
- 5x Gig Ethernet ports (1 from module plus 4 Ethernet controller (4x i210IT) with TimeSYNC IEEE1588 and 802.1AS
- Alternative 1x GigE and 4x SFP (4x i210IS) (Emerson support is available)
- Mini PCIe slot (half and full size)
  - Unified Infrastructure Management (UIM) interface
- M.2 PCIe M-Key (PCIe Gen3 x4) and SATA capability
- M.2 PCIe A-Key (general connectivity)
- TPM V1.2 or V2.0
- Up to 4 serial interfaces (2x RS-232, 2x galvanic isolated RS-485/RS-422)
- Capable of two additional 2.5 inch storage devices with SATA riser board/RAID option
- UIM interface
- 0, 1, 2 or 4-slots with active/passive riser board (depending on slot size)
- Operating at 24 V dc ( $\pm 25\%$ ), including over and under-voltage protection

**Figure 1-6    2-slot RXi2-EP IPC System Block Diagram**

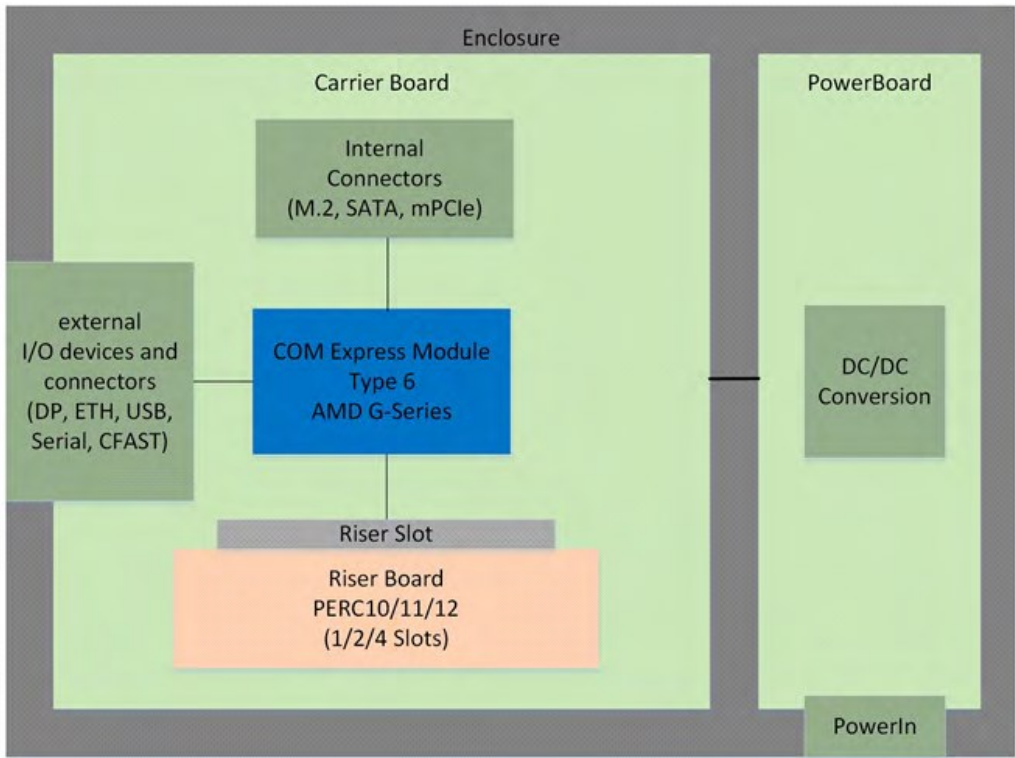

## Section 2: Unpacking and Inspection

### **WARNING**

If the RXi2-EP IPC operates at an enhanced ambient temperature up to 65°C (149 ° F), the surface of the enclosure, especially the heatsink, can reach a temperature of 85°C (185 °F) and above and presents a burn hazard. Be careful to not touch the RXi2-EP IPC with bare fingers.

Install the RXi2-EP IPC only in rooms with restricted access.

Si le RXi2-EP IPC fonctionne à une température ambiante améliorée jusqu'à 65 °C (149 °F), la surface du boîtier, en particulier le dissipateur thermique, peut atteindre une température de 85 °C (185 °F) et plus et présente un risque de brûlure. Veillez à ne pas toucher le RXi2-EP IPC avec les doigts nus.

Installez le RXi2-EP IPC uniquement dans des pièces à accès restreint.

This chapter describes unpacking, initial inspection, and required preparation considerations prior to using the RXi2-EP IPC. Perform the procedures in this chapter to verify proper operation after shipping and prior to system integration.

### 2.1 Package Contents

Verify that the delivered package contains the contents listed in the following table.

**Table 2-1 Delivery Volume**

Qty	Item	Purpose
1	RXi2-EP	RXi2-EP Industrial PC



## 2.2 Available Options and Accessories

The following tables list the available options and accessories for the RXi2-EP IPC.

**Table 2-2 Available Options**

Item	Description
R2E0N1A0A1T0A	0-slot, Quad Core 2.7 GHz, 128 GB, RJ-45
R2E0N1C0A1T0A	0-slot, Dual Core 2.2 GHz, 128 GB, RJ-45
R2E2N1A0A2T0A	2-slot, Quad Core 2.7 GHz, 128 GB, RJ-45
R2E2N1C0A2T0A	2-slot, Dual Core 2.2 GHz, 128 GB, RJ-45

**Table 2-3 Available Accessories**

Item	Description
Contact Emerson	10 pcs Flat mounting kit
R2X00ACMP05	1 pc Flat mounting kit
Contact Emerson	1 pc Slim mounting kit

**Note:** For the most current information on options and accessories, go to <https://www.emerson.com/en-us/where-to-buy?w=2&c=180&r=500&p=1&l=4&v=c> to find the nearest Emerson sales or service office, or an authorized Emerson sales representative. Options are subject to change without notice.

## 2.3 ESD and EMI

Electrostatic Discharge (ESD) is the discharge of static electricity. Electromagnetic Interference (EMI) is a disturbance generated by an external source that affects an electrical circuit by electromagnetic induction, electrostatic coupling, or conduction. ESD and EMI issues may show up in complete and operational systems. There are many ways to avoid problems with these issues.

Any operational system with cables for I/O signals, connectivity, or peripheral devices provides an entry point for ESD and EMI. If Emerson does not manufacture the complete system, including enclosure and cables, it is the responsibility of the system integrator and end user to protect their system against potential problems. Filtering, optical isolation, ESD gaskets, and other measures might be required at the physical point of entry (enclosure wall of box or rack). For example, it is state-of-the-art that protection cannot be done at the internal connector of an RTM if a cable is attached and routed outside the enclosure. It has to be done at the physical entry point as specified in this document.

Products manufactured by Emerson should normally be suitable for use in properly designed and produced customer equipment (system boxes or operational systems) without any major redesign. However, the systems might be subject to problems and issues once assembled, cabled, and used. The end user, system integrator or installer must test

for possible problems and in some cases show compliance to local regulations as required in his country or by the intended application.

ESD is a major cause of electronic component failure. The component has been packed in a static-safe bag to protect it from ESD while it is in the bag. Before removing the component or any other electronic product from its static-safe bag, be prepared to handle it in a static-safe environment.

### CAUTION

- Static-sensitive Devices: Handle only at static-safe workstations.
- Drain static electricity before you install or remove any parts. Installing or removing modules without observing this precaution could result in damage to this and/or other modules or component in your system.

### CAUTION

This is an FCC Class A product for use in an industrial environment. In a home or residential environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Wear a properly functioning antistatic strap and make sure you are fully grounded. Any surface upon which you place the unprotected module or unit should be static-safe, which is usually facilitated by the use of antistatic mats. From the time it is removed from the antistatic bag until it is in the board carrier and functioning properly, extreme care should be taken to avoid damage the component with ESD. Be aware that you could damage the component without knowing it; a small discharge, imperceptible to the eye and touch, can often be enough to damage electronic components. Extra caution should be taken in cold and dry weather as electrostatic charge will easily build up.

Only after ensuring that both you and the surrounding area are protected from ESD, carefully remove the component from the shipping carton by grasping the module on its edges. Place the component in its antistatic bag flat on a suitable surface. You may then remove the component from the antistatic bag by tearing the ESD Caution labels.

## 2.4 Unpack and Inspect

### **⚠ WARNING**

Before installing or removing any board or module, ensure that the system power and external supplies have been turned off.

### **⚠ WARNING**

Do not apply power to the board if it has visible damage. Doing so may cause further, possibly irreparable damage, as well as introduce a fire or shock hazard

---

### **Important**

Retain all packing material in case of future need.

---

Before unpacking the board or module, or fitting the device into your system, read the manual carefully. Also adhere to the following guidelines:

- Observe all precautions for electrostatic sensitive modules.
- If the product contains batteries, do not place it on conductive surfaces, antistatic plastic, or a sponge, which can cause shocks and lead to battery or board trace damage.
- Do not exceed the specified operational temperatures. Batteries and storage devices might also have temperature restrictions.
- Keep all original packaging material for future storage or warranty shipments of the board.

After unpacking the component, inspect it for visible damage that may have occurred during shipping or unpacking. Although the product is carefully packaged to protect it against the rigors of shipping, it is still possible that shipping damage may occur. Careful inspection of the shipping carton should reveal some information about how the package was handled by the shipping service.

If evidence of damage or rough handling is found (usually in the form of bent component leads or loose socketed components), notify the shipping service as soon as possible and contact Emerson for additional instructions. Depending on the severity of the damage, it may be necessary to return the product to the factory for repair.

---

**Figure 2-1 RXi2-EP IPC Packaging**



## 2.5 Handling

### **WARNING**

If the RXi2-EP IPC operates at an enhanced ambient temperature up to 65°C (149 ° F), the surface of the enclosure, especially the heatsink, can reach a temperature of 85°C (185 °F) and above and presents a burn hazard. Be careful to not touch the RXi2-EP IPC with bare fingers.

Install the RXi2-EP IPC only in rooms with restricted access.

Si le RXi2-EP IPC fonctionne à une température ambiante améliorée jusqu'à 65 °C (149 °F), la surface du boîtier, en particulier le dissipateur thermique, peut atteindre une température de 85 °C (185 °F) et plus et présente un risque de brûlure. Veillez à ne pas toucher le RXi2-EP IPC avec les doigts nus.

Installez le RXi2-EP IPC uniquement dans des pièces à accès restreint.

---


## Section 3: Mounting

RXi2-EP IPC cooling is designed for an upright, wall-mounted orientation. There are two possible mounting options:

- Wall mounting with mounting plates
- Wall mounting through wall

For the best results of heat dissipation, observe the minimum clearances for wall mounting as illustrated in the following figure.

**Figure 3-1 Heat Dissipation Clearance**

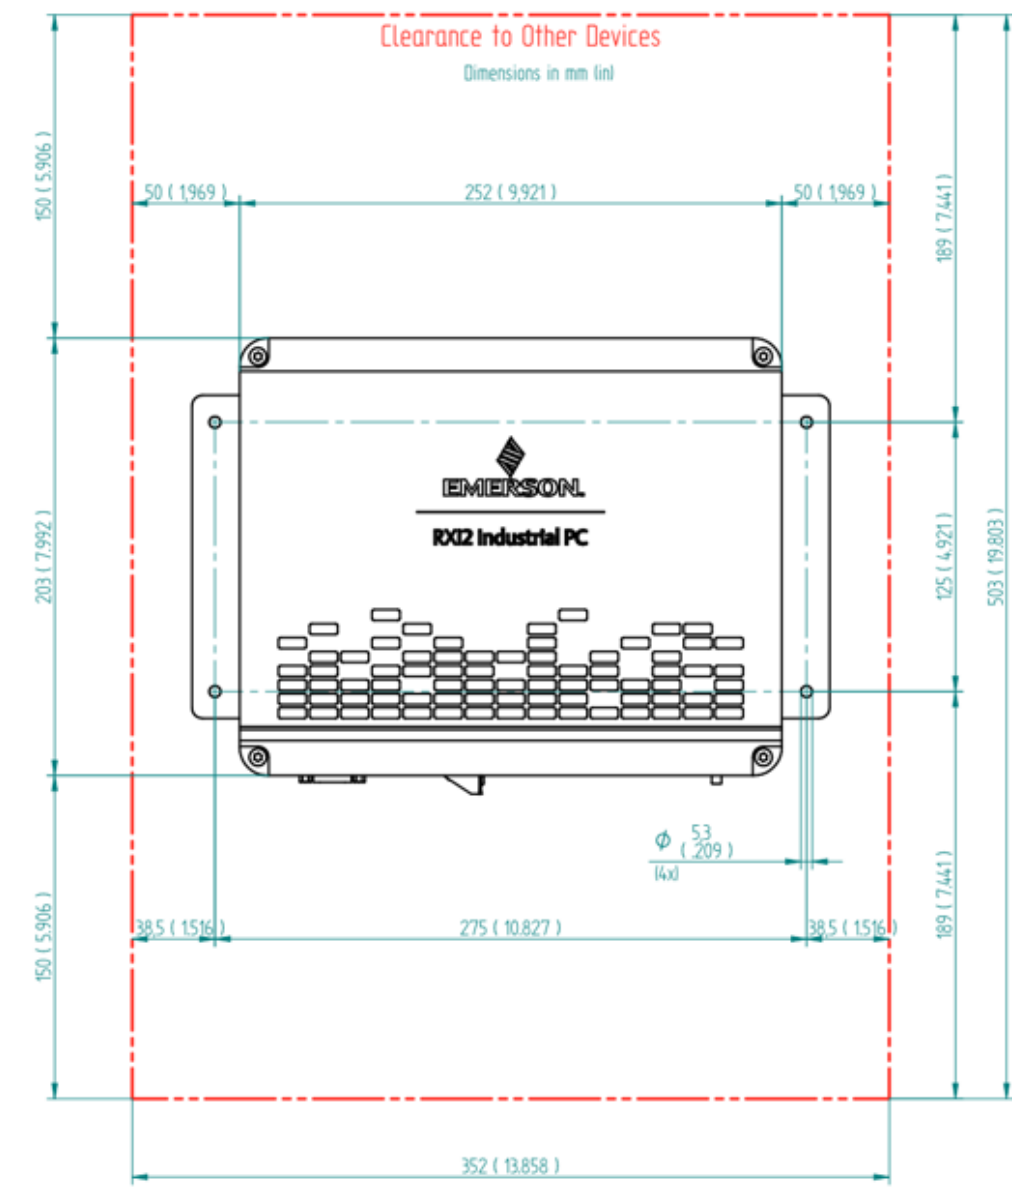


## 3.1 Wall Mounting with Mounting Plates

The screws selected for use depends on the nature of the wall. The mounting plates have four holes with a diameter of 5.3 mm (0.209 in), so the maximum screw diameter cannot be more than 5.2 mm (0.205 in).

**Note:** The mounting plate for the 2-slot and 4-slot version will be the same


**Figure 3-2 Flat Wall Mounting with Mounting Plates**

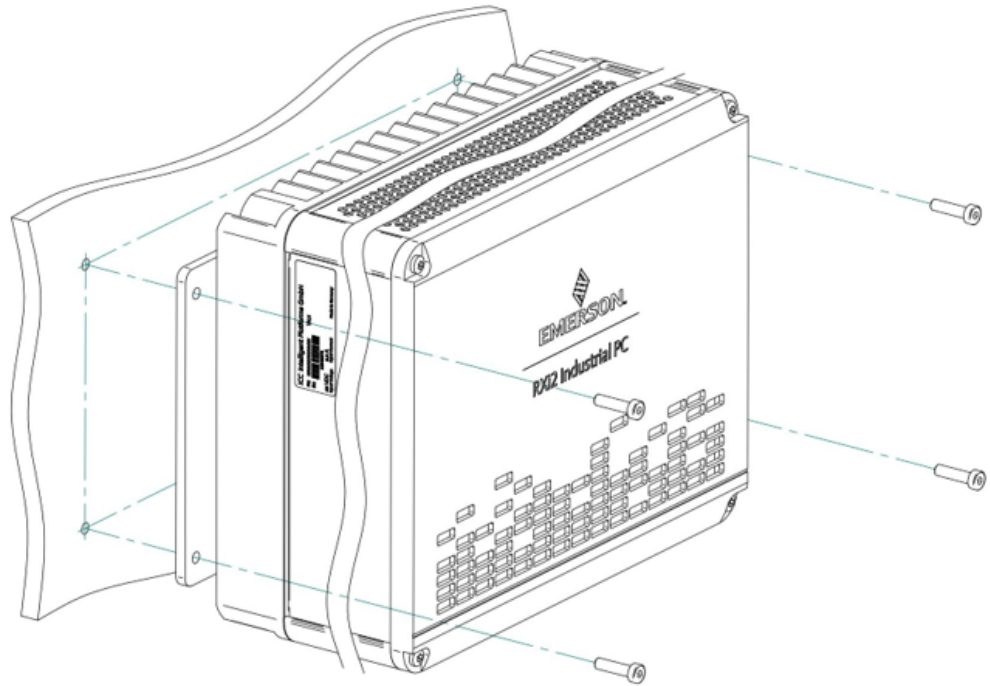

## 3.2 Wall Mounting Through Wall

To mount the IPC with screws from the wall side, drill holes in the wall to match the holes on the IPC. The holes should be 6.4-6.6 mm (0.25 in) for snug to medium fit and 7.0 mm (0.28 in) for a loose fit. Refer to the following figure for the positions for the holes. The thread in the enclosure is a M6 with a usable thread length of 15 mm (0.60 in). Select a screw length with a minimum of 10 mm (0.4 in) usable thread and torque to 3.5 Nm (30.98 in lb).

**Figure 3-3 Flat Wall Mounting Through Wall**

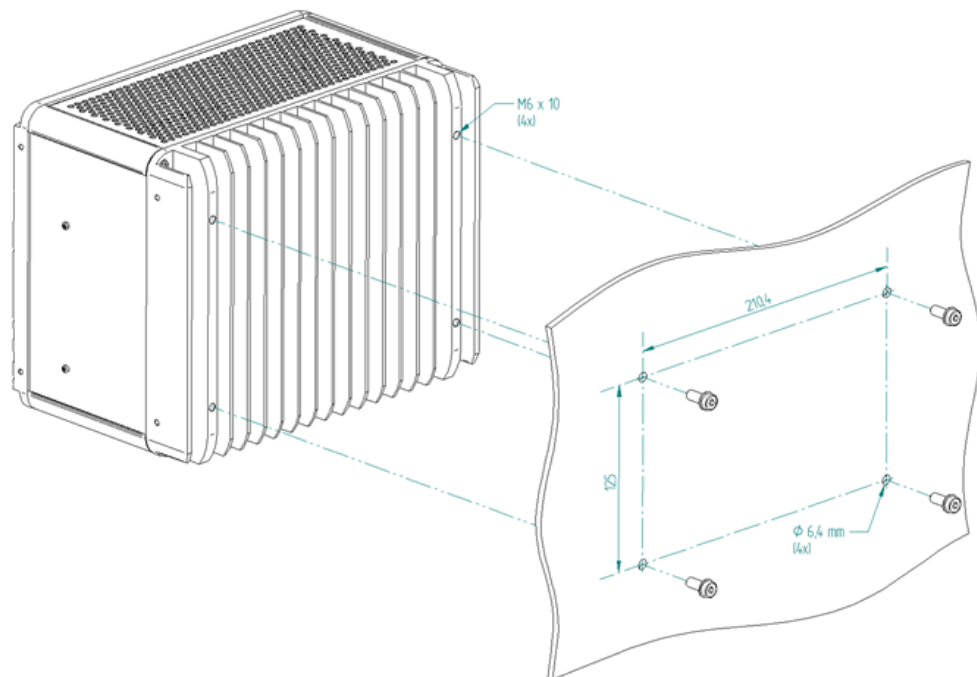

## Section 4: Installation and Startup

This chapter describes the installation and initial startup operations. Because the unit is available in several configurations, the description in this chapter is related to the standard configuration.

### **⚠ WARNING**

Before installing or removing any component, make sure that the system power and external supplies have been turned off.

### **⚠ CAUTION**

Static-sensitive Devices: Handle only at static-safe workstations.

### **⚠ CAUTION**

Drain static electricity before you install or remove any parts. Installing or removing modules without observing this precaution could result in damage to this and/or other components in your system.

## 4.1 General Installation Guidelines

Adhere to the following guidelines during installation:

- Observe all safety procedures to avoid damaging the system and protect operators and users.
- Before installing or removing any board, verify that the system power and external supplies have been turned off.
- Verify that the jumpers (if any) are correctly configured for your application.
- Make sure the RXi2-EP IPC is properly mounted.
- Connect all I/O cables.
- Do not restore power until all components are fitted correctly into the system and all connections have been made properly.



## 4.2 Required Materials

The following items are required to start the RXi2-EP IPC in a standard configuration:

- Power supply
- Keyboard and mouse
- Video monitor

### 4.2.1 Power Supply

#### **WARNING**

Verify that the power supply is turned off while installing boards or modules into the RXi2-EP IPC.

Adhere to the following guidelines:

- Verify that the power supply is capable of meeting the total power requirements of the RXi2-EP IPC. (Refer to Section 7: Specifications.)
- Verify you do not have the power supply turned ON while opening the enclosure to install add-on boards and modules into the RXi2-EP IPC (such as the PCIe boards or internal SATA drives).

### 4.2.2 Keyboard

A compatible USB keyboard for initial system operation of the RXi2-EP IPC is required. Depending on your application, this may be a standard keyboard, or one that uses membrane switches for harsh environments.

### 4.2.3 Video Monitor

Any video monitor with native DisplayPort (or a suitable adaptor for the DisplayPort) can be used for initial setup.

## 4.3 Minimum System Requirements

The RXi2-EP IPC has been thoroughly tested and is nearly ready for usage in the target system. To verify operation for the first time, Emerson recommends that you only configure a minimal system. It is not necessary to have disk drives, a flash disk, or other accessories connected to perform the Power-On Self-Test (POST).

## 4.4 Power-On Self-Test (POST)

Each time the computer boots up it must pass the POST. If the computer does not pass any of the test items, the unit will fail the POST.

Test items are as follows:

- CPU must exit the reset status mode and thereafter be able to execute instructions
- SPI Flash ROM and Non-Volatile Random Access Memory (NOVRAM) is readable
- Checksum is valid (readable)
- CMOS is readable (CMOS checksum is valid)
- CPU is able to read all forms of memory, such as the memory controller, memory bus, and memory module
- First 64 KB of memory is operational and has the capability to Read/Write, and contains the POST code
- I/O bus / controller is accessible
- I/O bus is able to Read/Write from the video subsystem and be able to read all video RAM

## 4.5 Installation Procedures

### 4.5.1 PCIe Board Installation

Install a PCIe board into the RXi2-EP IPC using the following procedure.

#### To install the PCIe board

##### **⚠ WARNING**

Verify that the power supply is turned off while installing boards or modules into the RXi2-EP IPC.

1. Remove the top cover by removing the four corner screws (Tx20).

**Figure 4-1 RXi2-EP Top Cover**



2. Remove the four PCIe support bracket screws (Tx10).

**Figure 4-2 PCIe Support Bracket Screws**



3. Remove the PCIe support bracket.

**Figure 4-3 Removed PCIe Support Bracket and Screws**



4. Remove the PCIe slot cover.

**Figure 4-4 Removed PCIe Slot Cover**



5. Insert the PCIe board bracket into the slot.

**Figure 4-5 PCIe Board Bracket Inserted into Slot**





6. Insert the PCIe board bracket into the PCIe connector at the riser board. Ensure that the board fits properly into the connector and is well connected.

---

**Figure 4-6 PCIe Board Bracket Inserted into PCIe Connector**



7. Reattach the PCIe support bracket.

---

**Figure 4-7 Reattached PCIe Support Bracket**



8. Reattach the four PCIe support bracket screws (Tx10 [0.6 Nm/5.3 in lb]).

---

**Figure 4-8 Reattached PCIe Bracket Screws**



9. Adjust the card holder.

---

**Figure 4-9 Card Holder Adjustment**



10. Reattach the top cover by reinserting the four corner screws (Tx20 [1 Nm/8.9 in lb]).

---

**Figure 4-10 Reattached Top Cover**



---

## 4.5.2 Mini PCIe Add-on Board Installation

---

### Important

The information described in this section applies to service technician only.

---

The Mini PCIe (mPCIe) board is connected to the RXi2-EP IPC by inserting the board into either a full size slot or a half size slot, depending on the size of the mPCIe board you are inserting.

### **⚠ WARNING**

Verify that the power supply is turned off while installing boards or modules into the RXi2-EP IPC.

---



1. Adjust the mPCIe bracket position to match the mPCIe board being inserted (Tx8 [0.6 Nm/5.3 in lb]).


---

**Figure 4-11 Short Position for mPCIe Bracket**



---

**Figure 4-12 Long Position for mPCIe Bracket**

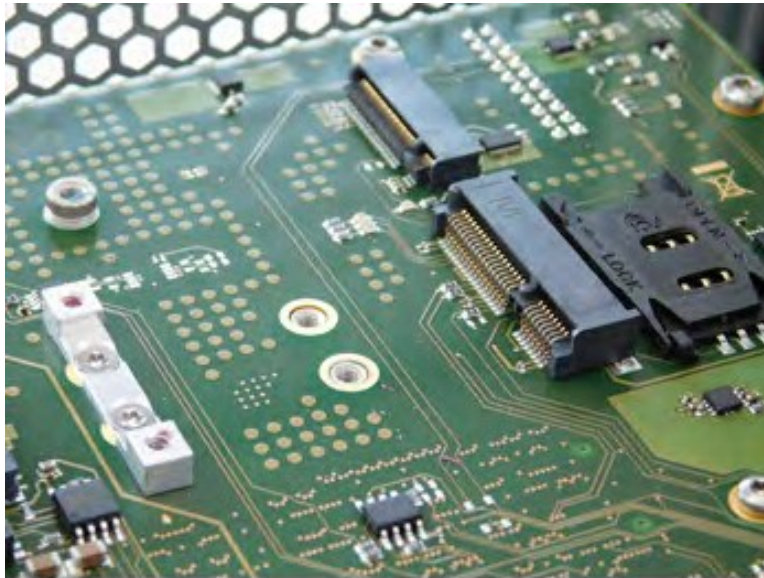

2. Insert the mPCIe board into the connector slot.

---

**Figure 4-13 mPCIe Board Inserted**



3. Mount the mPCIe board into the connector slot using standard screws (Tx8 [0.6 Nm/5.3 in lb]) screw: ISO14583 M2.5 x 6 or M2.5 x 5.

---

**Figure 4-14 mPCIe Board Mounted to RXi2-EP IPC**



## 4.5.3 SIM Card Interface Installation

### Important

when installing plug-in cards with wireless transmission capabilities, such as a cellular modem or WiFi adapters, the user is responsible for updating CE, FCC, and any other required certifications of the final unit.

### ⚠ WARNING

Verify that the power supply is turned off while installing boards or modules into the RXi2-EP IPC.

1. Open SIM card holder by moving the upper part in the OPEN → direction (as shown on the part).

**Figure 4-15 SIM Interface Connected to mPCIe - Unlocked but Closed**



2. Open the SIM card holder.

**Figure 4-16 SIM Card Holder Open**





3. Insert the SIM card.

---

**Figure 4-17 Inserted SIM card**



4. Lock the SIM card into position by moving the upper part in the LOCK ← direction (as shown on the part).

---

**Figure 4-18 SIM Card Holder Closed and Locked**



## 4.5.4 M.2 A-Key Add-on Board Installation

---

### Important

The information described in this section applies to service technician only.

---


The M.2 board is connected to the RXi2-EP IPC by inserting the board with a form factor of 2230.

### **⚠ WARNING**

Verify that the power supply is turned off while installing boards or modules into the RXi2-EP IPC.

- 
1. Insert the M.2 A-Key board into the connector slot.
- 

**Figure 4-19 RXi2-EP IPC Connector Slot**

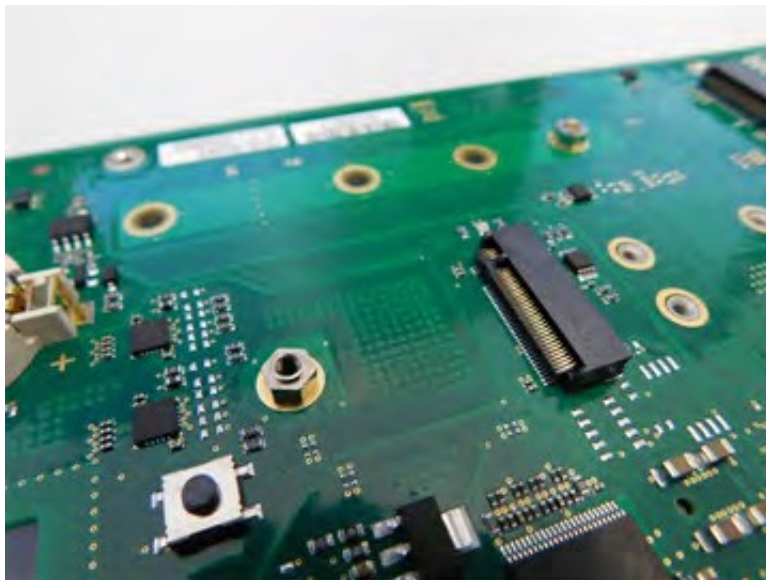

**Figure 4-20 M.2 A-Key Insertion into Connector Slot**



2. Mount the M.2 A-Key board into the connector slot using standard screws (Tx8 [0.45 Nm/5 in lb]) screw: ISO14583 M2.5 x 6 or M2.5 x 5.

---

**Figure 4-21 M.2 A-Key Mounted to RXi2-EP IPC**



## 4.5.5 M.2 M-Key Add-on Board Installation

---

### Important

The information described in this section applies to service technician only.

---


The M.2 board is connected to the RXi2-EP IPC by inserting the board with a with form factor of 2242, 2260, 2280 or 22110.

### **⚠ WARNING**

Verify that the power supply is turned off while installing boards or modules into the RXi2-EP IPC.

- 
1. Insert the M.2 M-Key board into the connector slot.
- 

**Figure 4-22 RXi2-EP IPC Connector Slot**

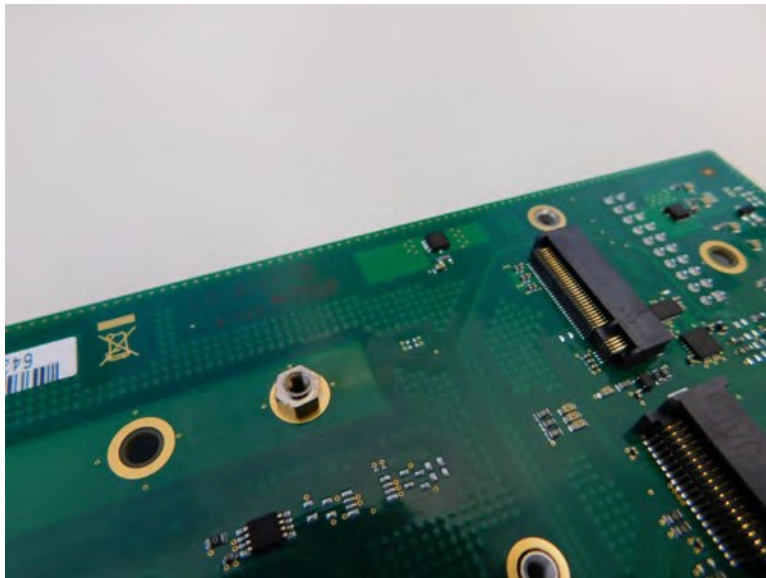

**Figure 4-23 M.2 M-Key Insertion into Connector Slot**





2. Mount the M.2 M-Key board into the connector slot using standard screws (Tx8 [0.45 Nm/5 in lb]) screw: ISO14583 M2.5 x 6 or M2.5 x 5.

---

**Figure 4-24 M.2 M-Key Mounted to RXi2-EP IPC**



## 4.6 Initial Startup

A few seconds after powering up, the RXi2-EP IPC system BIOS banner displays on the screen. If you do not see any error messages up to this point, the RXi2-EP IPC is running properly and ready to be configured for your application.

## 4.7 UEFI Firmware Setup

**To enter setup during the initial startup sequence:** press the **[Delete]** or **[F2]** key during the startup sequence. Adhere to the applicable on-screen messages when prompted.

**Note:** If the RXi2-EP IPC does not perform as described, some damage may have occurred during shipment or the board is not installed or configured properly. Contact Emerson for technical support. (Refer to the section [Contact Information](#).)



## 4.8 RTC Battery Replacement

### ⚠ WARNING

There is danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type to Murata CR2032W. Dispose used batteries according to Emerson provided instructions and applicable local regulations.

### ⚠ CAUTION


Static-sensitive Devices: Handle only at static-safe workstations.

### Important

The information described in this section applies to service technician only.

1. Remove power from the RXi2-EP IPC.
2. Loosen the four captive screws on the RXi2-EP IPC's top cover and remove it.

**Figure 4-25 RTC Battery (Removed Top Cover)**

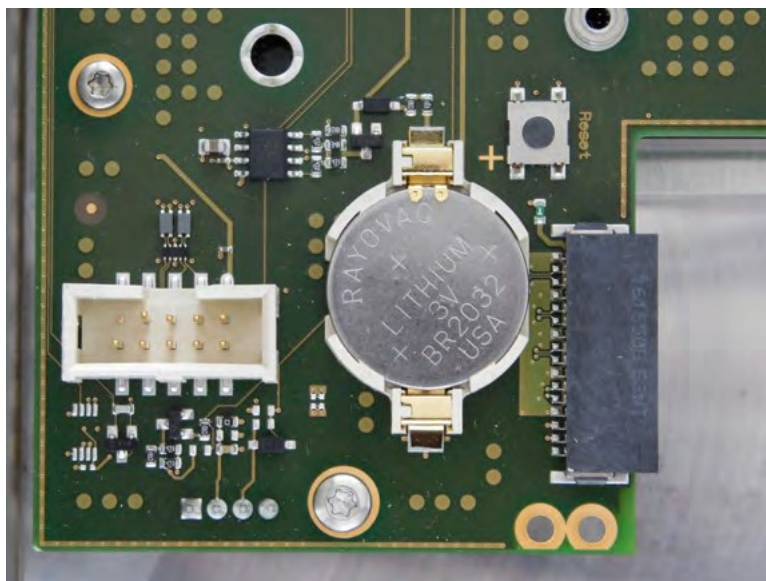

3. Remove the RTC battery from the retaining clip.
4. Install a new RTC battery in the retaining clip with the positive (+) side up.

### ⚠ WARNING


- Do not use a different battery type other than the same type as removed or equivalent type to Murata CR2032W as this may present a risk of fire or explosion!
- The battery may explode if mistreated. Do not recharge, disassemble, heat above 100° C (212 °F), or incinerate!

5. Reattach the top cover on the IPC and tighten the four screws to secure it.

## Section 5: Hardware Interface


This chapter describes the hardware interface used in the RXi2-EP IPC. The following diagram provides an overview of the way the hardware interface is used.

Figure 5-1 RXi2-EP IPC Hardware Interface Overview

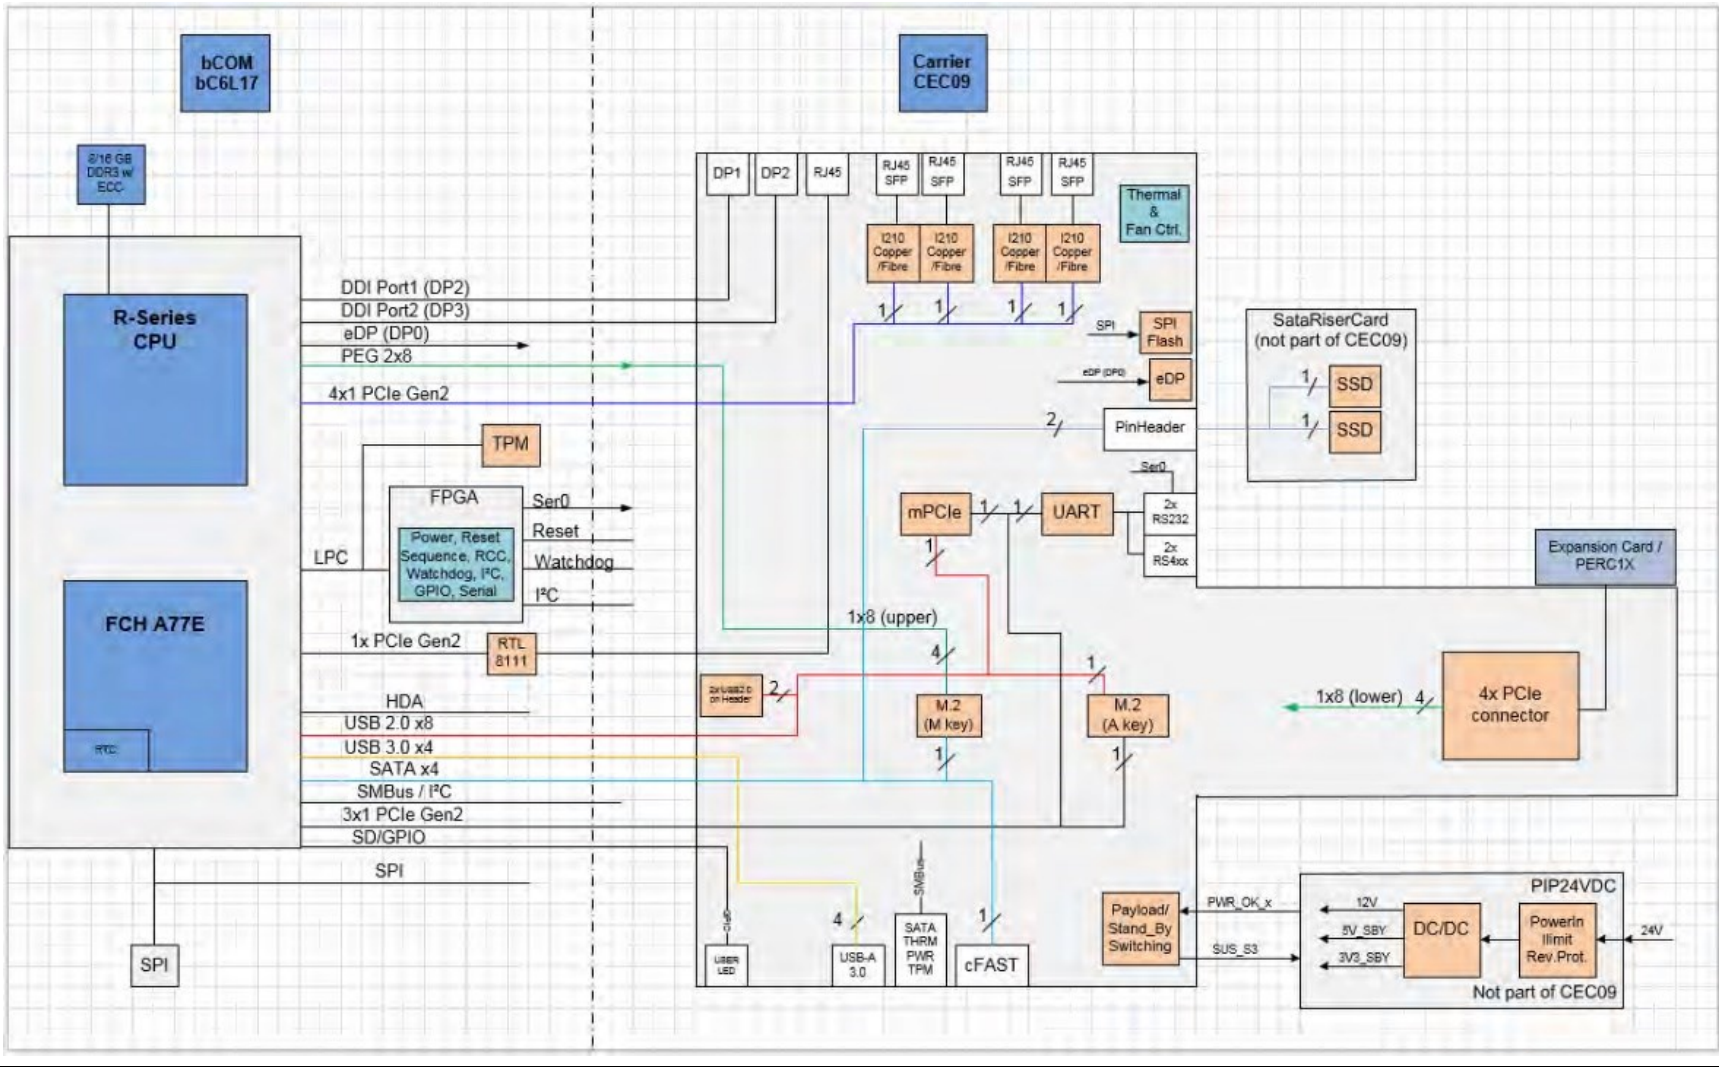

# 5.1 Interface

**Figure 5-2 RXi2-EP IPC Hardware Interface Overview (2-slot Option)**

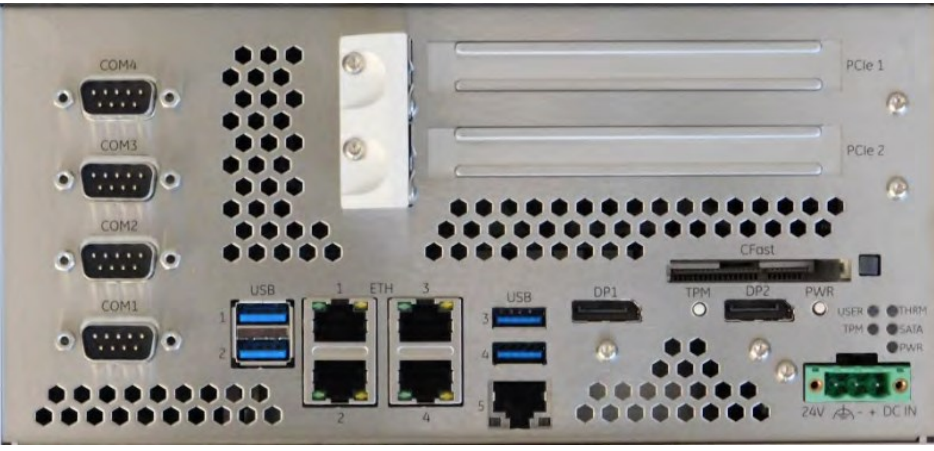


## 5.1.1 Status LEDs

The RXi2-EP IPC contains a set of status LEDs to indicate various functions. The CEC09 provides LEDs on the front panel, in a location near the power connector and power button.

**Table 5-1 Status LEDs**

LED Name	Color	LED Status Indication
PWR (Power)	Red	Standby power available, but no power good signal active (error condition)
	Yellow	Standby power valid (S3, S4, S5)
	Green	All power available and valid (S0)
SATA	Green	SATA access in progress (SATA, CFAST, M.2)
THRM (Port Expander: P0: Green; P1: Red)	Green	Thermal OK
	Yellow	THot reached (available also in S5 after Shutdown)
	Red	TCrit reached (available also in S5 after Shutdown)
USER (GPO0)	Green	Switchable from User
TPM (Port Expander: P2: Green and Red)	Yellow	Flashes when TPM button is pressed for a defined amount of time


**Figure 5-3 Status LEDs**

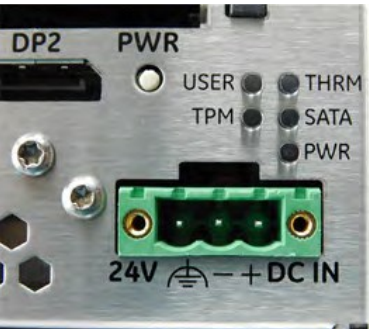

## 5.1.2 Power Button

The Power button powers on the RXi2-EP IPC. It is located on the front panel. A small tool may be needed to use the button.

**Figure 5-4 Power Button**

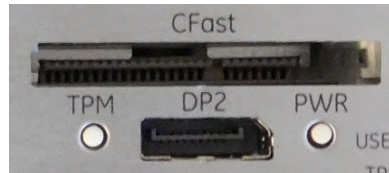

Pressing (short push) the power button triggers the operating system to shut down (Power State S5). If the operating system does not immediately shut down, press and hold the Power button for more than 5 seconds to force the RXi2-EP IPC to shut down immediately without operating system support.

State S5 (Soft-off mode) will switch off the CPU core power and reset the RXi2-EP IPC. The state S5 is indicated with an Amber Power LED. At this state, it is possible to reactivate the RXi2-EP IPC by pressing (short push) the Power button. This action switches on the CPU core voltage and the boards restart.

## 5.1.3 TPM Button

Pressing the Trusted Platform Module (TPM) button for a defined amount of time activates TPM maintenance mode.

**Note:** The TPM button is not currently supported. This feature will be implemented at a later time. After implementation, support will depend on the selected configuration.


## 5.1.4 Ethernet Ports (Eth1, Eth2, Eth3, Eth4, Eth5)

Five Ethernet interface ports are available on the RXi2-EP IPC. They are located on the front panel. Ethernet interface requires the use of a CAT 3 cable or higher for proper operation with 10baseT and a CAT 5 cable of higher for proper operation with 100/1000BaseT.

**Figure 5-5 Ethernet Interface Ports (1-slot Option)**



**Figure 5-6 RJ-45 Pinout**

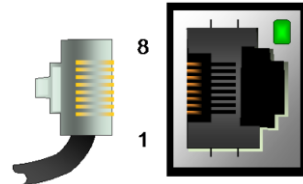

**Table 5-2 Ethernet Interface**

10/100BaseT Name	1000BaseT Name	Pin
TxD+	LP_DA+	1
TxD-	LP_DA-	2
RxD+	LP_DB+	3
NC	LP_DC+	4
NC	LP_DC-	5
RxD-	LP_DB-	6
NC	LP_DD+	7
NC	LP_DD-	8



### 5.1.5 Ethernet LEDs

Two LEDs (green and yellow) are integrated in each of the RJ-45 connectors. These LEDs indicate Ethernet interface link status and activity.


**Table 5-3    ETH1 to ETH4 LEDs**

Pin	LED Color	LED Status Indication
#GBEx_LINK	Green	Solid = 1000 Mbit Off = 10/100 Mbit
#GBEx_ACT	Yellow	Solid = No activity, but 10/100/1000 Mbit link Blinking = Activity ongoing

**Table 5-4    ETH5 LEDs**

Pin	LED on RJ-45 Jack	LED Status Indication
#GBE5_LINK	Yellow	Solid = Any LINK
#GBE5_ACT		Blinking = ACTIVITY
#GBE5_LINK100	Orange	LINK100
#GBE5_LINK1000	Green	LINK1000


**Figure 5-7    RXi2-EP IPC GBE**

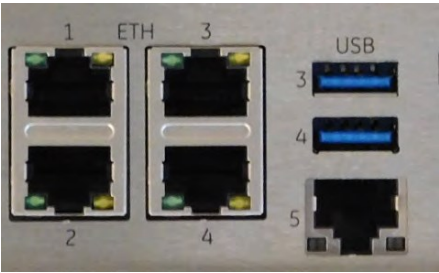

## 5.1.6 DisplayPort

A DisplayPort (DP1 and DP2) interface provides signals for connecting either a suitable monitor or an adaptor to several other display standards.

**Figure 5-8 DisplayPort Interface Ports (2-slot Option)**

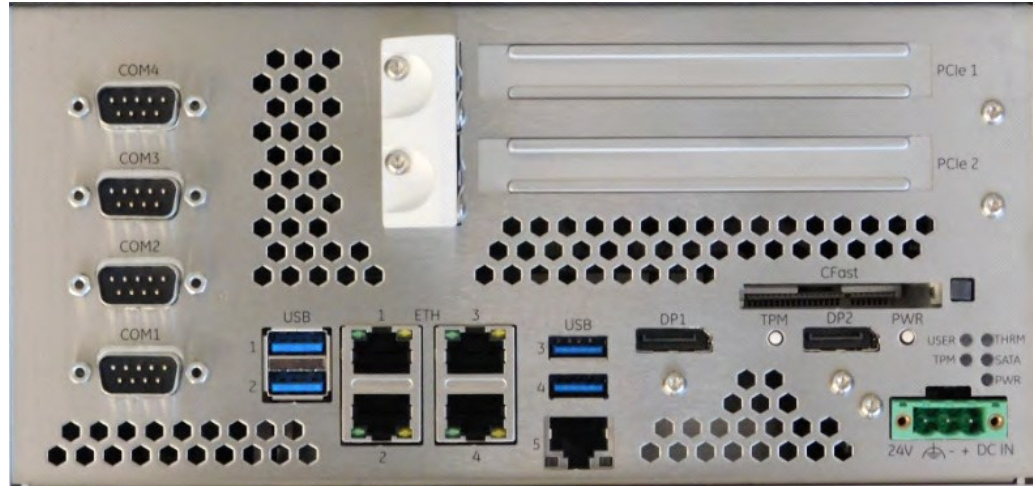

**Table 5-5 DisplayPort Interface Signals**


Signal Name	Pin
TxD0+/-	1/3
TxD1+/-	4/6
TxD2+/-	7/9
TxD3+/-	10/12
AUXSEL	13
NC	14
CLK/AUX+	15
DAT/AUX-	17
HTPLG	1/3
DP_VCC DP_VCC is fused with 2 A fuse, but for normal operation do not exceed 1 A at this pin.	20
GND	2, 5, 8, 11, 16, 19



## 5.1.7 USB 3.0 Connectors

Four USB channels are available at standard USB Type A connectors. Each pair of them has a 2A fuse, but normal operation does not exceed 0.9 A per connector.

**Figure 5-9 USB 3.0 Connectors**

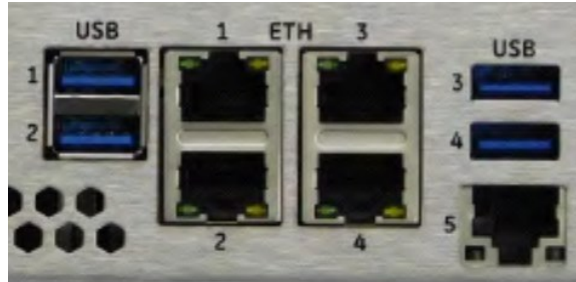

**Table 5-6 USB Port 1-2 Signals**

Signal Name	Pin
FUSE_VCC <i>FUSE_VCC is fused with 2 A fuse, but normal operation does not exceed 0.9 A current per connector.</i>	1
USB-	2
USB+	3
GND	4
SSRX-	5
SSRX+	6
GND	7
SSTX-	8
SSTX+	9


**Table 5-7 USB Port 3-4 Signals**

Signal Name	Pin
FUSE_VCC <i>FUSE_VCC is fused with 2 A fuse, but normal operation doe not exceed 0.9 A current per connector.</i>	1
USB-	2
USB+	3
GND	4
SSRX-	5
SSRX+	6
GND	7
SSTX-	8
SSTX+	9

## 5.1.8 Power Connectors

The power inlet into the RXi2-EP IPC is a Phoenix contact Base strip - MSTB 2.5/ 3-GF - 1776702 connector. The corresponding plug is a type FKCN 2.5/ 3-STF - 1732975 from a Phoenix contact.

**Figure 5-10 Power Connectors**

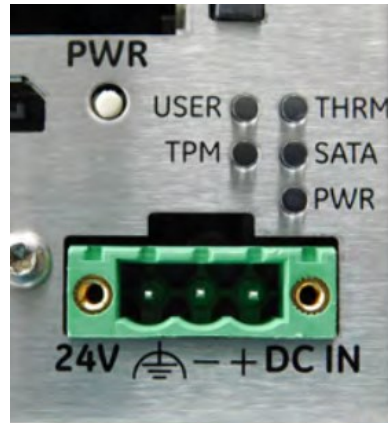

**Table 5-8 Power Connectors**

Signal Name	Pin (Left to Right)
Frame GND	1
Power -	2
Power +	3

The power input is filtered internally on the RXi2-EP IPC. Connect +24VDC to pin 3 (+), DC Common to pin 2 (-), and earth ground to pin 1 ( $\equiv$ ).

### **⚠ CAUTION**

- Do not connect a -24VDC supply where the +24VDC is grounded as this will cause a short when connecting external devices and will damage the equipment.
- The power input is secured with one 10 A blow fuse. If the input power exceeds the limits, the fuse will be blown to protect all circuitry within the RXi2-EP IPC. Contact Emerson for a suitable replacement.


## 5.1.9 Internal SATA Connector

One M.2 M-Key (PCIe 4x and SATA) with sizes 2242, 2260, 2280 and 22110 is located inside the RXi2-EP IPC

## 5.1.10 CFast Connector

Located on the front of the RXi2-EP IPC is a CFast Type 1 flash connector. CFast is a variant of a CompactFlash that supports a higher maximum transfer rate than current CompactFlash cards. Standard CFast cards can be used for storage of data or the operating system. The device is connected to a standard SATA port of the COM Express module and is hot plug capable with standard OS.

**Figure 5-11 CFast Connector**

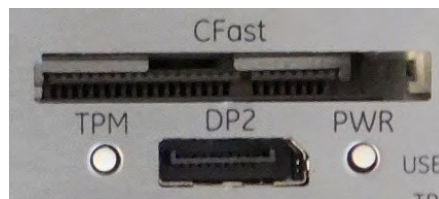

## 5.1.11 Serial (COM) Ports

The 0-slot and 1-slot variant of the RXi2-EP IPC is provided with two serial ports. The two serial ports are RS-232 on 9-pin and D-connectors for local terminals or peripheral communication.

The 2-slot and 4-slot variant is equipped with four serial ports. Serial ports 1 and 2 are RS-232; serial ports 3 and 4 are RS-422/RS-485.

**Figure 5-12 Serial Ports – 0-Slot Variant**




**Figure 5-13 Serial Ports – 4-Slot Variant**



**Table 5-9 Serial Ports**

Signal Name	Pin
<b>RS-232 Pin</b>	
DCD	1
RxD	2
TxD	3
DTR	4
GND	5
DSR	6
RTS	7
CTS	8
RI	9
<b>RS-422 / RS-485 Pin</b>	
Rx+	1
Rx-	2
Tx-	3
Tx+	4
GND	5

**Figure 5-14 Pin Assignment**

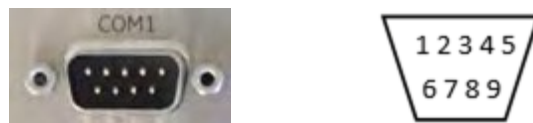

For RS-422 and RS-485-4 wire modes, connect the corresponding RX+/- with the TX+/- of the counterpart and vice versa. For RS-485-2 wire mode connect RX+ and TX+ together with the + line of the cable and the RX- and the TX- together with the - line of the cable.

The difference of the various RS-4xx modes is the Tx/Rx control. RS-422 has Tx and Rx always active. RS-485 four-wire enables Tx only when there is something to transmit, Rx is always active. RS-485 two-wire enables Tx and disables Rx when transmitting and disables Tx and enables Rx when not transmitting. The various modes can be selected within the device driver of the operating system.

## 5.1.12 SATA 2.5 inch Drive Tray Replacement

Two additional 2.5 inch storage devices are available for use with the SATA riser board or the RAID option. The 2.5 inch hard disk trays (located in the front of the unit) can be used as SSD or rotating devices.

---

### Important

Before physically ejecting the device, make sure you dismount or eject the drive from the OS.

---

### To replace the 2.5 inch SATA drive

**Note:** Due to the SATA hot-plug capability, there is no need to power down the unit for replacement. Just make sure you dismount or eject the drive from the OS before physically removing the device.

1. Locate the position of the hard disk device you want to remove.

---

**Figure 5-15 2.5 inch SATA Drive Device Tray Location**



2. Insert your finger under the handle and carefully remove the storage device tray from the mounted position.

---

**Figure 5-16 Removing Storage Device Tray from Mounted Position**



3. Pull down until the device tray is as fully open as possible.

---

**Figure 5-17 Storage Device Tray Fully Open Position**




4. Remove the hard disk tray completely from the unit.

**Figure 5-18 Removal of Storage Device Tray**



5. Unscrew the four mounting screws and remove the hard drive from the tray.

**Figure 5-19 Storage Device Tray Screws**

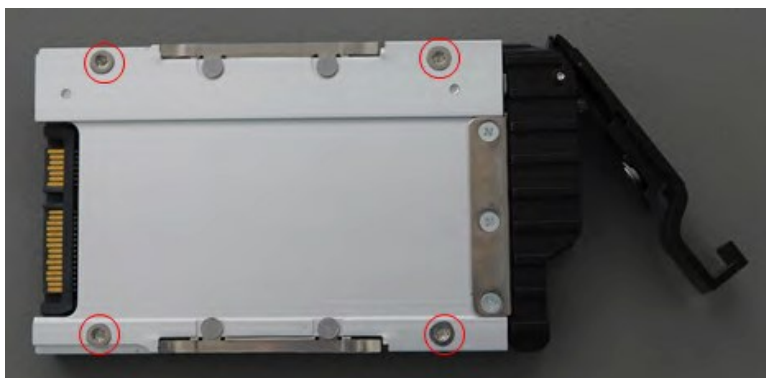



6. Insert the replacement hard drive and screw in the four mounting screws to mount it.

---


**Figure 5-20 Insert the replacement hard drive**



7. Insert the storage device tray ~25.4 mm (1 in) (maximum) into the slot, move it to the right side until the nose is between the guidance mark of the tray, then push it carefully into the slot.

---

**Figure 5-21 Insert the storage device tray**

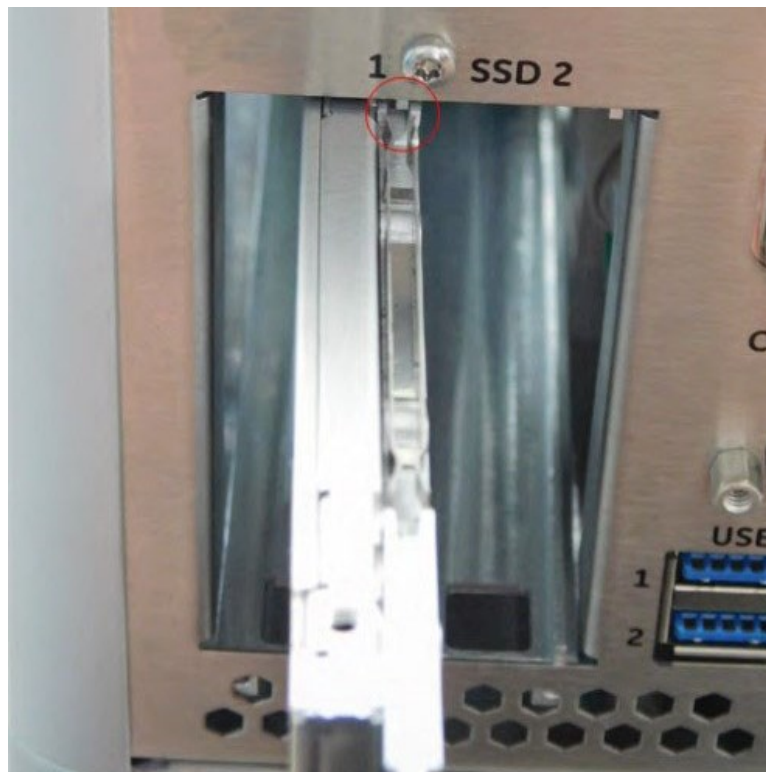



8. Insert the tray until it is fully and firmly seated.

**Figure 5-22 Insert the tray**



**Note:** You can lock each SSD tray using the provided key.

## 5.2 Additional Devices

### 5.2.1 Temperature Sensor

There are two thermal zones on the CEC09 Carrier board that can be observed with an EMC2113 device. This device contains internal temperature sensors and can connect three external temperature sensors. All external sensors are grouped as one thermal group and placed so that the hottest point can be observed no matter the mounting style.

The EMC2113 device measures the temperature of several higher rated devices (I210IT/IS; RS-232 Transceiver; 4x PCIe2UART) with the help of a common heatsink.

A dual THRM LED located on the front panel indicates the current thermal.

**Table 5-10 THRM LED Indication**

LED Color	LED Status Indication
Green	Everything OK
Yellow	T <sub>Hot</sub> reached (wired to U3080/SMBus Port Expander via pin 0)
Red	T <sub>Crit</sub> reached (wired to U3080/SMBus Port Expander via pin 1)

### 5.2.2 NVSRAM

The RXi2-EP IPC is capable of Non-Volatile Random Access Memory (NVSRAM) as a mPCIe board add-in option that is automatically backed up when the RXi2-EP IPC is switched off or loses power. NVSRAM does not use or require a battery. Contact Emerson for assistance in accessing NVSRAM.

# Section 6: Hardware and Firmware Programmable Devices

This chapter describes the hardware and firmware programmable devices of the CEC09 carrier board and the bCOM6L17 module.

## 6.1 SMBUS Devices

**Table 6-1 SMBus Devices**

Device	Address	Function
Clock Buffer 8x	1101 110xb [DCh]	PCIe clock
Clock Buffer 4x	1101 110xb [DCh]	PCIe clock
PCA9548A	1110 001xb [E2h]	SMBus switch (to avoid address conflicts from add-in boards)
Fan Controller	0101 110xb [5Ch]	Fan controller includes thermal sensors
Port Expander	0100 000xb [40h]	SMBus port expander

**Table 6-2 I2C Bus Device**

Device	Address	Function
24C512	1010 000x [A0h]	Factory EEPROM of bCOM6L17
24C64	1010 111x [AEh]	Factory EEPROM of CEC09

## 6.2 Ethernet

The Ethernet controllers provide internal EEPROMs, which contain the MAC address, as well as their configuration.

## 6.3 PCIe Ports

The PCIe ports are provided by the COMe module. The PCIe allocation is provided in the following table.

**Table 6-3 PCI Routing**

Function	Connected to	Vendor	Device (GPU Dependent)	Bus/Dev/Func
<b>bCOM6L17</b>				
Host Bridge	Internal	1022	1422	0/00/0
IOMMU	—	1022	1423	0/0/2
VGA compatible controller	—	1022	131B	0/1/0
Audio device	—	1022	1308	0/1/1
Host Bridge	—	1022	1424	0/2/0
PCI Bridge	Riser Slot	1022	1425	0/2/1
Host Bridge	—	1022	1424	0/3/0
PCI Bridge	I210 #1	1022	1426	0/3/1
PCI Bridge	I210 #2	1022	1426	0/3/2
PCI Bridge	I210 #3	1022	1426	0/3/3
PCI Bridge	I210 #4	1022	1426	0/3/4
Host Bridge	—	1022	1424	0/4/0
USB Controller (XHCI)	—	1022	7814	0/10/0
USB Controller (XHCI)	—	1022	7814	0/10/1
SATA Controller	—	1022	7801	0/11/1
USB Controller (OHCI)	—	1022	7807	0/12/0
USB Controller (EHCI)	—	1022	7808	0/12/2
SMBus Controller	—	1022	780B	0/14/0
IDE Controller	—	1022	780C	0/14/1
ISA Bridge	—	1022	780E	0/14/3
PCI Bridge	—	1022	780F	0/14/4
PCI Bridge	M.2 A-Key Slot	1022	43A0	0/15/0
PCI Bridge	Pericom UART	1022	43A1	0/15/1
PCI Bridge	Mini PCIe Slot	1022	43A2	0/15/2
PCI Bridge	Realtek	1022	43A3	0/15/3
Processor Function 0	—	1022	141A	0/18/0
Processor Function 1	—	1022	141B	0/18/1
Processor Function 2	—	1022	141C	0/18/2
Processor Function 3	—	1022	141D	0/18/3
Processor Function 4	—	1022	141E	0/18/4
Processor Function 5	—	1022	141F	0/18/5

Function	Connected to	Vendor	Device (GPU Dependent)	Bus/Dev/Func
<b>CEC09</b>				
Riser slot	—	—	—	1/0/0
Ethernet #1	Front	8086	1531	5/0/0
Ethernet #2	Front	8086	1531	6/0/0
Ethernet #3	Front	8086	1531	7/0/0
Ethernet #4	Front	8086	1531	8/0/0
Realtek Ethernet	Front	10EC	8168	9/0/0
M.2 A-Key slot	—	—	—	A/0/0
PCIe Serial	Serial	12D8	7954	B/0/0
Mini PCIe slot	—	—	—	C/0/0
<b>PERC10 Riser Board</b>				
PCIe to PCIe bridge	PCI Slots	12D8	2312	1/0/0
PCIe Slot #1	—	—	—	3/0/0
PCIe Slot #2	—	—	—	4/0/0
<b>PERC11 Riser Board</b>				
PCIe to PCIe bridge	PCI Slots	12D8	2612	1/0/0
PCIe Slot #1	—	—	—	3/0/0
PCIe Slot #2	—	—	—	4/0/0
PCIe Slot #3	—	—	—	5/0/0
PCIe Slot #4	—	—	—	6/0/0

# Section 7: Specifications

This chapter provides specifications and useful information for the RXi2-EP IPC.

## 7.1 Power Consumption

### **⚠ WARNING**

The RXi2-EP industrial PC power supply must meet the requirements for SELV (safety extra-low voltage)/LPS (limited power source) or ES1/PS2.

L'alimentation pour PC industriel RXi2-EP doit répondre aux exigences SELV (très basse tension de sécurité)/LPS (source de puissance limitée) ou ES1/PS2.

**Table 7-1 Input Power**

Nominal Input	Input Range	Max. Input Ripple
24 V	18-30 V	± 0.2 V

The current consumption can vary, depending on the CPU, load, and input voltage, as follows:

- 18 V dc → 4.34 A (in BurnIn at 25°C (77 °F))
- 24 V dc → 3.58 A (in BurnIn at 25°C (77 °F))
- 30 V dc → 2.61 A (in BurnIn at 25°C (77 °F))

**Table 7-2 Power Entry**

Operation	CPU Temperature	Power <sup>1)</sup>	
		R2E2N1C0A1T0A Dual Core, 8 GB RAM, 128 GB SSD	R2E2N1A0A1T0A Quad Core, 16 GB RAM, 128 GB SSD
UEFI Setup or shell	45°C (113 °F)	36 W	55 W
Windows 10 idle	45°C (113 °F)	17.3 W	28.8 W
Windows 10 Heavy Load Tool	45°C (113 °F)	31.1 W	58.1 W
<sup>1)</sup> Measured at shown CPU die temperature. All values are typical.			

**Note:** The consumption values include the USB keyboard and a SSD hard disk. For each linked Ethernet channel, add 0.5 W.

## 7.1.1 Power Budget for Add-on Devices

The CEC09 Carrier board supports a power budget for USB devices, SATA devices, and add-on boards up to a total of 25 W. For add-on boards on the riser board, any shared power between +12 V, 5 V and 3.3 V power consumption is possible up to 20 W maximum for all two/four boards together.

## 7.2 Environmental Specifications

### 7.2.1 Ambient Temperatures and Humidity

Ambient temperatures and humidity values for the RXi2-EP IPC are provided in the following table.

**Table 7-3 Temperature Specifications**

Item	Level A
<b>Temperature</b>	
Storage	-40 to 85°C (-40 to 185 °F)
Operating	-40 to 60°C (-40 to 140 °F)
<b>Humidity</b>	
Operating	5 to 95% rH, non-condensing, at 40°C (104 °F)
Storage	

### 7.2.2 Shock and Vibration without 2.5 inch Mass Storage

The RXi2-UP IPC without 2.5 inch mass storage options is designed to meet the shock and vibration values listed in the following table.

**Table 7-4 Temperature Specifications**

Item	Vita 47 V1
<b>Vibration</b>	
Spectrum	5 to 100 Hz
Acceleration	2 g RMS
<b>Shock</b>	
Half sine or sawtooth	20 g
Duration	11 ms

### 7.2.3 Shock and Vibration with 2.5 inch Mass Storage

Due to additional interchangeable non-rugged mechanical parts, Emerson does not recommend exposing the system to shock and vibration.

## 7.2.4 Altitude

Altitude, air pressure, and ambient temperature influence the thermal operation of the components described in this document. They have been developed and tested at ~500 m (1,640 ft) above sea level at a typical ambient temperature of 20°C (68 °F). Because of only marginal variations within a limited range of altitudes, this product operates as specified within altitudes from sea level to 2,000 m (6,560 ft), depending on the level. This is with reference to temperature ranges of air-cooled versions.

**Note:** Emerson can assist the user in planning operation outside this altitude range upon request.

Maximum altitude for the RXi2-EP IPC is specified in the following table.

**Table 7-5 Maximum Altitude**

Item	Level A
<b>Maximum Altitude</b>	
Operating	2 km (6,560 ft)
Storage	12 km (39,370 ft)

## 7.2.5 Regulations and Certification

**Table 7-6 Regulations and Certification**

Item	Specification
EMC	<p>EMC Directive 2014/30/EU</p> <p>EN 61000-6-4 Emission standard for industrial environments</p> <p>EN 61000-6-2 Immunity standard for industrial environments</p> <p>FCC Part 15 B</p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>CAN ICES-3 (A)/NMB-3(A)</p>
Product Safety	<p>LVD Directive 2014/35/EU</p> <p>IEC 62368-1 2<sup>nd</sup> Edition</p> <p>UL 62368-1 (UL file number E214940)</p>
UKCA	<p>Emerson Process Management Shared Service Ltd</p> <p>Meridan East, Meridan Business Park, Leicester LE19 1UX United Kingdom</p>

**Figure 7-1 RXi2-EP Data Nameplate**





## 7.2.6 Battery

The RXi2-EP IPC contains a CR2032 lithium coin battery. The maximum current used by the bCOM6L17 module is 6uA.

Depending on the operating hours and temperature, the estimated battery life is 2 to 10 years. Battery current is not used when the RXi2-EP IPC is supplied with 24 V.

## 7.3 Technical Specification

**Table 7-7 Technical Specification**

Item	Specification
Processor	AMD R-Series APU dual core 2.2 GHz to 3.0 GHz
	AMD R-Series APU quad core 2.7 GHz to 3.6 GHz
Memory	Up to 16 GB DDR3 at 1866 Mhz Soldered, with 16 GB ECC RAM
NVSRAM (as mPCIe Add-in Board)	512 KB, 1 MB or 2 MB NVSRAM Storage for process relevant data
SATA interface	M.2 M-Key SATA (form factor 2242, 2260, 2280, 22110) or optional internal 2.5" SATA hard disk drive (HDD)
Ethernet	5 Ethernet (10, 100, 1000 Mbit) ports
Wireless Communication	WLAN optional via internal mPCIe or M.2 A-Key
Video/graphics interface	2x DisplayPort
USB Interface	4x USB 3.0 Standard ports – External 2x USB 3.0 Standard ports – Internal
Serial Communications	RXi2-EP 0/1/2-slot: RS-232 or opto-coupled 422/485 RXi2-EP 4-slot: RS-232 and opto-coupled 422/485
Expansion	Internal mPCIe board slot, half and full length (for WLAN, LTE) Internal M.2 A-Key slot, form factor 2230 (WLAN) 0 (Slim version) 1, 2 or 4 full size PCIe Expansion slots
BIOS	UEFI AMI Aptio® 5
Dimensions	0-slot: 252 x 203 x 108.5 mm (9.92 x 8 x 4.24 in)
	1-slot: 252 x 203 x 135.5 mm (9.92 x 8 x 5.33 in)
	2-slot: 252 x 203 x 155.5 mm (9.92 x 8 x 6.13 in)
	4-slot: 252 x 203 x 195.5 mm (9.92 x 8 x 7.70 in)
Weight	0-slot: 3.9 Kg (8.60 lb)
	1-slot: 4.2 kg (9.26lbs)
	2-slot: 4.4 kg (9.70 lb)
	4-slot: 4.7 Kg (10.34 lb)
Enclosure	Aluminum and stainless steel

# Appendix.A: Open Source Software (OSS) List (V0.x)

In accordance with certain software license terms, Emerson provides the following software package installations. This code is provided on an as-is basis, and Emerson makes no representations or warranties for the use of this code independent of any Emerson provided software or services. Refer to the licenses and copyright notices files for each package for specific license terms that apply to each software bundle associated with this product release. For further details, refer to the RX2i-EP Open Source Software (OSS) Copyright & License Information (GFK-3045).

**Note:** These software package versions may change or be removed as needed for updates to this product.

**Table 7-8 Software license terms**

Software (by Component)	Company URL	Version	Copyright Notice
EDK	<a href="http://www.tianocore.org/">http://www.tianocore.org/</a>	BSD 2.0	Copyright © 2012, Intel Corporation
EDKII	<a href="http://www.tianocore.org/">http://www.tianocore.org/</a>	BSD 2.0	Copyright © 2012, Intel Corporation
Crypto Package Using WPA Supplicant	<a href="https://w1.fi/wpa_supplicant/">https://w1.fi/wpa_supplicant/</a>	BSD with WPA Supplicant	Copyright © 2003-2016, Jouni Malinen j@w1.fi and contributors
Data Processing Package (Base64 En-/Decoding)	<a href="https://tls.mbed.org/base64-source-code">https://tls.mbed.org/base64-source-code</a>	Apache 2.0	Copyright © 2006-2015, ARM Limited, All Rights Reserved SPDX-License-Identifier: Apache-2.0
FPGA I2C core	<a href="http://opencores.org/project,i2c">http://opencores.org/project,i2c</a>	BSD 2.0	Copyright © 2000 Richard Herveille richard@asics.ws

# Appendix.B: Acronyms and Abbreviations

ACPI	Advanced Configuration and Power Interface
APU	Accelerated Processing Unit
AMD	Advanced Micro Devices
BIOS	Basic Input Output System
COM	Computer-on-module
DDC	Display Data Control
DDI	Digital Display Interface
DP	DisplayPort
DRAM	Dynamic Random Access Memory
DVI	Digital Visual Interface
ECC	Error Correction Code
eDP	Embedded DisplayPort
EMI	Electromagnetic Interference
ESD	Electrostatic Discharge
FCH	Fusion Controller Hub
FPGA	Field Programmable Gate Array
GPI	General-purpose Input
GPIO	General-purpose I/O
GPO	General-purpose Output
HDA	High-Definition Audio
I <sup>2</sup> C	Inter Integrated Circuit
IRQ	Interrupt Request
LAN	Local Area Network
LPC	Low Pin-Count Interface
NC	No Connected
PCI	Peripheral Component Interface
PCIE	Peripheral Component Interface Express
PEG	PCI Express for Graphics
RMA	Return Material Authorization
RTC	Real Time Clock
SATA	Serial ATA
SMB	System Management Bus

SMI	System Management Interrupt
SPD	Serial Presence Detect
SPI	Serial Peripheral Interface
SSD	Solid State Drive
TDM	Time Division Multiplex
TDP	Thermal Design Power
TPM	Trusted Platform Module
TMDs	Transition Minimized Differential Signaling
UART	Universal Asynchronous Receiver Transmitter
UEFI	Universal Extensible Firmware Interface
USB	Universal Serial Bus
VGA	Video Graphics Adapter
WDT	Watchdog Timer

## Appendix.C: Glossary

<b>AC '97</b>	Audio CODEC (Coder-Decoder)
<b>ACPI</b>	Software standard to implement power saving modes in PC-AT systems
<b>Basic Module</b>	COM Express 125 x 95 mm (4.9 x 3.7 in) module form factor.
<b>Binary values (base 2)</b>	Represented as digits followed by 'b' (for example 01b).
<b>BIOS</b>	Firmware in PC-AT system that is used to initialize system components before handing control over to the operating system.
<b>BIT</b>	Built-in Test
<b>Carrier Board</b>	An application specific circuit board that accepts a COM Express module.
<b>CE</b>	Conformité Européenne (European conformity)
<b>CCTV</b>	Closed Circuit Television
<b>Courier font</b>	Text in Courier font indicates a command entry or output from a Emerson embedded PC product using the built-in character set.
<b>CTDP</b>	Configurable TDP (Thermal Design Power)
<b>CVBS</b>	Composite Video Baseband Signal
<b>CU</b>	Compute Unit
<b>DDC</b>	VESA (Video Electronics Standards Association) standard to allow identification of the capabilities of a VGA monitor.
<b>DIMM</b>	Dual In-line Memory Module
<b>DP</b>	VESA-defined digital video interface DisplayPort to transport audio and video in a transmission protocol.
<b>DVI</b>	Digital Display Working Group (DDWG) standard that defines a standard video interface supporting both digital and analog video signals. The digital signals use TMDS.
<b>EEPROM</b>	Electrically Erasable Programmable Read-Only Memory
<b>EMI/EMC</b>	Electromagnetic Immunity/Compatibility
<b>ETI</b>	Event Time Indicator
<b>EU</b>	European Union
<b>Extended Module</b>	COM Express 155 x 110 mm (6.1 x 4.3 in) module form factor.
<b>FCC</b>	Federal Communication Commission (USA)
<b>FR4</b>	A type of fiber-glass laminate commonly used for printed circuit boards.

<b>Gb</b>	Gigabit
<b>GbE</b>	Gigabit Ethernet
<b>GT</b>	Giga Transfers I/O
<b>HDCP</b>	High-bandwidth Digital Content Protection
<b>Hexadecimal values (base 16)</b>	Represented as digits followed by 'h' (for example: 0Ch).
<b>Hexadecimal values (base 16)</b>	Represented as digits preceded by 'H' (for example: H0C).
<b>Hexadecimal values (base 16)</b>	Represented as digits preceded by '\$' (for example: \$0C).
<b>I<sup>2</sup>C</b>	Two-wire (clock and data) signaling scheme allowing communication between integrated circuits, primarily used to read and load register values.
<b>IDE</b>	A parallel Integrated Device Electronics interface for hard disk drives (also known as PATA).
<b>Italics</b>	(Sometimes in blue color) emphasizes words in text or documentation, or chapter titles or web addresses if underlined.
<b>Legacy Device</b>	Relics from the PC-AT computer that are not in use in contemporary PC systems: primarily the ISA bus, UART-based serial ports, parallel printer ports, PS-2 keyboards and mice. Definitions vary as to what constitutes a legacy device. Some definitions include IDE as a legacy device.
<b>LPC</b>	A low speed pin-count interface used for peripheral circuits such as Super I/O controllers, which typically combine legacy-device support into a single IC.
<b>LS</b>	Least Significant
<b>LVDS</b>	Low Voltage Differential Signaling widely used as a physical interface for TFT flat panels. LVDS can be used for many high-speed signaling applications. In this document, it refers only to TFT flat-panel applications.
<b>MS</b>	Most Significant
<b>NTSC</b>	National Television Standards Committee video broadcast standard used in North America.
<b>PAL</b>	Phase Alternating Line video broadcast standard used in many European countries.
<b>POST</b>	Power-on Self Test
<b>PCIE</b>	Next-generation high-speed Serialized I/O bus
<b>PHY</b>	Ethernet controller physical layer device

<b>ROM</b>	Read Only Memory, a legacy term often the device referred to as a ROM can actually be written to, in a special mode. Such writable ROMs are sometimes called Flash ROMs. UEFI Firmware is stored in ROM or Flash ROM.
<b>RTC</b>	Battery backed circuit in PC-AT systems that keeps system time and date as well as certain system setup parameter.
<b>SATA</b>	Serial AT Attachment: serial-interface standard for hard disks.
<b>SBC</b>	Single Board Computer
<b>SB-TSI</b>	Side Band Temperature Sensor Interface
<b>SCI</b>	System Control Interrupt
<b>SPD</b>	Serial Presence Detect refers to serial EEPROM on DRAMs that has DRAM module configuration information.
<b>SPI</b>	Serial Peripheral Interface standard for a synchronous serial data bus with Master- Slave devices.
<b>Super I/O</b>	An integrated circuit, typically interfaced via the LPC bus that provides legacy PC I/O functions including PS2 keyboard and mouse ports, serial and parallel port (s) and a floppy interface.
<b>SVI2</b>	Serial VID Interface Rev 2
<b>VR</b>	Voltage Regulator
<b>TMDS</b>	Adigital Transition Minimized Differential signaling protocol between the graphics subsystem and display that is used for the DVI digital signals.
<b>UMI</b>	Unified Media interface between APU and FCH
<b>VGA</b>	PC-AT video graphics adapter standard defined by IBM.
<b>VID</b>	Voltage Identification
<b>'#' (hash) suffix to a signal name</b>	Indicates an active low signal. The signal is either true when it is at logic zero level (voltage close to 0 V) or the signal initiates actions on a high-to-low transition.
<b>'\' (backslash) prefix to a signal name</b>	Indicates an active low signal. The signal is either true when it is at logic zero level (voltage close to 0 V) or the signal initiates actions on a high-to-low transition.



# General Contact Information

Home link: <http://www.emerson.com/industrial-automation-controls>

Knowledge Base: <https://www.emerson.com/industrial-automation-controls/support>

## Technical Support

### Americas

Phone: 1-888-565-4155  
1-434-214-8532 (If toll-free option is unavailable)

Customer Care (Quotes/Orders/Returns): [customercare.mas@emerson.com](mailto:customercare.mas@emerson.com)

Technical Support: [support.mas@emerson.com](mailto:support.mas@emerson.com)

### Europe

Phone: +800-4444-8001  
+420-225-379-328 (If tollfree option is unavailable)  
+39-0362-228-5555 (from Italy - if toll-free 800 option is unavailable or dialing from a mobile telephone)

Customer Care (Quotes/Orders/Returns): [customercare.emea.mas@emerson.com](mailto:customercare.emea.mas@emerson.com)

Technical Support: [support.mas.emea@emerson.com](mailto:support.mas.emea@emerson.com)

### Asia

Phone: +86-400-842-8599  
+65-6955-9413 (All other Countries)

Customer Care (Quotes/Orders/Returns): [customercare.cn.mas@emerson.com](mailto:customercare.cn.mas@emerson.com)

Technical Support: [support.mas.apac@emerson.com](mailto:support.mas.apac@emerson.com)

Any escalation request should be sent to: [mas.sfdcescalation@emerson.com](mailto:mas.sfdcescalation@emerson.com)

**Note:** If the product is purchased through an Authorized Channel Partner, please contact the seller directly for any support.

Emerson reserves the right to modify or improve the designs or specifications of the products mentioned in this manual at any time without notice. Emerson does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson product remains solely with the purchaser.

© 2023 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their respective owners.

