
# PACSystems<sup>™</sup> RSTi-EP

PROFINET® SCANNER (EPXPNS001)

PWR, SF, BF, MT, LINK 1, ACT 1, LINK 2, and ACT 2 LEDs



Door for Micro USB Port

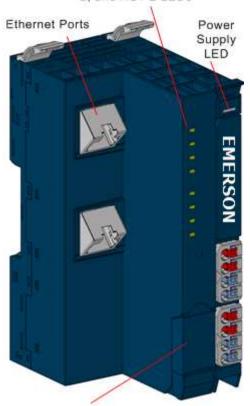

#### **Warnings and Caution Notes as Used in this Publication**

#### **A** WARNING

Warning notices are used in this publication to emphasize that hazardous voltages, currents, temperatures, or other conditions that could cause personal injury exist in this equipment or may be associated with its use.

In situations where inattention could cause either personal injury or damage to equipment, a Warning notice is used.

#### **A** CAUTION

Caution notices are used where equipment might be damaged if care is not taken.

**Note:** Notes merely call attention to information that is especially significant to understanding and operating the equipment.

These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met during installation, operation, and maintenance. The information is supplied for informational purposes only, and Emerson makes no warranty as to the accuracy of the information included herein. Changes, modifications, and/or improvements to equipment and specifications are made periodically and these changes may or may not be reflected herein. It is understood that Emerson may make changes, modifications, or improvements to the equipment referenced herein or to the document itself at any time. This document is intended for trained personnel familiar with the Emerson products referenced herein.

Emerson may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not provide any license whatsoever to any of these patents.

Emerson provides the following document and the information included therein as-is and without warranty of any kind, expressed or implied, including but not limited to any implied statutory warranty of merchantability or fitness for particular purpose.

i

## **Product Description**

The EPXPNS001 PROFINET Scanner is a PROFINET I/O device certified by the PROFINET user organization. The network adapter is the head module for the RSTi-EP system bus, to which up to 64 active RSTi-EP modules can be connected. The PROFINET network adapter has two Ethernet ports and an integrated switch.

The PROFINET Scanner can be accessed with a system-independent web server application via the USB service interface or the Ethernet. Thus, all information, such as diagnostics, status values, and parameters, can be read and all connected modules can be simulated or forced.

The station's main power supply is integrated with the PROFINET Scanner. Power is supplied via two 4-pole connectors, separated into the input and output current paths.

Caution, the RSTi-EP station is usually installed on a horizontally positioned DIN rail. Installation on vertically positioned DIN rails is also possible. However, the heat dissipation is reduced such that the derating values change (refer to the section, Thermal Derating).

Modules should be allowed to de-energize for a minimum of 10 seconds after powering down, before starting any maintenance activity. The PROFINET Scanner cannot be hot-swapped.

Refer to the RSTi-EP Slice I/O User Manual (GFK-2958) for additional information.

Refer to the RSTi-EP Power Supply Reference Guide, a software utility available on PAC Machine Edition(PME) V9.00, for detailed power-feed requirements.

#### **Module Features**

- Supports up to 64 active RSTi-EP modules
- Spring-style technology for ease of wiring
- · DIN rail mounted
- Double-click installation for positive indication of correct installation
- Built-in Web Server for diagnostic information and firmware update through Ethernet and micro USB port
- Supports Media Redundancy Protocol (MRP) Client mode operation
- Support for daisy-chain/line, star, or ring (MRP) technologies
- Two switched Ethernet ports; 8-conductor RJ-45 shielded twisted pair 10/100 Mbps copper interfaces
- Fast start-up < 500 ms with a maximum of 10 modules

#### **Ordering Information**

Module	Description
EPXPNS001	RSTi-EP Slice I/O PROFINET IRT Network Adapter

# **Specifications**

Specifications	EPXPNS001					
System data						
Connection	2 x RJ-45					
Fieldbus protocol	PROFINET V	ersion 2.3 Class C I/O Device (IRT, RT)				
	Input data width	max. 512 bytes				
	Output data width	max. 512 bytes				
Process image	Parameter data	max. 4362 bytes				
	Diagnostic data	max. 1408 bytes				
Number of modules		max. 64 active				
Configuration interface		Micro USB 2.0				
	Fieldbus	Max. 100 Mbps				
Transfer rate	RSTi-EP system bus	Max. 48 Mbps				
Data format	Default: Motorola	Configurable: Intel				
PROFINET I/O Update Rate		: 1ms, 2ms, 4ms, 8ms, 16ms, 32ms, 64ms,				
Supports MRP	Yes * [Minimum I/O Update Rate for bump-less operation in an MRP rin topology is 32ms and slower for EPXPNS001]					
Supply						
Supply voltage for system and inputs		20.4V – 28.8V				
Supply voltage for outputs		20.4V – 28.8V				
Max. feed-in current for input modules		10 A				
Max. feed-in current for output modules		10 A				
Current consumption from system current path I <sub>SYS</sub>		116 mA				
Connection data						
Type of connection	Spring style					
Conductor cross-section	Single-wired, fine- wired	0.14 – 1.5 mm <sup>2</sup> (AWG 26 – 16)				
General data						
Operating temperature	-20	°C to +60°C (-4 °F to +140 °F)				
Storage temperature	-40°	C to +85°C (-40 °F to +185 °F)				
Air humidity (operation/transport)	5% to 95%, ı	noncondensing as per DIN EN 61131-2				
Width	52 mm (2.05 in)					
Depth	76 mm (2.99 in)					
Height	120 mm (4.72 in)					
Weight		220 g (7.76 oz)				
Configuration	https://www.emerson.cc	lable on the Support website om/Industrial-Automation-Controls/support for to PAC Machine Edition. The GSDML supporting art of the firmware upgrade kit available on the				

# **LEDs**

#### **LED Status Indicators**

LED	Indication	LED State/Description					
PWR	Power LED	Green: Supply voltage connected					
		Red: Configuration error, or error in the PROFINET Scanner, or error in a					
SF	System fault	module, or there is a new diagnostic report					
		Red flashing: Station in Force mode					
		Red: No connection to the Fieldbus					
BF	Bus fault	Red flashing: Configuration error, no connection to the control unit, or error in					
		the parameter set					
MT	Maintenance	Yellow: Error on the system bus or Fieldbus					
IVII	Required	Tellow. Ellor off the system bus of Fielubus					
LINK 1	Connection	Green: Connection established between port 1 of the PROFINET Scanner and					
LINK	Connection	another field device					
ACT 1	Active	Yellow flashing: Data being exchanged on port 1					
LINK 2	Connection	Green: Connection established between port 2 of the PROFINET Scanner and					
LIINK Z	Connection	another field device					
ACT 2	Active	Yellow flashing: Data being exchanged on port 2					

LED

4.4

#### **LED Indicators**



Power Supply	Green: Supply voltage > 18 V DC Red: At least one current path < 18 V
	,
3.1	Green: Input current path supply voltage > 18 V DC
3.1	Red: Input current path supply voltage < 18 V DC
3.3	Trout imput out on put outpry voltage 10 v 20
3.4	Red: Internal fuse defective
4.1	Green: Output current path supply voltage > 18 V DC
4.2	Red: Output current path supply voltage < 18 V DC
4.3	


Red: Internal fuse defective

EPXPNS001

# Field Wiring

The connection frame has one connector, and two 24 V DC wires can be connected to each connector, along with two ground connections. Those four connectors are used as shown in the following figure. The Spring style technology allows either finely stranded or solid wire with crimped wire-end ferrules or ultrasonically welded wires, each with a maximum cross-section of 1.5 mm² (16 gauge), to be inserted easily through the opening in the clamping terminal without having to use tools. To insert fine stranded wires without wire-end ferrules, the pusher must be pressed in with a screwdriver and released to latch the wire.

Figure 1: Connector Block

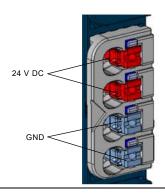

#### **Connector Specifications:**

- Conductor cross-section 0.14 to 1.5 mm² (26 16 guage)
- Maximum ampacity: 10 A
- 4-pole


The modules do not have a fused sensor/activator power supply. All cables to the connected sensors/actuators must be fused corresponding to their conductor cross-sections (as per Standard DIN EN 60204-1, section 12).

Refer to the RSTi-EP Slice I/O User Manual (GFK-2958) for additional information.

For technical assistance, go to https://www.emerson.com/Industrial-Automation-Controls/support


# **Connection Diagrams**

Figure 2: EPXPNS001

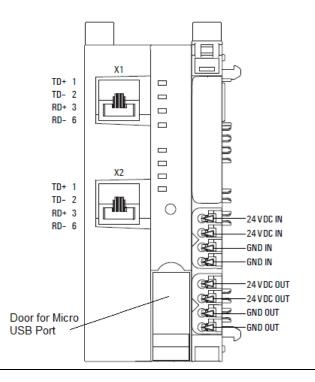

#### **Connection Block Diagrams**

Figure 3: EPXPNS001

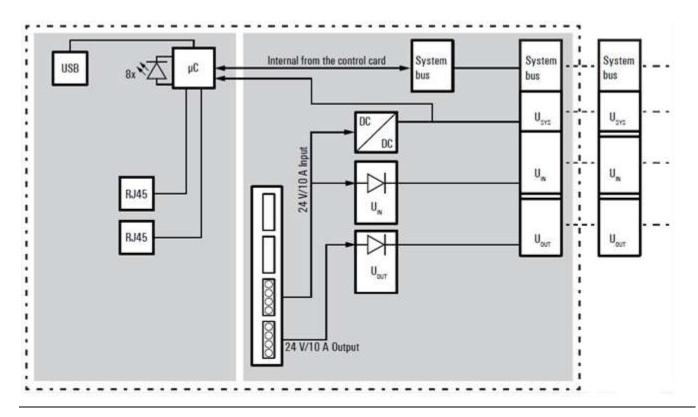

## Installation in Hazardous Areas

#### **WARNING**

- EQUIPMENT LABELED WITH REFERENCE TO CLASS I, GROUPS A, B, C & D, DIV. 2
   HAZARDOUS AREAS IS SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C, D
   OR NON-HAZARDOUS AREAS ONLY
- EXPLOSION HAZARD SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2;
- EXPLOSION HAZARD WHEN IN HAZARDOUS AREAS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES; AND
- EXPLOSION HAZARD DO NOT CONNECT OR DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS.

#### **ATEX Marking**

II 3 G Ex Na IIC T4 Gc

Ta:  $-20^{\circ}$ C to  $+60^{\circ}$ C ( $-4^{\circ}$  F to  $+140^{\circ}$ F)

# **Thermal Derating**

The power supply is restricted according to the temperature. The following values apply for the horizontal and vertical positioning of the RSTi-EP station:

#### **Temperature-dependent Values for the Power Supply**

Power Supply	Horizontal	Vertical
Network adapter power supply	60°C (140 °F) : 2 x 8 A	55°C (131 °F) : 2 x 6 A
	55°C (131 °F) : 2 x 10 A	50°C (122 °F) : 2 x 8 A
Power-feed module power supply	60°C (140 °F) : 1 x 10 A	55°C (131 °F) : 1 x 8 A

Refer to the RSTi-EP Slice I/O Module User Manual (GFK-2958) for additional information.

# Supported Modules and Power Supplies

The following modules can be used with this release of the RSTi-EP PROFINET Network Adapter :

Catalog Number	Module Description
Digital Input Modules	<u> </u>
EP-1214	Digital Input, 4 Points, Positive Logic 24VDC, 2,3, or 4 Wire
EP-1218	Digital Input, 8 Points, Positive Logic, 24VDC 2 Wire
EP-1318	Digital Input, 8 Points, Positive Logic, 24VDC 3 Wire
EP-125F	Digital Input, 16 Points, Positive Logic, 24VDC, 1 Wire
EP-153F	Digital Input, 16 Points, Negative Logic, 24VDC, 1 Wire
EP-12F4	Digital Input, 4 Points, Positive Logic 24VDC, 2,3, or 4 Wire, Timestamp
EP-1804	Digital Input, 4 Points 110/230 VAC (65 – 277 VAC), 2 Wire, Isolated
Digital Output Modules	8
EP-2214	Digital Output, 4 Points, Positive Logic 24VDC, 0.5A, 2,3, or 4 Wire
EP-2614	Digital Output, 4 Points, Positive Logic 24VDC, 2.0A, 2,3, or 4 Wire
EP-2634	Digital Output, 4 Points, Positive/Negative Logic 24VDC, 2.0A, 2,3, or 4 Wire
EP-2218	Digital Output, 8 Points, Positive Logic, 24VDC, 0.5A, 2 Wire
EP-225F	Digital Output, 16 Points, Positive Logic, 24VDC, 0.5A, 1 Wire
EP-291F	Digital Output, 16 Points, Negative Logic, 24VDC, 0.5A, 1 Wire
Digital Relay Output M	odules
EP-2714	Digital Relay Output, 4 Points, Positive Logic, 24 - 220 VDC/VAC, 6A, 2 Wire
EP-2814	Solid-state Relay Output Module
Analog Input Modules	
EP-3164	Analog Input, 4 Channels Voltage/Current 16 Bits 2, 3, or 4 Wire
EP-3264	Analog Input, 4 Channels Voltage/Current 16 Bits with Diagnostics 2, 3, or 4 Wire
EP-3124	Analog Input, 4 Channels Voltage/Current 12 Bits 2, 3, or 4 Wire
EP-3368	Analog Input, 8 Channels Current 16 Bits 2, 3, or 4 Wire
EP-3468	Analog Input, 8 Channels Current 16 Bits 2, 3, or 4 Wire, Channel Diagnostic
EP-3704	Analog Input, 4 Channels RTD 16 Bits with Diagnostics 2, 3, or 4 Wire
EP-3804	Analog Input, 4 Channels TC 16 Bits with Diagnostics 2, 3, or 4 Wire

Catalog Number	Module Description
EP-1813	Power Measurement Module, 8 Channels
Analog Output Module	es es
EP-4164	Analog Output, 4 Channels Voltage/Current 16 Bits 2, 3, or 4 Wire
EP-4264	Analog Output, 4 Channels Voltage/Current 16 Bits with Diagnostics 2, 3, or 4 Wire
Speciality Modules	
EP-5111	1 Channel High Speed Counter, AB 100 kHz 1 DO 24VDC, 0.5A
EP-5112	2 Channel High Speed Counter, AB 100 kHz
EP-5212	2 Channel Frequency Measurement, 100 kHz
EP-5261	1 Channel Serial Communications, 232, 422, 485
EP-5311	1 Channel SSI Encoder, BCD or Gray-Code Format, 5/24 VDC
EP-5422	2 Channels PWM Output, Positive Logic, 24VDC, 2.0 A
EP-5442	2 Channels PWM Output, Positive Logic, 24VDC, 0.5 A
EP-5324	IO-Link Communication Module, 4 Channels
Power Feed Modules	for Input Current Path
EP-7631	Power Module, 1 Channel 24VDC Input Flow 10A
Power Feed Modules	for Output Current Path
EP-7641	Power Module, 1 Channel 24VDC Output Flow 10A
Safe Feed-input Modu	les
EP-1901	1 Safe Feed-Input, 24 VDC
EP-1902	2 Safe Feed-Inputs, 24 VDC, Programmable Delay
EP-1922	2 Safe Feed-Inputs, 24 VDC
<b>Potential Distribution</b>	Modules
EP-711F	Power Module, 16 Channels 24VDC Potential Distribution +24 VDC from Input Current Path
EP-751F	Power Module, 16 Channels 24VDC Potential Distribution +24 VDC from Output Current Path
EP-700F	Power Module, 16 Channels 24VDC Potential Distribution Functional Earth
EP-710F	Power Module, 16 Channels 24VDC Potential Distribution +0VDC from Input Current Path
EP-750F	Power Module, 16 Channels 24VDC Potential Distribution +0VDC from Output Current Path
Hot swap Modules	
EP-7990	Bump-less Output Hot swap Module

# Release History

Catalog Number	Hardware Version	Firmware Version	Date	Comments
EPXPNS001-AEAK	02.00.00	02.06.04	Feb 24	<ul> <li>Firmware release 02.06.04</li> <li>Support for EP-7990 is added to enable bump-less hot-swap operation</li> </ul>
EPXPNS001-ADAJ	02.00.00	02.06.02	June 22	Firmware release 02.06.02
EPXPNS001-ADAH	02.00.00	02.05.03	Dec 21	- Release of Firmware modified with increased startup timeout to support IO-link devices having longer startup times

Catalog Number	Hardware Version	Firmware Version	Date	Comments
EPXPNS001-ADAH	02.00.00	02.05.01 FSBL: 01.08.00	Nov 20	<ul> <li>Release of FW file with integrated FSBL image for EPXPNS001.</li> <li>Error fixes-"Valid module substitution" fault on EPXPNS001 -when the node is downloaded to the controller.</li> </ul>
EPXPNS001-ADAG	02.00.00	02.04.02 FSBL: 01.08.00	Mar 20	EPXPNS001 is released with HW version 02.00.00 & with FW 02.04.02, the same as EPXPNS101.
EPXPNS001-ACAF	01.05.00	02.03.01	Dec 19	Support for two newly introduced IO modules EP-1813 (Power Measurement module) and EP-5324 (IO-Link Communication Module) with only IPI update.
EPXPNS001-ACAF	01.05.00	02.03.01	Dec 19	Firmware corrected for the display of appropriate Device Type for EPXPNS001 for "Explore Profinet" and "Profinet DCP" Tools in Machine Edition.
EPXPNS001-ACAE	01.05.00	02.03.00	Sep 19	<ul> <li>Following Emerson's acquisition of this product, changes have been made to apply appropriate branding and registration of the product with required certification agencies. No changes to the material, process, form, fit, or functionality.</li> <li>Support for new Negative logic Digital Input module(EP-153F) &amp; Digital Output Module (EP-291F)</li> <li>Updates to webserver</li> <li>Ordering data is removed from General information section of Emerson branded products.</li> <li>Brand labeling of Web Application to EMERSON.</li> </ul>
EPXPNS001-ABAD	01.05.00	02.02.00	Mar 18	The product revision is updated to be usable in marine/shipbuilding applications and pass marine certification tests. [DNV-GL & Lloyd's Register] Enhancements and updates to Web Application:  Reset button appears automatically when changes in parameter settings require a restart to take effect  Added display of slot numbers to list of compatible modules after selecting a firmware file in multi-update view.  Added password policy and weak password check - default username and password will remain the same.  New languages for Web Server available [Korean, French, Spanish, Portuguese and Italian]  Support for EP-3664 Issue Fixes:  Fixed issue that live module unplug/replug sometimes corrupts I/O mapping  Fixed issue that re-installation attempt of language files sometimes causes an error message
EPXPNS001-AAAC	01.04.00	02.01.00	Nov 17	Enhancements and updates to Web Application  - Web Application:  a. Added Tooltips for Coupler LEDs  b. Improved arrangement of module parameters & general information  c. Display of raw process data next to physical value

Catalog Number	Hardware Version	Firmware Version	Date	Comments
				d. Web application performance improved     "Disappearing" Diagnosis is not sent via Fieldbus when the module in front is pulled     New parameter to group the power supply error, filter return of submodule alarms     Filter diagnosis messages for bus error on hot plug
EPXPNS001-AAAB	01.04.00	01.00.04	Sep 16	<ul> <li>Support for three new modules, EP-1804, EP-5261, and EP-5311</li> <li>Resolves a problem, see section <i>Problems Resolved by this Release</i> for more information</li> </ul>
EPXPNS001-AAAA	01.04.00	01.00.04	Dec 15	Documentation update only added known issues
EPXPNS001-AAAA	01.04.00	01.00.04	Nov 15	Initial Release

# Important Product Information for this Release Updates

EPXPNS001-AEAJ default factory image will be 02.06.04.

The product may be upgraded in the field using the Web firmware upgrade kit, which can be downloaded from <a href="https://www.emerson.com/Industrial-Automation-Controls/support">https://www.emerson.com/Industrial-Automation-Controls/support</a>.

Module	Firmware Version	Upgrade Kit & GSDML File
EPXPNS001-AEAK	FW - 02.06.04	EPXPNS001-0007675-02_06_04-5.zip which includes the following files:- a. EPXPNSx01-0007675-02_06_04-5.bsc b. GSDML-V2.3-IntelligentPlatforms-EPXPNS001-20231010.xml c. FW Upgrade Procedure

## **Functional Compatibility**

		FW Index [Ver]									
HW Index [Ver]	AA [01.00.00]	AB [02.00.00]	AC [02.01.00]	AD [02.02.00]	AE [02.03.00]	AF [02.03.01]	AG [02.04.02]	AH [02.05.01]	AH [02.05.03]	AJ [02.06.02]	AK [02.06.04]
AA											
[01.04.00]	OK	OK	OK	OK	OK	OK	NO	NO	NO	NO	NO
AB											
[01.05.00]	NO	NO	NO	OK	OK	OK	NO	NO	NO	NO	NO
AC [01.05.00]	NO	NO	NO	OK	OK	OK	NO	NO	NO	NO	NO
AD [02.00.00]	NO	NO	NO	NO	NO	NO	OK	OK	OK	ОК	ОК
AE [02.00.00]	NO	NO	NO	NO	NO	NO	OK	OK	OK	ОК	OK

# Problems Resolved by this Release

Subject	Description
Output behavior during hot-swapping	During hot insertion or removal of IO modules, a transient Loss of Power up to 500 ms may occur on the network adapter and IO modules, during which all the outputs may drop to zero. This system behavior should be verified against the application requirements before hot insertion or removal of the IO module is done.
Channel diagnostics faults are reported during hot-swapping of the modules.	During hot-swap of an I/O module, the network adapter may report additional channel diagnostics messages in addition to the expected <i>Loss of Module</i> or <i>Addition of Module</i> fault.

#### New Features and Enhancements

None

# Known Restrictions and Open Issues

Subject	Description
N/A	

### **Operational Notes**

Subject	Description
N/A	

#### **Product Documentation**

RSTi-EP Slice I/O Module User Manual (GFK-2958)

RSTi-EP Slice I/O Functional Safety Module User Manual (GFK-2956)

#### **General Contact Information**

Home link: <a href="http://www.emerson.com/industrial-automation-controls">http://www.emerson.com/industrial-automation-controls</a>

Knowledge Base: <a href="https://www.emerson.com/iac-support">https://www.emerson.com/iac-support</a>

## **Technical Support**

**Americas** 

Phone: 1-888-565-4155

1-434-214-8532 (If toll-free option is unavailable)

Customer Care (Quotes/Orders/Returns): customercare.mas@emerson.com

Technical Support: <a href="mailto:support.mas@emerson.com">support.mas@emerson.com</a>

**Europe** 

Phone: +800-4444-8001

+420-225-379-328 (If toll-free option is unavailable)

+39-0362-228-5555 (from Italy - if toll-free 800 option is unavailable or dialing from a mobile

telephone)

Customer Care (Quotes/Orders/Returns); customercare.emea.mas@emerson.com

Technical Support: support.mas.emea@emerson.com

Asia

Phone: +86-400-842-8599

+65-3157-9591 (All other Countries)

Customer Care (Quotes/Orders/Returns): <a href="mailto:customercare.cn.mas@emerson.com">customercare.cn.mas@emerson.com</a>

Technical Support: <a href="mailto:support.mas.apac@emerson.com">support.mas.apac@emerson.com</a>

Any escalation request should be sent to: mas.sfdcescalation@emerson.com

**Note:** If the product is purchased through an Authorized Channel Partner, please contact the seller directly for any support.

Emerson reserves the right to modify or improve the designs or specifications of the products mentioned in this manual at any time without notice. Emerson does not assume responsibility for the selection, use, or maintenance of any product. Responsibility for proper selection, use, and maintenance of any Emerson product remains solely with the purchaser.

© 2024 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their respective owners.

