

GE

Automation & Controls

I Programmable Control Products

PACSystems* Industrial PROFINET Managed Ethernet Switches CLI Command Reference Guide

GFK-3061

September 2019



Warnings, Cautions, and Notes as Used in this Publication

GFL-002



Warning

Warning notices are used in this publication to emphasize that hazardous voltages, currents, temperatures, or other conditions that could cause personal injury, exist in this equipment or may be associated with its use.

In situations where inattention could cause either personal injury or damage to equipment, a Warning notice is used.



Caution

Caution notices are used where equipment might be damaged if care is not taken.



Attention

Indicates a procedure or condition that should be strictly followed.

Note: Notes merely call attention to information that is especially significant to understanding and operating the equipment.

These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met during installation, operation, and maintenance. The information is supplied for informational purposes only, and GE makes no warranty as to the accuracy of the information included herein. Changes, modifications, and/or improvements to equipment and specifications are made periodically and these changes may or may not be reflected herein. It is understood that GE may make changes, modifications, or improvements to the equipment referenced herein or to the document itself at any time. This document is intended for trained personnel familiar with the GE products referenced herein.

GE may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not provide any license whatsoever to any of these patents.

GE PROVIDES THE FOLLOWING DOCUMENT AND THE INFORMATION INCLUDED THEREIN AS-IS AND WITHOUT WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED STATUTORY WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE.

* indicates a trademark of General Electric Company and/or its subsidiaries.
All other trademarks are the property of their respective owners.

©Copyright 2002-2017 General Electric Company.
All Rights Reserved

If you purchased this product through an Authorized Channel Partner, please contact the seller directly.

General Contact Information

Online technical support and GlobalCare	www.geautomation.com/support
Additional information	www.geautomation.com
Solution Provider	solutionprovider.ip@ge.com

Technical Support

If you have technical problems that cannot be resolved with the information in this manual, please contact us by telephone or email, or on the web at www.geautomation.com/support

Americas

Phone	1-800-433-2682
International Americas Direct Dial	1-780-420-2010 (if toll free 800-option is unavailable)
Customer Care Email	digitalsupport@ge.com
Primary language of support	English

Europe, the Middle East, and Africa

Phone	+800-1-433-2682
EMEA Direct Dial	+ 420-296-183-331 (if toll free 800-option is unavailable or if dialing from a mobile telephone)
Customer Care Email	digitalsupport.emea@ge.com
Primary languages of support	English, French, German, Italian, Spanish

Asia Pacific

Phone	+86-21-3877-7006 (India, Indonesia, and Pakistan)
	+86-400-820-8208 (rest of Asia)
Customer Care Email	digitalsupport.apac@ge.com
Primary languages of support	Chinese, English

Table of Contents

PACSystems* Industrial PROFINET Managed Ethernet Switches CLI Command Reference Guide User Manual GFK-3061	iii
Table of Contents.....	i
List of Tables.....	x
Table of Figures.....	xi
Chapter 1 Scope.....	12
1.1 Revisions in this Manual	12
1.2 PACSystems Documentation.....	12
1.3 Scope.....	12
1.4 Access to Hardware Interface.....	13
1.5 Introduction.....	13
1.6 Connect Interface.....	13
1.7 Screen Description.....	13
1.8 Execution Modes.....	15
1.9 Getting help.....	15
1.10 Terminal Key Function.....	16
1.11 Notation Conventions	16
Chapter 2 Command Descriptions.....	17
2.1 Init. Mode Commands.....	17
2.1.1 exit.....	17
2.1.2 configure terminal.....	17
2.1.3 enable.....	17
2.1.4 Show terminal.....	17
2.1.5 Show history	17
2.1.6 Show clock.....	17
2.1.7 Show clock detail.....	18
2.2 Enable Mode Commands.....	18
2.2.1 configure terminal.....	18
2.2.2 disable.....	18
2.2.3 show access management	18

2.2.4	show access-list	19
2.2.5	show aggregation	19
2.2.6	show alarm	20
2.2.7	show cpu-load	20
2.2.8	show green-ethernet	20
2.2.9	show ip	21
2.2.10	show ip arp inspection	21
2.2.11	show ip dhcp detailed statistics	22
2.2.12	show ip dhcp excluded-address	22
2.2.13	show ip dhcp pool	22
2.2.14	show ip dhcp relay	23
2.2.15	show ip dhcp server	23
2.2.16	show ip dhcp server binding	23
2.2.17	show ip dhcp server declined-ip	23
2.2.18	show ip dhcp server statistics	24
2.2.19	show ip dhcp snooping	24
2.2.20	show ip http server	24
2.2.21	show ip igmp snooping	24
2.2.22	show ip interface	25
2.2.23	show ip name-server	25
2.2.24	show ip route	25
2.2.25	show ip source binding	25
2.2.26	show ip ssh	25
2.2.27	show ip statistics	26
2.2.28	show ip telnet	26
2.2.29	show ip verify source	26
2.2.30	show ipmc	27
2.2.31	show ipv6	27
2.2.32	show lacp	27
2.2.33	show line	28
2.2.34	show logging	28
2.2.35	show ntp status	28
2.2.36	show users	28
2.2.37	show running-cfg	28
2.2.38	show running-config interface Gigabit	29
2.2.39	show running-config interface vlan	29
2.2.40	show running-config all-defaults	29
2.2.41	show running-config feature	29
2.2.42	show running-config line	30
2.2.43	show running-config vlan	30
2.2.44	show version	30
2.2.45	show clock	30
2.2.46	show show mac address table	30
2.2.47	show mac address table conf	31
2.2.48	show mac address table count	31

2.2.49	show mac address table learning	31
2.2.50	show mac address table static	31
2.2.51	show mac address table interface	32
2.2.52	show mac address vlan <vlanid>	32
2.2.53	show mvr	32
2.2.54	show fdb static table	33
2.2.55	show fdbstatic interface gigabit <portNo>	33
2.2.56	show fdbstatic vlan <vlanid>	33
2.2.57	show interface port <port_type_list>	33
2.2.58	show interface port <portNo> statistics	34
2.2.59	show platform phy	34
2.2.60	show port-security	35
2.2.61	show profile alarm	35
2.2.62	show sflow	35
2.2.63	show snmp	36
2.2.64	show spanning-tree	37
2.2.65	show switchport forbidden	38
2.2.66	show vlan	38
2.2.67	show vlan ID	38
2.2.68	show vlan name	38
2.2.69	show vlan brief	39
2.2.70	show vlan ip-subnet	39
2.2.71	show vlan mac	39
2.2.72	show vlan protocol	40
2.2.73	show vlan status	40
2.2.74	show qos-queue-mapping	41
2.2.75	show interface ports <portNo> priority	41
2.2.76	show queue-shaper	41
2.2.77	show port-shaper	41
2.2.78	show pvlan [<pvlan_list>]	42
2.2.79	show pvlan isolation [interface <port_type> [<port_type_list>]]	42
2.2.80	show interface gigabit <portNo> port-isolation	42
2.2.81	show qos interface	42
2.2.82	show qos maps	43
2.2.83	show qos qce	43
2.2.84	show qos storm	43
2.2.85	show ringv2	43
2.2.86	show rmon	44
2.2.87	show ext-tpid	44
2.2.88	show interface vlan	44
2.2.89	show interface vlan <vlanid>	44
2.2.90	show protocol-vlan	44
2.2.91	show interface gigabit <portNo> vlan	45
2.2.92	show vlan-trans	45
2.2.93	show multicast-fdb	45

2.2.94	show dot1x	45
2.2.95	show dot1x status.....	45
2.2.96	show rfc2544 profile [<word32>].....	45
2.2.97	Configuration save and replace.....	46
2.2.98	clear ipgmp snooping statistics.....	46
2.2.99	debug.....	46
2.2.100	delete.....	46
2.2.101	help	47
2.2.102	show web.....	47
2.3	Configure Mode Commands.....	47
2.3.1	interface gigabit <portNo>	47
2.3.2	interface vlan <vlanid>	48
2.3.3	access.....	48
2.3.4	aggregation mode.....	48
2.3.5	alarm history clear	48
2.3.6	banner.....	48
2.3.7	default access-list rate-limiter.....	49
2.3.8	profile sch.....	49
2.3.9	ntp server <1-5> ip-address <ip>.....	49
2.3.10	clock timezone.....	49
2.3.11	clock summer-time set [start-time] [end-time]	50
2.3.12	account add <username>.....	50
2.3.13	account delete <username>	51
2.3.14	syslog {enable disable}	51
2.3.15	clear logging	51
2.3.16	clear mac address-table.....	51
2.3.17	dir	51
2.3.18	do.....	52
2.3.19	duplex	52
2.3.20	firmware	52
2.3.21	flowcontrol.....	52
2.3.22	green-etherneteee.....	53
2.3.23	green-etherneteee optimize-for-power	53
2.3.24	green-etherneteee urgent-queues	53
2.3.25	Ip arp inspection.....	53
2.3.26	Ip arp inspection translate.....	54
2.3.27	Ip arp inspection entry	54
2.3.28	ip arp inspection vlan.....	54
2.3.29	ip dns proxy	54
2.3.30	ip http server.....	55
2.3.31	ip http secure-redirect	55
2.3.32	ip http secure-server	55
2.3.33	ip source binding interface	55
2.3.34	ip ssh.....	55

2.3.35	ip telnet.....	56
2.3.36	ip name-server	56
2.3.37	ip route.....	56
2.3.38	ip routing	56
2.3.39	ip verify	56
2.3.40	ipmc profile	57
2.3.41	ipmc range	57
2.3.42	LACP.....	57
2.3.43	line.....	57
2.3.44	login host.....	58
2.3.45	login level.....	58
2.3.46	login on	58
2.3.47	logout.....	58
2.3.48	mac address-table aging-time	58
2.3.49	mac address-table static.....	59
2.3.50	more.....	59
2.3.51	no	59
2.3.52	ping	59
2.3.53	port-security	60
2.3.54	privilege.....	60
2.3.55	reload	61
2.3.56	rmon.....	61
2.3.57	rmon alarm.....	61
2.3.58	rmon alarm.....	62
2.3.59	terminal.....	63
2.3.60	vlan <vlanid>.....	63
2.3.61	vlan <vlanid> <name>.....	63
2.3.62	vlan disable <vlanid>	64
2.3.63	aging <time>	64
2.3.64	jumboframe {enable disable}.....	64
2.3.65	jumboframe mtu <value>	64
2.3.66	media-type	65
2.3.67	monitor destination interface	65
2.3.68	monitor source interface	65
2.3.69	monitor source cpu.....	65
2.3.70	speed	66
2.3.71	traps.....	66
2.3.72	upnp.....	66
2.3.73	upnp advertising-duration	66
2.3.74	upnp ttl.....	67
2.3.75	username.....	67
2.3.76	web	68
2.3.77	flow-control {enable disable}.....	68
2.3.78	speed	69
2.3.79	port {enable/disable}.....	69

2.3.80	Date/Time	69
2.4	VLAN Commands (Configuration Mode).....	70
2.4.1	vlan.....	70
2.4.2	vlan ethertype s-custom-port.....	70
2.4.3	vlan protocol.....	70
2.4.4	switchport access vlan	71
2.4.5	switchport forbidden vlan	71
2.4.6	switchport hybrid acceptable-frame-type.....	71
2.4.7	switchport hybrid allowed vlan.....	72
2.4.8	switchport hybrid egress-tag.....	72
2.4.9	switchport hybrid ingress-filtering.....	73
2.4.10	switchport mode	73
2.4.11	switchport trunk allowed vlan	73
2.4.12	switchport vlan protocol group.....	74
2.5	DHCP Commands (Configuration Mode).....	74
2.5.1	interface	74
2.5.2	interface vlan.....	74
2.5.3	ip address.....	74
2.5.4	ip name-server.....	75
2.5.5	ip dhcp excluded-address.....	75
2.5.6	ip dhcp pool.....	75
2.5.7	ip dhcp server.....	76
2.5.8	ip dhcp relay.....	76
2.5.9	ip dhcp relay information option.....	76
2.5.10	ip dhcp retry interface vlan.....	76
2.5.11	ip dhcp snooping	76
2.5.12	ip helper-address.....	76
2.5.13	ipv6 address.....	77
2.5.14	ipv6mtu	77
2.6	RingV2 Group Mode Commands (Configuration Mode).....	77
2.6.1	ringv2 protect.....	77
2.6.2	guard-time.....	78
2.6.3	mode.....	78
2.6.4	node1 interface GigabitEthernet <portNo>.....	78
2.6.5	node2 interface GigabitEthernet <portNo>.....	78
2.6.6	role.....	79
2.7	Spanning Tree (configuration Mode)	79
2.7.1	spanning-tree	79
2.7.2	spanning-tree aggregation	80
2.7.3	spanning-tree auto-edge	80
1.1.1	spanning-tree auto-edge	80
2.7.4	spanning-tree bpdu-guard.....	80

2.7.5	spanning-tree edge	80
2.7.6	spanning-tree edge bpdu-filter.....	81
2.7.7	spanning-tree mode.....	81
2.7.8	spanning-tree mst cost.....	81
2.7.9	spanning-tree mst port-priority	81
2.7.10	spanning-tree mst priority	82
2.7.11	spanning-tree mst vlan.....	82
2.7.12	spanning-tree mst forward-time.....	82
2.7.13	spanning-tree mst max-age.....	83
2.7.14	spanning-tree mst max-hops	83
2.7.15	spanning-tree mst name.....	83
2.7.16	spanning-tree mst <instance>	83
2.7.17	spanning-tree recovery	84
2.7.18	spanning-tree transmit	84
2.8	sFlow Configure Command (configuration Mode).....	84
2.8.1	sflow.....	84
2.8.2	sflow agent-ip.....	84
2.8.3	sflow collector-address	85
1.1.2	sflow collector-address [receiver<range_list>] [<word>].....	85
2.8.4	sflow max-datagram-size.....	85
2.8.5	sflow max-sampling-size.....	85
2.8.6	sflow collector-port.....	85
2.8.7	sflow sampling-rate.....	86
2.8.8	sflow timeout.....	86
2.9	SNMP Configure Command (Configuration Mode).....	86
2.9.1	snmp-server.....	86
2.9.2	snmp-server access.....	87
2.9.3	snmp-server community v2c.....	87
2.9.4	snmp-server community v3.....	87
2.9.5	snmp-server host	88
2.9.6	snmp-server host traps	88
2.9.7	snmp-server trap.....	88
2.9.8	snmp-server user.....	88
2.9.9	snmp-server version.....	89
2.9.10	snmp-server view	89
2.9.11	SNMP trap receive ipv6 host.....	89
2.9.12	snmp-server contac.....	90
2.9.13	snmp-server engine-id.....	90
2.9.14	snmp-server location.....	90
2.9.15	snmp-server security-to-group.....	90
2.9.16	SNMP trap receive ipv4 host.....	91

2.10	Qos Function Command (Configuration Mode)	91
2.10.1	qos qce	91
2.10.2	qos storm	91
2.10.3	qos cos	92
2.10.4	qos dscp-classify	92
2.10.5	qos dscp-remark	92
2.10.6	qos dscp-translate	92
2.10.7	qos map cos-dscp	93
2.10.8	qos map cos-dscp	94
2.10.9	qos map dscp-egress-translation	95
2.10.10	qos map dscp-ingress-translation	96
2.10.11	qos policer	96
2.10.12	qos wrr	97
2.10.13	qos queue-shaper	97
2.10.14	qos queue-policer	97
2.10.15	qos shaper <unit>	98
2.11	IGMP Functional Commands (Configuration Mode)	98
2.11.1	ip igmp host-proxy [leave-proxy]	98
2.11.2	ip igmp snooping	98
2.11.3	ip igmp snooping immediate-leave	98
2.11.4	ip igmp snooping last-member-query-interval	99
2.11.5	ip igmp snooping max-groups	99
2.11.6	ip igmp snooping mrouter	99
2.11.7	ip igmp snooping querier	99
2.11.8	ip igmp snooping query-interval	100
2.11.9	ip igmp snooping vlan	100
2.11.10	ip igmp ssm-range	100
2.11.11	ip igmp unknown-flooding	100
2.11.12	clear ip igmp snooping statistics	100
2.12	MVR Functional Commands (Configuration Mode)	101
2.12.1	mvr	101
2.12.2	mvr immediate-leave	101
2.12.3	mvr name channel	101
2.12.4	mvr frame priority	101
2.12.5	mvr name <word16> frame tagged	102
2.12.6	mvr name <word16> igmp-address <ipv4_ucast>	102
2.12.7	mvr name <word16> last-member-query-interval <0-31744>	102
2.12.8	mvr name <word16> mode	102
2.12.9	mvr name <word16> type	103
2.12.10	mvr vlan	103
2.12.11	mvr vlan <vlan_list> channel	103
2.12.12	mvr vlan <vlan_list> frame priority	103
2.12.13	mvr vlan <vlan_list> frame tagged	104

2.12.14	mvr vlan <vlan_list> igmp-address	104
2.12.15	mvr vlan <vlan_list> mode	104
2.12.16	mvr vlan <vlan_list> type	104
2.13	MLD Functional Commands (Configuration Mode)	105
2.13.1	ipv6 mld host-proxy	105
2.13.2	ipv6 mld snooping	105
2.13.3	ipv6 mld snooping compatibility	105
2.13.4	ipv6 mld snooping immediate-leave	105
2.13.5	ipv6 mld snooping last-member-query-interval	106
2.13.6	ipv6 mld snooping max-groups	106
2.13.7	ipv6 mld snooping mrouter	106
2.13.8	ipv6 mld snooping query-interval	106
2.13.9	ipv6 mld snooping query-max-response-time	107
2.13.10	ipv6 mld snooping vlan	107
2.13.11	ipv6 mld ssm-range	107
2.13.12	ipv6 mld unknown-flooding	107
2.13.13	ipv6 route	108
2.14	LLDP Configure Commands (Configuration Mode)	108
2.14.1	lldp holdtime	108
2.14.2	lldp med	108
2.14.3	lldp receive	109
2.14.4	lldp reinit <1-10>	109
2.14.5	lldp timer <5-32768>	109
2.14.6	lldp tlv-select	109
2.14.7	lldp transmission-delay	110
2.14.8	lldp transmit	110
2.15	GVRP Configure Commands (Configuration Mode)	110
2.15.1	gvrp	110
2.15.2	gvrp join request vlan	110
2.15.3	gvrp leave request vlan	112
2.15.4	gvrp max-vlans	112
2.15.5	gvrp time { [join-time <1-20>] [leave-time <60-300>] [leave-all-time <1000-50>]	112
2.16	Profile alarm Commands (Configuration Mode)	112
2.16.1	profile alarm	112
2.16.2	alarm	113

List of Tables

Table 1-1 List of Execution Modes.....15

Table 1-2 List of Terminal Keys.....16

Table of Figures

<i>Figure 1-1 Screen Description.....</i>	<i>14</i>
---	-----------

Chapter 1 Scope

1.1 Revisions in this Manual

Rev	Date	Description
	Aug-2019	<ul style="list-style-type: none">Initial release.

1.2 PACSystems Documentation

PACSystems Manuals

<i>PACSystems RX7i, RX3i and RSTi-EP CPU Reference Manual</i>	GFK-2222
<i>PACSystems RX7i, RX3i and RSTi-EP CPU Programmer's Reference Manual</i>	GFK-2950
<i>PACSystems RX7i, RX3i and RSTi-EP TCP/IP Ethernet Communications User Manual</i>	GFK-2224
<i>PACSystems TCP/IP Ethernet Communications Station Manager User Manual</i>	GFK-2225
<i>PACSystems Memory Xchange Modules User's Manual</i>	GFK-2300
<i>PACSystems Hot Standby CPU Redundancy User Manual</i>	GFK-2308
<i>Proficy Machine Edition Logic Developer Getting Started</i>	GFK-1918
<i>Proficy Process Systems Getting Started Guide</i>	GFK-2487
<i>PACSystems RXi, RX3i, RX7i and RSTi-EP Controller Secure Deployment Guide</i>	GFK-2830
<i>PACSystems RX3i Systems Manual</i>	GFK-2314
<i>PACSystems RX3i Ethernet Network Interface Unit User's Manual</i>	GFK-2439
<i>PACSystems RX3i PROFINET Scanner Manual</i>	GFK-2737
<i>PACSystems RX3i & RSTi-EP PROFINET I/O Controller Manual</i>	GFK-2571
<i>PACSystems Industrial PROFINET Managed Ethernet Switches Important Product Information (IPI)</i>	GFK-3028
<i>PACSystems Industrial PROFINET Managed Ethernet Switches User's Manual</i>	GFK-3030
<i>PACSystems Industrial PROFINET Managed Ethernet Switches Web Configuration Tool Guide</i>	GFK-3062
<i>PACSystems Industrial PROFINET Managed Ethernet Switches Secure Deployment Guide (SDG)</i>	GFK-3063
<i>PACSystems Industrial PROFINET Managed Ethernet Switches MRP Application Guide</i>	GFK-2070
<i>PACSystems Industrial PROFINET Managed Ethernet Switches Installation & Maintenance Requirements</i>	GFK-3098

In addition to these manuals, datasheets and product update documents describe individual modules and product revisions. The most recent PACSystems documentation is available on the GE Intelligent Platforms support website <http://geautomation.com/support>

1.3 Scope

This reference guide describes the commands and parameters of the Command Line Interface (CLI) as implemented in the current version of GLM series software. These commands are used to set-up, administer and maintain the system.

1.4 Access to Hardware Interface

Access to the hardware interface is by a terminal (or computer with terminal emulation software). Requirements for the terminal are:

- RS-232 ASCII port
- Selectable transmission baud rate
- Full alphanumeric capability
- Selectable odd/even or no parity check

1.5 Introduction

Access to the Switch is protected by a logon security system. You can log on to the switch with the user name and password. After three failed logon attempts, the system refuses further attempts.

After you log on, the system monitors the interface for periods of inactivity. If the interface is inactive for too long, you are automatically logged off.

The CLI initial user name is (admin) and password (@admin01). You should change the password as soon as possible, because the initial password is known to anyone who reads this manual. You can also change the user name or add additional user names. Use the “account add” command to enter a new user identification, password and authorization level.

1.6 Connect Interface

Interface	Parameter
Console	Baud rate: 115200bps, Data bit: 8, Parity: None, Stop bit: 1
Telnet	Port 23
SSH	Port 22 (In Windows, you can run terminal emulator such as PuTTY)

1.7 Screen Description

1. Connecting to GLM Ethernet port (RJ45 Ethernet port)
2. Key-in the command under Telnet: **telnet 192.0.2.1**
3. Login with default account and password.
Username: admin
Password: @admin01

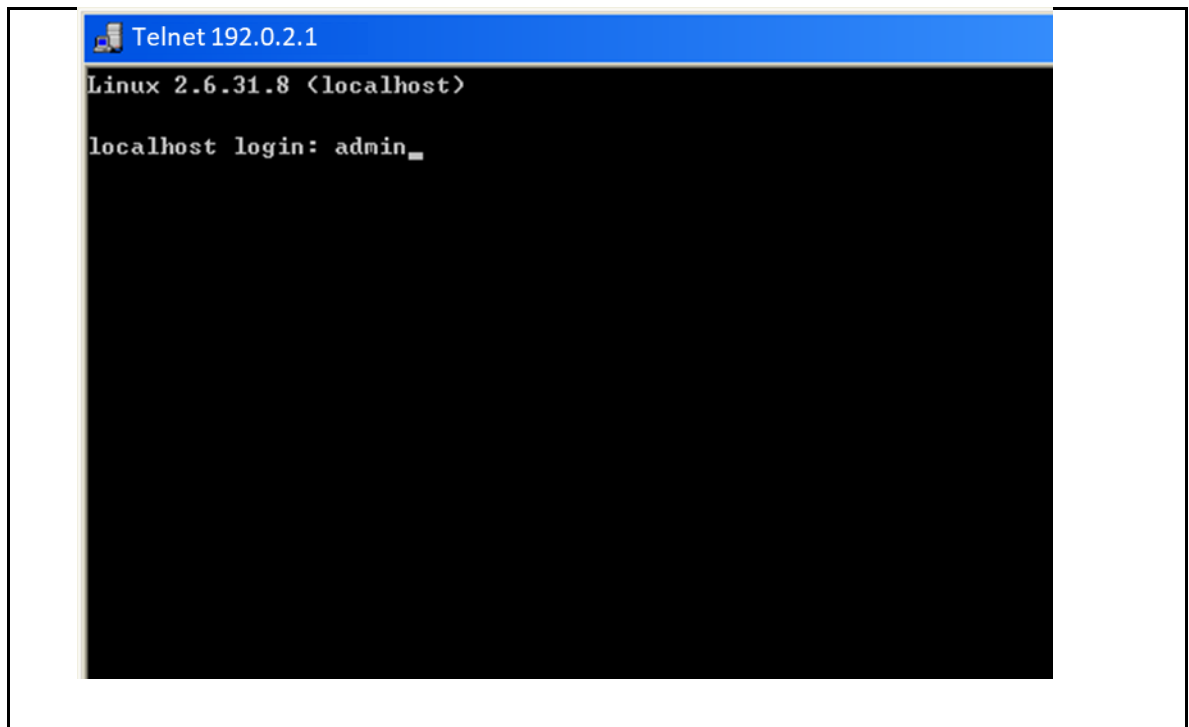


Figure 1-1 Screen Description


1.8 Execution Modes

The CLI contains several execution modes. Users will see different set of commands under different execution modes. Table 1-1 lists all the execution modes and their purposes. When users enter a certain execution mode, the corresponding mode prompt will be displayed automatically on the screen. The mode prompts of all the execution modes are also listed in Table 1-1.

Table 1-1 List of Execution Modes

Mode	Access Level	Prompt
Init Mode	Guest	>
Enable Mode	Guest	#
Config Mode	Guest	(config)#
Alarm Profile Config Mode	Engineer	(alm-profile-config)#
Gigabit Interface Config Mode	Engineer	(config-if)#
Vlan Interface Config Mode	Engineer	(vlan-intf-conf)#
RingV2 Group Config Mode	Engineer	(ring)#
SNMP Server Host Config Mode	Engineer	(config-snmps-host)#

Note: Refer to Figure below for command to enter specific execution mode.

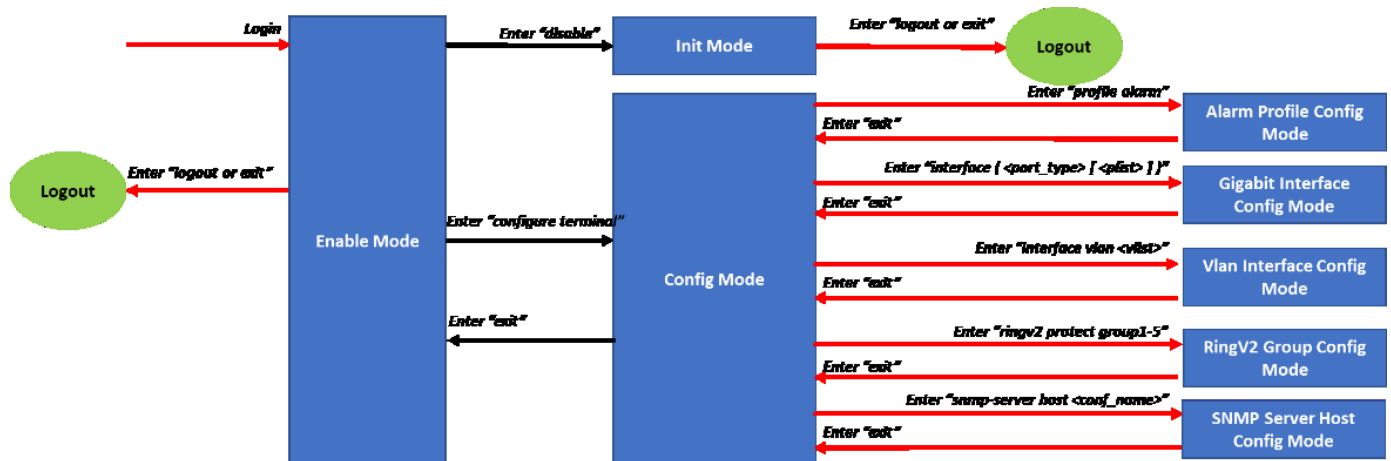

1.9 Getting help

The user can get help by entering a question mark '?' at each position in the command. The displayed result depends on the execution mode and previous input.

1.10 Terminal Key Function

Following is the list of all the terminal keys and their function.

Table 1-2 List of Terminal Keys

ENTER	Run a CLI config script
CTRL-M	
TAB	Tab completion. If tab is pressed after a non-whitespace character, complete the word before the Tab. If tab is pressed after a whitespace character, complete the next word.
CTRL-I	
?	Display available commands If ? is pressed after a non-whitespace character, show possible choices for this word. If ? is pressed after a whitespace character, show possible choices for the next word.
<Up Arrow>	Up history
CTRL-P	
<Down Arrow>	Down history
CTRL-N	
Home	Move the cursor to the beginning of the input line
CTRL-A	
End	Move the cursor to the end of the input line
CTRL-E	
<Left Arrow>	Move the cursor backward
CTRL-B	
<Right Arrow>	Move the cursor forward
CTRL-F	
BACKSPACE	Erase the character before the cursor
CTRL-H	

1.11 Notation Conventions

The notation conventions for the parameter syntax of each CLI command are as follows:

- Parameters enclosed in [] are optional.
- Parameter values are separated by a vertical bar “|” only when one of the specified values can be used.
- Parameter values are enclosed in { } when you must use one of the values specified.

Chapter 2 Command Descriptions

2.1 Init. Mode Commands

The commands in this section (except 'enable' command) can be executed under all command modes. These commands are global commands.

2.1.1 *exit*

Description	Exit current mode and quit CLI.
Syntax	exit
Parameter	None

2.1.2 *configure terminal*

Description	Enter configuration mode.
Syntax	configure terminal
Parameter	None

2.1.3 *enable*

Description	Enter enable mode.
Syntax	enable
Parameter	None

2.1.4 *Show terminal*

Description	Show CLI environment variables
Syntax	show terminal
Parameter	None

2.1.5 *Show history*

Description	Show command history (Note: commands issued in one execution mode only appear in history of that execution mode)
Syntax	show history
Parameter	None

2.1.6 *Show clock*

Description	Show current time
Syntax	show clock [detail]
Parameter	None

2.1.7 *Show clock detail*

Description	Show detailed information
Syntax	show clock detail
Parameter	None

2.2 *Enable Mode Commands*

All the “show -” commands in this section can also be executed under any other command mode except Initialize Mode.

2.2.1 *configure terminal*

Description	Enter configuration mode.
Syntax	configure
Parameter	None

2.2.2 *disable*

Description	Enter init mode.
Syntax	disable
Parameter	None

2.2.3 *show access management*

Description	Access management configuration	
Syntax	show access management [statistics <access_id_list>]	
Parameter		
	Name	Description
	statistics	Statistics data
	access_id_list	ID of access management entry

2.2.4 *show access-list*

Description	Access list	
Syntax	<pre>show access-list [interface [(<port_type> [<v_port_type_list>])]] [rate- limiter [<rate_limiter_list>]] [ace statistics [<ace_list>]]</pre> <pre>show access-list ace-status[static] [link-oam] [loop-protect] [dhcp] [ptp] [upnp] [arp-inspection] [mep] [ipmc] [ip-source-guard] [ip-mgmt] [conflicts] [switch <switch_list>]</pre>	
Parameter		
	Name	Description
	interface	Select an interface to configure
	ace-status	The local ACEs status
	port_type	GigabitEthernet, 1 Gigabit Ethernet Port
	v_port_type_list	PORT_LIST, Port list in 1/1-8
	rate-limiter	Rate limiter
	rate_limiter_list	<RateLimiterList : 1~16> Rate limiter ID
	ace	Access list entry
	statistics	Traffic statistics
	ace_list	<AceId : 1~256> ACE ID
	static	The ACEs that are configured by users manually
	loop-protect	The ACEs that are configured by Loop Protect module
	ipmc	The ACEs that are configured by IPMC module
	ip-source-guard	The ACEs that are configured by IP Source Guard module
	dhcp	The ACEs that are configured by DHCP module
	conflicts	The ACEs that did not get applied to the hardware due to hardware limitations
	arp-inspection	The ACEs that are configured by ARP Inspection module

2.2.5 *show aggregation*

Description	Aggregation	
Syntax	show aggregation [mode]	
Parameter		
	Name	Description
	mode	Traffic distribution mode

2.2.6 *show alarm*

Description	Alarm information	
Syntax	show alarm { history current }	
Parameter		
	Name	Description
	current	Show alarm current information
	history	Show alarm history information

2.2.7 *show cpu-load*

Description	CPU LOAD	
Syntax	show cpu-load	
Parameter		

2.2.8 *show green-ethernet*

Description	Green Ethernet	
Syntax	show green-ethernet [interface (<port_type> [<port_list>])] show green-ethernet eee [interface (<port_type> [<port_list>])] show green-ethernet energy-detect [interface (<port_type> [<port_list>])] show green-ethernet short-reach [interface (<port_type> [<port_list>])]	
Parameter		
	Name	Description
	eee	Shows green ethernet EEE status for a specific port or ports
	energy-detect	Shows green ethernet energy-detect status for a specific port or ports
	short-reach	Shows green ethernet short-reach status for a specific port or ports
	interface	Shows green ethernet status for a specific port or ports
	port_type	GigabitEthernet, 1 Gigabit Ethernet Port
	port_list	<port_type_list> Port list in 1/1-8

2.2.9 *show ip*

Description	IP information	
Syntax	show ip	
Parameter		
	Name	Description
	arp	Address Resolution Protocol
	dhcp	Dynamic Host Configuration Protocol
	http	Hypertext Transfer Protocol
	igmp	Internet Group Management Protocol
	interface	IP interface status and configuration
	name-server	Domain Name System
	route	Display the current ip routing table
	source	source command
	ssh	Secure Shell
	statistics	Traffic statistics
	verify	verify command

2.2.10 *show ip arp inspection*

Description	Address Resolution Protocol information	
Syntax	show ip arp inspection [interface (<port_type> [<in_port_type_list>]) vlan <in_vlan_list>] show ip arp inspection entry [dhcp-snooping static] [interface (<port_type> [<in_port_type_list>])]	
Parameter		
	Name	Description
	<port_type>	Select an interface to configure
	<in_port_type_list>	Port ID in the format of switch-no/port-no
	<in_vlan_list>	arp inspection vlan list
	dhcp-snooping	learn from dhcp snooping
	static	setting from static entries

2.2.11 *show ip dhcp detailed statistics*

Description	DHCP server traffic statistics	
Syntax	show ip dhcp detailed statistics { server client snooping relay normal-forward combined } [interface (<port_type> [<in_port_list>])]	
Parameter		
	Name	Description
	server	DHCP server
	client	DHCP client
	snooping	DHCP snooping
	relay	DHCP relay
	normal-forward	DHCP normal L2 or L3 forward
	combined	Show all DHCP related statistics
	<port_type>	Select an interface to configure
	<in_port_list>	Port list in 1/1-max number of the port

2.2.12 *show ip dhcp excluded-address*

Description	Show excluded IP database	
Syntax	show ip dhcp excluded-address	
Parameter		
	Name	Description

2.2.13 *show ip dhcp pool*

Description	Show DHCP pools information	
Syntax	show ip dhcp pool [<pool_name>]	
Parameter		
	Name	Description
	<pool_name>	Pool name in 32 characters

2.2.14 *show ip dhcp relay*

Description	Show DHCP relay agent configuration	
Syntax	show ip dhcp relay [statistics]	
Parameter		
	Name	Description
	[statistics]	Show traffic statistics

2.2.15 *show ip dhcp server*

Description	Show DHCP server information	
Syntax	show ip dhcp server	
Parameter		

2.2.16 *show ip dhcp server binding*

Description	Show DHCP address bindings information	
Syntax	show ip dhcp server binding <ip> show ip dhcp server binding [state { allocated committed expired }] [type { automatic manual expired }]	
Parameter		
	Name	Description
	<ip>	IP address in dotted-decimal notation
	allocated	State of binding is allocated
	committed	State of binding is committed
	expired	State of binding is expired
	automatic	Type of binding is automatic binding with infinite lease time
	manual	Type of binding is manual binding for a specific host
	expired	Type of binding is expired binding that is aged out

2.2.17 *show ip dhcp server declined-ip*

Description	Show declined IP address	
Syntax	show ip dhcp server declined-ip show ip dhcp server declined-ip <declined_ip>	
Parameter		
	Name	Description
	<declined_ip>	IP address

2.2.18 *show ip dhcp server statistics*

Description	Show DHCP server statistics
Syntax	show ip dhcp server statistics
Parameter	

2.2.19 *show ip dhcp snooping*

Description	Show Internet Group Management Protocol information	
Syntax	show ip dhcp snooping [interface (<port_type> [<in_port_list>])] show ip dhcp snooping table	
Parameter		
	Name	Description
	<port_type>	Select an interface to configure
	<in_port_list>	Port list in 1/1-max number of the port
	table	show ip dhcp snooping table

2.2.20 *show ip http server*

Description	Hypertext Transfer Protocol information
Syntax	show ip http server secure status
Parameter	

2.2.21 *show ip igmp snooping*

Description	Show Internet Group Management Protocol information	
Syntax	show ip igmp snooping [vlan <v_vlan_list>] [group-database [interface (<port_type> [<v_port_type_list>])] [sfm-information]] [detail] show ip igmp snooping mrouter [detail]	
Parameter		
	Name	Description
	<v_vlan_list>	VLAN identifier(s): VID
	group-database	Multicast group database from IGMP
	<port_type>	Select an interface to configure
	<v_port_type_list>	Port list in 1/1-max number of the port
	[sfm-information]	Including source filter multicast information from IGMP
	[detail]	Detail running information/statistics of IGMP snooping
	mrouter	Multicast router port status in IGMP

2.2.22 *show ip interface*

Description	Show Brief IP interface status
Syntax	show ip interface brief
Parameter	

2.2.23 *show ip name-server*

Description	Show Domain Name System
Syntax	show ip name-server
Parameter	

2.2.24 *show ip route*

Description	Display the current ip routing table
Syntax	show ip route
Parameter	

2.2.25 *show ip source binding*

Description	Show IP source binding information	
Syntax	show ip source binding [dhcp-snooping static] [interface (<port_type> [<in_port_type_list>])]	
Parameter		
	Name	Description
	dhcp-snooping	learn from dhcp snooping
	static	setting from static entries
	<port_type>	Select an interface to configure
	<in_port_type_list>	Port list in 1/1-max number of the port

2.2.26 *show ip ssh*

Description	Show Secure Shell information
Syntax	show ip ssh
Parameter	

2.2.27 *show ip statistics*

Description	Show traffic statistics information	
Syntax	show ip statistics [system] [interface vlan <v_vlan_list>] [icmp] [icmp-msg <type>]	
Parameter		
	Name	Description
	[system]	IPv4 system traffic
	<v_vlan_list>	VLAN identifier(s): VID
	[icmp]	IPv4 ICMP traffic
	icmp-msg	IPv4 ICMP traffic for designated message type
	<type>	ICMP message type ranges from 0 to 255

2.2.28 *show ip telnet*

Description	Show Telnet information
Syntax	show ip telnet
Parameter	

2.2.29 *show ip verify source*

Description	Show verify source information	
Syntax	show ip verify source [interface (<port_type> [<in_port_type_list>])]	
Parameter		
	Name	Description
	<port_type>	Select an interface to configure
	<in_port_type_list>	Port list in 1/1-max number of the port

2.2.30 *show ipmc*

Description	IPMC information	
Syntax	show ipmc profile [<profile_name>] [detail] show ipmc range [<entry_name>]	
Parameter		
	Name	Description
	profile	IPMC profile configuration
	range	A range of IPv4/IPv6 multicast addresses for the profile
	profile_name	<ProfileName : word16> Profile name in 16 char's
	detail	Detail information of a profile
	entry_name	<EntryName : word16> Range entry name in 16 char's

2.2.31 *show ipv6*

Description	IPv6 information	
Syntax	show ipv6	
Parameter		
	Name	Description
	interface	Select an interface to configure
	mld	Multicasat Listener Discovery
	neighbor	IPv6 neighbors
	route	IPv6 routes
	statistics	Traffic statistics

2.2.32 *show lacp*

Description	LACP information	
Syntax	show lacp { internal statistics system-id neighbour }	
Parameter		
	Name	Description
	internal	Internal LACP configuration
	neighbour	Neighbour LACP status
	statistics	Internal LACP statistics
	system-id	LACP system id

2.2.33 *show line*

Description	Alive line information	
Syntax	show line [alive]	
Parameter		
	Name	Description
	alive	Display information about alive lines

2.2.34 *show logging*

Description	Logging information	
Syntax	show logging <log_id> [switch <switch_list>] show logging [info] [warning] [error] [switch <switch_list>]	
Parameter		
	Name	Description
	log_id	<logging_id: 1-4294967295> Logging ID
	error	Error
	info	Information
	warning	Warning

2.2.35 *show ntp status*

Description	Show NTP information.
Syntax	show ntp status
Parameter	None

2.2.36 *show users*

Description	Show account list.
Syntax	show account
Parameter	None

2.2.37 *show running-cfg*

Description	Show running configuration.
Syntax	show running-cfg
Parameter	None

2.2.38 show running-config interface Gigabit

Description	Show port config	
Syntax	show running-config interface (<port_type> [<list>]) [all-defaults]	
Parameter		
	Name	Description
	list	<port_type_list> Port list in 1/1-8
	all-defaults	Include most/all default values

2.2.39 show running-config interface vlan

Description	Show default running configuration.
Syntax	show running-config interface vlan <vlan_list> [all-defaults]
Parameter	None

2.2.40 show running-config all-defaults

Description	Show all default setting
Syntax	show running-config [all-defaults]
Parameter	None

2.2.41 show running-config feature

Description	Show running config feature	
Syntax	show running-config feature <feature_name> [all-defaults]	
Parameter		
	Name	Description
	feature_name	<p>CWORD</p> <p>Valid words are 'GVRP' 'access' 'access-list' 'aggregation' 'alm_profile' 'arp-inspection' 'auth' 'clock' 'dhcp' 'dhcp-snooping' 'dhcp_server' 'dns' 'dot1x' 'green-ethernet' 'http' 'icli' 'ip-igmp-snooping' 'ip-igmp-snooping-port' 'ip-igmp-snooping-vlan' 'ipmc-profile' 'ipmc-profile-range' 'ipv4' 'ipv6' 'ipv6-mld-snooping' 'ipv6-mld-snooping-port' 'ipv6-mld-snooping-vlan' 'lcp' 'lldp' 'logging' 'loop-protect' 'mac' 'monitor' 'mstp' 'mvr' 'mvr-port' 'ntp' 'phy' 'port' 'port-security' 'pvlan' 'qos' 'rmon' 'snmp' 'source-guard' 'ssh' 'tring_g1' 'tring_g2' 'tring_g3' 'user' 'vlan' 'voice-vlan' 'web-privilege-group-level'</p>
	all-defaults	Include most/all default values

2.2.42 *show running-config line*

Description	Line information	
Syntax	show running-config line { console vty } <list> [all-defaults]	
Parameter		
	Name	Description
	console	Console
	vty	VTY
	list	<range_list> List of console/VTYs
	all-defaults	Include most/all default values

2.2.43 *show running-config vlan*

Description	VLAN information	
Syntax	show running-config vlan <list> [all-defaults]	
Parameter		
	Name	Description
	list	<vlan_list> List of VLAN numbers
	all-defaults	Include most/all default values

2.2.44 *show version*

Description	Show firmware hardware and software status update status.
Syntax	show version
Parameter	None

2.2.45 *show clock*

Description	Show current time.
Syntax	Show clock
Parameter	None

2.2.46 *show show mac address table*

Description	Show MAC learning table.
Syntax	show mac address-table [conf static aging-time { { learning count } [interface <port_type> [<port_type_list>]] } { address <mac_addr> [vlan <vlan_id>] } vlan <vlan_id> interface <port_type> [<port_type_list>]]
Parameter	None

2.2.47 show mac address table conf

Description	User added static MAC addresses	
Syntax	show mac address-table [conf static aging-time { { learning count } [interface (<port_type> [<v_port_type_list>])] } { address <v_mac_addr> [vlan <v_vlan_id>] } vlan <v_vlan_id_1> interface (<port_type> [<v_port_type_list_1>])]	
Parameter		
	Name	Description

2.2.48 show mac address table count

Description	Total number of MAC addresses	
Syntax	show mac address-table [conf static aging-time { { learning count } [interface (<port_type> [<v_port_type_list>])] } { address <v_mac_addr> [vlan <v_vlan_id>] } vlan <v_vlan_id_1> interface (<port_type> [<v_port_type_list_1>])]	
Parameter		
	Name	Description

2.2.49 show mac address table learning

Description	Learn/disable/secure stat	
Syntax	show mac address-table [conf static aging-time { { learning count } [interface (<port_type> [<v_port_type_list>])] } { address <v_mac_addr> [vlan <v_vlan_id>] } vlan <v_vlan_id_1> interface (<port_type> [<v_port_type_list_1>])]	
Parameter		
	Name	Description

2.2.50 show mac address table static

Description	All static MAC addresses	
Syntax	show mac address-table [conf static aging-time { { learning count } [interface (<port_type> [<v_port_type_list>])] } { address <v_mac_addr> [vlan <v_vlan_id>] } vlan <v_vlan_id_1> interface (<port_type> [<v_port_type_list_1>])]	
Parameter		
	Name	Description

2.2.51 *show mac address table interface*

Description	Show MAC learning table per port.	
Syntax	show mac address-table [interface <port_type> [<port_type_list>]]	
Parameter		
	Name	Description
	<portNo>	Valid values: 1 ~ max number of the port Type: Mandatory

2.2.52 *show mac address vlan <vlanid>*

Description	Show MAC learning table per VLAN index.	
Syntax	show mac address-table { learning count } vlan <vlan_id>	
Parameter		
	Name	Description
	<vlanid>	Valid values: 1~4094 Type: Mandatory

2.2.53 *show mvr*

Description	MVR information	
Syntax	show mvr [vlan <v_vlan_list> name <mvr_name>] [group-database [interface (<port_type> [<v_port_type_list>])] [sfm-information]] [detail]	
Parameter		
	Name	Description
	vlan	Search by VLAN
	v_vlan_list	<vlan_list> MVR multicast VLAN list
	name	Search by MVR name
	mvr_name	<MvrName : word16> MVR multicast VLAN name
	group-database	Multicast group database from MVR
	interface	Search by port
	port_type	GigabitEthernet, 1 Gigabit Ethernet Port
	v_port_type_list	PORT_LIST, Port list in 1/1-8
	sfm-information	Including source filter multicast information from MVR
	detail	Detail information/statistics of MVR group database

2.2.54 *show fdb static table*

Description	Show static MAC forwarding table.
Syntax	show mac address-table static
Parameter	None

2.2.55 *show fdbstatic interface gigabit <portNo>*

Description	Show static MAC forwarding table per gigabit port.	
Syntax	Show mac address-table { learning count } [interface <port_type> [<port_type_list>]]	
Parameter		
	Name	Description
	<port_type>	Port type in Fast, Giga or Tengiga ethernet
	<portNo>	Valid values: 1 ~ 10 Type: Mandatory

2.2.56 *show fdbstatic vlan <vlanid>*

Description	Show static MAC forwarding table per VLAN index.	
Syntax	show mac address-table { learning count } vlan <vlanid>	
Parameter		
	Name	Description
	<vlanid>	Valid values: 1~4094 Type: Mandatory

2.2.57 *show interface port <port_type_list>*

Description	Show interface information per \port.	
Syntax	show interface <port_type> [<port_type_list>] status	
Parameter		
	Name	Description
	<port_type>	Port type in Fast, Giga or Tengiga ethernet
	<portNo>	Valid values: 1 ~ 10 Type: Mandatory

2.2.58 *show interface port <portNo> statistics*

Description	Show Ethernet counter per gigabit port.	
Syntax	show interface <port_type> [<port_type_list>] statistics	
Parameter		
	Name	Description
	<port_type>	Port type in Fast, Giga or Tengiga ethernet
	<portNo>	Valid values: 1 ~ 10 Type: Mandatory
	counter	Show Gigabit Ethernet counter.

2.2.59 *show platform phy*

Description	PHYs' information	
Syntax	show platform phy [interface (<port_type> [<v_port_type_list>])] show platform phy id [interface (<port_type> [<v_port_type_list>])] show platform phy instance show platform phy status [interface (<port_type> [<v_port_type_list>])]	
Parameter		
	Name	Description
	id	ID
	instance	PHY Instance Information
	status	Status
	interface	Interface
	port_type	GigabitEthernet, 1 Gigabit Ethernet Port
	v_port_type_list	PORT_LIST, Port list in 1/1-8

2.2.60 *show port-security*

Description	Port security	
Syntax	show port-security	
Parameter		
	Name	Description
	port	Show MAC Addresses learned by Port Security
	switch	Show Port Security status
	interface	Interface
	port_type	GigabitEthernet, 1 Gigabit Ethernet Port
	v_port_type_list	PORT_LIST, Port list in 1/1-8

2.2.61 *show profile alarm*

Description	Profile alarm
Syntax	show profile alarm
Parameter	None

2.2.62 *show sflow*

Description	Sflow information	
Syntax	show sflow show sflow statistics { receiver [<rcvr_idx_list>] samplers [interface [<samplers_list>] (<port_type> [<v_port_type_list>])] }	
Parameter		
	Name	Description
	receiver	Show statistics for receiver
	samplers	Show statistics for samplers
	interface	Interface
	port_type	GigabitEthernet, 1 Gigabit Ethernet Port
	v_port_type_list	<port_type_list> Port list in 1/1-8

2.2.63 *show snmp*

Description	SNMP information	
Syntax	<pre>show snmp</pre> <pre>show snmp access [<group_name> { v1 v2c v3 any } { auth noauth priv }]</pre> <pre>show snmp community v3 [<community>]</pre> <pre>show snmp host [<conf_name>] [system] [switch] [interface] [aaa]</pre> <pre>show snmp mib context</pre> <pre>show snmp mib ifmib ifIndex</pre> <pre>show snmp security-to-group [{ v1 v2c v3 } <security_name>]</pre> <pre>show snmp user [<username> <engineID>]</pre> <pre>show snmp view [<view_name> <oid_subtree>]</pre>	
Parameter		
	Name	Description
	access	access configuration
	group_name	<GroupName : word32> group name
	any	any security model
	v1	v1 security model
	v2c	v2c security model
	v3	v3 security model
	auth	authNoPriv Security Level
	noauth	noAuthNoPriv Security Level
	priv	authPriv Security Level
	community	Community
	community	<Community : word127> Specify community name
	host	Set SNMP host's configurations
	conf_name	<ConfName : word32> Name of the host configuration

	aaa	AAA event group
	interface	Interface event group
	switch	Switch event group
	system	System event group
	mib	MIB(Management Information Base)
	context	MIB context
	ifmib	IF-MIB
	ifIndex	The IfIndex that is defined in IF-MIB
	security-to-group	security-to-group configuration
	security_name	<SecurityName : word32> security group name
	user	User
	username	<Username : word32> Security user name
	engineID	<Engidid : word10-32> Security Engine ID
	view	MIB view configuration
	view_name	<ViewName : word32> MIB view name
	oid_subtree	<OidSubtree : word255> MIB view OID

2.2.64 *show spanning-tree*

Description	System Wide Spanning Tree Setting/Status.	
Syntax	show spanning-tree [summary active { interface (<port_type> [<v_port_type_list>]) } { detailed [interface (<port_type> [<v_port_type_list_1>]) } { mst [configuration { <instance> [interface (<port_type> [<v_port_type_list_2>])] }] }] }] }	
Parameter		
	Name	Description
	active	STP active interfaces
	detailed	STP statistics
	interface	Choose port
	mst	Configuration
	summary	STP summary

2.2.65 *show switchport forbidden*

Description	Lookup VLAN Forbidden port entry	
Syntax	show switchport forbidden [{ vlan <vid> } { name <name> }]	
Parameter		
	Name	Description
	vlan	Show forbidden access for specific VLAN id
	vid	VLAN id
	name	Show forbidden access for specific VLAN name
	name	VLAN name

2.2.66 *show vlan*

Description	Show bridge port memberset/status.
Syntax	show vlan
Parameter	None

2.2.67 *show vlan ID*

Description	Show bridge port member set/status per VLAN index (1~4094).	
Syntax	show vlan id <vlanid>	
Parameter		
	Name	Description
	<vlanid>	Valid values: 1~4094 Type: Mandatory.

2.2.68 *show vlan name*

Description	Show bridge port member set/status per VLAN name (32 words).	
Syntax	show vlan name <vword32>	
Parameter		
	Name	Description
	< vword32>	Valid values: 32 words Type: Mandatory.

2.2.69 *show vlan brief*

Description	VLAN summary information	
Syntax	show vlan [id <vlan_list> name <name> brief]	
Parameter		
	Name	Description
	id	VLAN status by VLAN id
	vlan_list	<vlan_list> VLAN IDs 1-4095
	name	VLAN status by VLAN name
	name	<vword32> A VLAN name
	brief	VLAN summary information

2.2.70 *show vlan ip-subnet*

Description	Show VLAN ip-subnet entries	
Syntax	show vlan ip-subnet [id <subnet_id>]	
Parameter		
	Name	Description
	id	Show a specific ip-subnet entry
	subnet_id	<1-128> The specific ip-subnet to show

2.2.71 *show vlan mac*

Description	Show VLAN MAC entries	
Syntax	show vlan mac [address <mac_addr>]	
Parameter		
	Name	Description
	address	Show a specific MAC entry
	mac_addr	<mac_ucast> The specific MAC entry to show

2.2.72 *show vlan protocol*

Description	Protocol-based VLAN status	
Syntax	show vlan protocol [eth2 { <etype> arp ip ipx at }] [snap { <oui> rfc-1042 snap-8021h } <pid>] [llc <dsap> <ssap>]	
Parameter		
	Name	Description
	eth2	Ethernet protocol based VLAN status
	etype	0x600-0xffff> Ether Type(Range: 0x600 - 0xFFFF)
	arp	Ether Type is ARP
	ip	Ether Type is IP
	ipx	Ether Type is IPX
	at	Ether Type is AppleTalk
	llc	LLC-based VLAN status
	dsap	<0x0-0xff> DSAP (Range: 0x00 - 0xFF)
	ssap	<0x0-0xff> SSAP (Range: 0x00 - 0xFF)
	snap	SNAP-based VLAN status
	oui	<0x0-0xffff> SNAP OUI (Range 0x000000 - 0xFFFFF)
	rfc-1042	SNAP OUI is rfc-1042
	snap-8021h	SNAP OUI is 8021h

2.2.73 *show vlan status*

Description	Show the VLANs configured for each interface	
Syntax	show vlan status [interface (<port_type> [<plist>])] [combined admin nas mvr voice-vlan mstp erps vcl evc gvrp all conflicts]	
Parameter		
	Name	Description
	admin	Show the VLANs configured by administrator
	all	Show all VLANs configured
	combined	Show the VLANs configured by a combination
	conflicts	Show VLANs configurations that has conflicts
	gvrp	Show the VLANs configured by GVRP
	interface	Show the VLANs configured for a specific interface(s)

	mstp	Show the VLANs configured by MSTP.
	mvr	Show the VLANs configured by MVR
	nas	Show the VLANs configured by NAS
	vcl	Show the VLANs configured by VCL
	voice-vlan	Show the VLANs configured by Voice VLAN

2.2.74 *show qos-queue-mapping*

Description	Show CoS queue mapping table.
Syntax	show qos maps
Parameter	None

2.2.75 *show interface ports <portNo> priority*

Description	Show QoS per gigabit port.	
Syntax	show interface <port_type> [<port_type_list>] statistics { priority [<0~7>] }	
Parameter		
	Name	Description
	priority [<0~7>]	Valid values: 0~7 Type: Mandatory
	<port_type>	Port type in Fast, Giga or Tengiga ethernet
	<portNo>	Valid values: 0~ 10 Type: Mandatory

2.2.76 *show queue-shaper*

Description	Show queue shaper information.
Syntax	show queue-shaper
Parameter	None

2.2.77 *show port-shaper*

Description	Show port shaper information.
Syntax	show port-shaper
Parameter	None

2.2.78 *show pvlan [<pvlan_list>]*

Description	PVLAN ID	
Syntax	show pvlan [<pvlan_list>]	
Parameter		
	Name	Description
	pvlan_list	PVLAN ID to show configuration for

2.2.79 *show pvlan isolation [interface <port_type> [<port_type_list>]]*

Description	Show all port isolation information.	
Syntax	show pvlan isolation [interface <port_type> [<port_type_list>]]	
Parameter	None	
	Name	Description
	<port_type>	Port type in Fast, Giga or Tengiga ethernet
	<portNo>	Valid values: 1 ~ 10 Type: Mandatory

2.2.80 *show interface gigabit <portNo> port-isolation*

Description	Show isolation information per gigabit port.	
Syntax	show pvlan isolation [interface <port_type> [<port_type_list>]]	
Parameter		
	Name	Description
	<portNo>	Valid values: 1 ~ 10 Type: Mandatory

2.2.81 *show qos interface*

Description	QoS interface information	
Syntax	show qos [{ interface [(<port_type> [<port>])] }]	
Parameter		
	Name	Description
	interface	Interface
	port_type	GigabitEthernet, 1 Gigabit Ethernet Port
	port	PORT_LIST, Port list in 1/1-8

2.2.82 *show qos maps*

Description	MAPS	
Syntax	show qos maps { maps [dscp-cos] [dscp-ingress-translation] [dscp-classify] [cos-dscp] [dscp-egress-translation] }	
Parameter		
	Name	Description
	cos-dscp	Map for cos to dscp
	dscp-classify	Map for dscp classify enable
	dscp-cos	Map for dscp to cos
	dscp-egress-translation	Map for dscp egress translation
	dscp-ingress-translation	Map for dscp ingress translation

2.2.83 *show qos qce*

Description	QCE	
Syntax	show qos { qce [<qce>] }	
Parameter		
	Name	Description
	qce	<Id : 1-256> QCE ID

2.2.84 *show qos storm*

Description	Show QoS storm policer information
Syntax	show qos storm
Parameter	None

2.2.85 *show ringv2*

Description	Show ring protect information
Syntax	show ring
Parameter	None

2.2.86 show rmon

Description		
Syntax	show rmon alarm [<id_list>] show rmon event [<id_list>] show rmon history [<id_list>] show rmon statistics [<id_list>]	
Parameter		
	Name	Description
	alarm	Display the RMON alarm table
	event	Display the RMON event table
	history	Display the RMON history table
	statistics	Display the RMON statistics table
	id_list	<1~65535>, Statistics entry list

2.2.87 show ext-tpid

Description	Show TPID for the VLAN Tag
Syntax	show ext-tpid
Parameter	None

2.2.88 show interface vlan

Description	Show VLAN interface information of all VLANs.
Syntax	show interface vlan
Parameter	None

2.2.89 show interface vlan <vlanid>

Description	Show VLAN interface information of specify VLAN.	
Syntax	show interface vlan <vlanid>	
Parameter		
	Name	Description
	<vlanid>	VLAN ID. Valid values: 1 ~ 4094 Type: Mandatory

2.2.90 show protocol-vlan

Description	Show protocol based VLAN information for all entries.
Syntax	show protocol-vlan
Parameter	None

2.2.91 *show interface gigabit <portNo> vlan*

Description	Show vlan information per port	
Syntax	show interface gigabit <portNo> vlan	
Parameter		
	Name	Description
	<portNo>	Gigabit port. Valid values: 1 ~ 10 Type: Mandatory

2.2.92 *show vlan-trans*

Description	Show VLAN translation table for all
Syntax	show vlan-trans
Parameter	None

2.2.93 *show multicast-fdb*

<i>Description</i>	Show IGMP group membership table
Syntax	show multicast-fdb
Parameter	None

2.2.94 *show dot1x*

Description	Show dot1x information.
Syntax	show dot1x
Parameter	None

2.2.95 *show dot1x status*

Description	Show dot1x stats.
Syntax	show dot1x status [interface <port_type> [<port_type_list>]] [brief]
Parameter	None

2.2.96 *show rfc2544 profile [<word32>]*

Description	show rfc2544 profile name	
Syntax	show rfc2544 profile [<word32>]	
Parameter		
	Name	Description
	<word32>	rfc2544 profile name

2.2.97 Configuration save and replace

Description	Save and install configuration	
Syntax	copy { startup-config running-config <Filename> } { startup-config running-config < Filename > } [syntax-check]	
Parameter		
	Name	Description
	Runningconfig	Currently running configuration
	startup-config	Startup configuration
	syntax-check	Perform syntax check on source configuration
	Filename	File in FLASH or on TFTP server

2.2.98 clearipgmp snoopingstatistics

Description	clear ipgmpsnoopingstatisti	
Syntax	clear ipgmp snooping [vlan<vlan_list>] statistics	
Parameter		
	Name	Description
	vlan_list	VLAN list.

2.2.99 debug

Description	Set prompt for testing	
Syntax	debug prompt	
Parameter		
	Name	Description
	<word>	Word for prompt in 32 char's

2.2.100 delete

Description	Delete one file in flash: file system	
Syntax	delete <word>	
Parameter		
	Name	Description
	<word>	Name of file to delete

2.2.101 help

Description	Description of the interactive help system
Syntax	help
Parameter	

2.2.102 show web

Description	Web privilege	
Syntax	show web privilege group [<group_name>] level	
Parameter		
	Name	Description
	privilege	Web privilege
	group	Web privilege grou
	group_name	CWORD Valid words are 'Aggregation' 'DHCP' 'Debug' 'Dhcp_Client' 'Diagnostics' 'EEE' 'Green_Ethernet' 'IP2' 'IPMC_Snooping' 'LACP' 'LLDP' 'Loop_Protect' 'MAC_Table' 'MVR' 'Maintenance' 'Mirroring' 'NTP' 'Ports' 'Private_VLANs' 'QoS' 'RPC' 'Security' 'Spanning_Tree' 'System' 'Timer' 'VCL' 'VLANs' 'Voice_VLAN' 'XXRP' 'sFlow'
	level	Web privilege group level

2.3 Configure Mode Commands

Commands that can be executed under Configure Mode

2.3.1 interface gigabit <portNo>

Description	Gigabit Ethernet interface. (enter gigabit interface mode)	
Syntax	interface gigabit <portNo>	
Parameter		
	Name	Description
	<portNo>	Valid values: 1 ~ 10 Type: Mandatory

2.3.2 *interface vlan <vlanid>*

Description	Vlan Ethernet interface (enter mode of interface vlan)	
Syntax	interface vlan <vlanid>	
Parameter		
	Name	Description
	<vlanid>	Valid values: 1 ~ 4094 Type: Mandatory

2.3.3 *access*

Description	Management configuration	
Syntax	access management	
Parameter		
	Name	Description
	management	Access management configuration

2.3.4 *aggregation mode*

Description	Traffic distribution mode	
Syntax	aggregation mode { dmac ip port smac }	
Parameter	Name	Description
	dmac	Destination MAC affects the distribution
	ip	IP address affects the distribution
	port	IP port affects the distribution
	smac	Source MAC affects the distribution

2.3.5 *alarm history clear*

Description	Clear alarm history	
Syntax	alarm history clear	
Parameter	Name	Description

2.3.6 *banner*

Description	Banner control	
Syntax	banner { LINE exec login motd }	
Parameter		
	Name	Description

	LINE	c banner-text c, where 'c' is a delimiting character
	exec	Set EXEC process creation banner
	login	Set login banner
	motd	Set Message of the Day banner

2.3.7 *default access-list rate-limiter*

Description	Rate limiter	
Syntax	default access-list rate-limiter [<rate_limiter_list>]	
Parameter		
	Name	Description
	RateLimiterId : 1-16	Rate limiter ID

2.3.8 *profile sch*

Description	Enter Scheduling Profile Config Mode
Syntax	profile sch
Parameter	None

2.3.9 *ntp server <1-5> ip-address <ip>*

Description	Set NTP server address.	
Syntax	ntp server <1-5> ip-address { <ipv4_ucast> <ipv6_ucast> <hostname> }	
Parameter		
	Name	Description
	<1-5>	index number
	<ipv4> <ipv6 >	Type: Mandatory
	<hostname>	Server name

2.3.10 *clock timezone*

Description	Set time zone.	
Syntax	clock timezone <word16> <-23-23> [<0-59>]	
Parameter		
	Name	Description
	< word16>	Valid values: please see 'list timezone' Type: Mandatory

	default	Set time zone to default (GMT/UTC). Type: Mandatory
--	---------	---

2.3.11 clock summer-time set [start-time] [end-time]

Description	Set date/time.	
Syntax	clock summer-time <word16> date [<1-12> <1-31> <2000-2097> <hhmm> <1-12> <1-31> <2000-2097> <hhmm> [<1-1440>]]	
Parameter		
	Name	Description
	< word16>	Valid values: please see 'list timezone' Type: Mandatory
	<day>	Valid values: 1 ~ 31 Type: Mandatory
	<month>	Valid values: 1 ~ 12 Type: Mandatory
	<year>	Valid values: 2000-2097 Type: Mandatory
	<minute>	Valid values: 0 ~ 59 Type: Mandatory
	<second>	Valid values: 0 ~ 59 Type: Optional

2.3.12 account add <username>

Description	Add an account.	
Syntax	username <word31> privilege <0-15> password encrypted <word4-44>	
Parameter		
	Name	Description
	< word31>	Valid values: 1 ~ 31 characters Type: Mandatory
	<0-15>	Valid values: 0 ~ 15 Type: Mandatory
	< word4-44>	Valid values: 4-44 characters Type: Mandatory

2.3.13 *account delete <username>*

Description	Delete an account.	
Syntax	no username <word31>	
Parameter		
	Name	Description
	< word31>	Valid values: 1 ~ 31 characters Type: Mandatory

2.3.14 *syslog {enable/disable}*

Description	Disable or enable syslog service.
Syntax	logging on no logging on
Parameter	None

2.3.15 *clear logging*

Description	clear logging	
Syntax	clear logging [info] [warning] [error] [switch <switch_list>]	
Parameter		
	Name	Description
	info	Information
	warning	Warning
	error	Error
	Switch list	List of switch ID, ex, 1,3-5,6

2.3.16 *clear mac address-table*

Description	clear MAC address-table
Syntax	clear mac address-table
Parameter	

2.3.17 *dir*

Description	Directory of all files in flash: file system
Syntax	dir
Parameter	

2.3.18 do

Description	To run exec commands in config mode	
Syntax	do <line>	
Parameter		
	Name	Description
	<line>	Exec Command

2.3.19 duplex

Description	Set duplex mode Note: This command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	duplex { half full auto [half full] }	
Parameter		
	Name	Description
	half	Forced half duplex.
	full	Forced full duplex.
	auto	Auto negotiation of duplex mode.
	[half full]	Advertise half /full duplex.

2.3.20 firmware

Description	Firmware swap and upgrade	
Syntax	firmware { swap upgrade }	
Parameter		
	Name	Description
	swap	Swap between Active and Alternate firmware image
	upgrade	Firmware upgrade

2.3.21 flowcontrol

Description	Enable/Disable flow control. Note: This command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	flowcontrol { on off }	
Parameter		

	Name	Description
	on	Enable flow control.
	off	Disable flow control.

2.3.22 *green-etherneteee*

Description	Powering down of PHYs when there is no traffic.
Syntax	green-etherneteee
Parameter	

2.3.23 *green-etherneteee optimize-for-power*

Description	Set if EEE shall be optimized for least power consumption (else optimized for least traffic latency).
Syntax	green-etherneteee optimize-for-power
Parameter	

2.3.24 *green-etherneteee urgent-queues*

Description	Enables EEE urgent queue. An urgent queue means that latency is kept to a minimum for traffic going to that queue. Note: EEE power savings will be reduced.	
Syntax	green-etherneteee urgent-queues[<range_list>]	
Parameter		
	Name	Description
	range_list	EEE Interface.

2.3.25 *Ip arp inspection*

Description	IP Address Resolution Protocol inspection
Syntax	ip arp inspection
Parameter	

2.3.26 *Ip arp inspection translate*

Description	IP ARP inspection entry interface configuration	
Syntax	ip arp inspection translate [interface <port_type><port_type_id><vlan_id><mac_ucast><ipv4_ucast>]	
Parameter		
	Name	Description
	port_type	Port type in Fast, Giga or Tengigaethernet
	port_type_id	Port ID in the format of switch-no/port-no
	vlan_id	Select a VLAN id to configure
	mac_ucast	Select a MAC address to configure
	ipv4_ucast	Select an IP Address to configure

2.3.27 *Ip arp inspection entry*

Description	arp inspection entry interface config	
Syntax	ip arp inspection entry interface <port_type> <in_port_type_id> <vlan_var> <mac_var> <ipv4_var>	
Parameter		
	Name	Description
	port_type	Port type in Fast, Giga or Tengigaethernet
	in_port_type_id	Port ID in the format of switch-no/port-no
	vlan_var	Select a VLAN id to configure
	mac_var	Select a MAC address to configure
	ipv4_var	Select an IP Address to configure

2.3.28 *ip arp inspection vlan*

Description	IP ARP inspection vlan setting	
Syntax	ip arp inspection vlan <vlan_list>	
Parameter		
	Name	Description
	vlan_list	arp inspection vlan list

2.3.29 *ip dns proxy*

Description	IP DNS proxy service	
Syntax	ipdns proxy	
Parameter		

2.3.30 *ip http server*

Description	IP HTTP web server
Syntax	ip http server
Parameter	HTTP web server is disabled as default value

2.3.31 *ip http secure-redirect*

Description	IP http secure-redirect
Syntax	ip http secure-redirect
Parameter	Http secure-redirect is disabled as default value

2.3.32 *ip http secure-server*

Description	IP Secure HTTP web server
Syntax	ip http secure-server
Parameter	Secure HTTP web server is enabled as default value

2.3.33 *ip source binding interface*

Description	IP source binding entry interface configuration	
Syntax	Ip source binding interface <port_type> <port_type_id> <vlan_id> <ipv4_ucast> <mac_ucast>	
Parameter		
	Name	Description
	port_type	Port type in Fast, Giga or Tengigaethernet
	port_type_id	Port ID in the format of switch-no/port-no
	vlan_id	Select a VLAN id to configure
	ipv4_ucast	Select an IP Address to configure
	mac_ucast	Select a MAC address to configure

2.3.34 *ip ssh*

Description	IP Secure Shell
Syntax	Ip ssh
Parameter	SSH service is disabled as default value

2.3.35 ip telnet

Description	Enable telnet
Syntax	ip telnet
Parameter	Telnet service is disabled as default value

2.3.36 ip name-server

Description	IP name server	
Syntax	ip name-server { <v_ipv4_ucast> dhcp [interface vlan <v_vlan_id>] }	
Parameter		
	Name	Description
	v_ipv4_ucast	A valid IPv4 unicast address
	dhcp	Dynamic Host Configuration Protocol
	v_vlan_id	VLAN identifier(s): VID

2.3.37 ip route

Description	IP Route	
Syntax	ip route <v_ipv4_addr> <v_ipv4_netmask> <v_ipv4_gw>	
Parameter		
	Name	Description
	v_ipv4_addr	Network
	v_ipv4_netmask	Netmask
	v_ipv4_gw	Gateway

2.3.38 ip routing

Description	IP routing
Syntax	ip routing
Parameter	

2.3.39 ip verify

Description	IP verify	
Syntax	ip verify [source] [translate]	
Parameter		
	Name	Description
	source	verify source

	translate	ip verify source translate all entries
--	-----------	--

2.3.40 *ipmc profile*

Description	IPMC profile configuration	
Syntax	ipmc profile	
Parameter		

2.3.41 *ipmc range*

Description	A range of IPv4/IPv6 multicast addresses for the profile	
Syntax	ipmc range <word16> { <ipv4_mcast> [<ipv4_mcast>] <ipv6_mcast> [<ipv6_mcast>] }	
Parameter		
	Name	Description
	word16	Range entry name in 16 char's
	ipv4_mcast	Valid IPv4 multicast address
	ipv4_mcast	Valid IPv4 multicast address that is not less than start address
	ipv6_mcast	Valid IPv6 multicast address
	ipv6_mcast	Valid IPv6 multicast address that is not less than start address

2.3.42 *LACP*

Description	LACP system priority	
Syntax	lacp system-priority <v_1_to_65535>	
Parameter		
	Name	Description
	system-priority	System priority
	<v_1_to_65535>	Priority value, lower means higher priority

2.3.43 *line*

Description	Console terminal control	
Syntax	line { <0~16> console 0 vty <0~15> }	
Parameter		
	Name	Description
	<0~16>	List of line numbers
	console	Console terminal line

	vty	Virtual terminal
--	-----	------------------

2.3.44 login host

Description	Domain name and IP address	
Syntax	logging host { <v_ipv4_ucast> <v_word45> }	
Parameter		
	Name	Description
	hostname	Domain name of the log server
	ipv4_ucast	IP address of the log server

2.3.45 login level

Description	Log level	
Syntax	logging level { info warning error }	
Parameter		
	Name	Description
	error	Error
	info	Information
	warning	Warning

2.3.46 login on

Description	Log on
Syntax	logging on
Parameter	

2.3.47 logout

Description	System logout
Syntax	logout
Parameter	

2.3.48 mac address-table aging-time

Description	MAC table entries/configuration	
Syntax	mac address-table aging-time <v_0_10_to_1000000>	
Parameter		
	Name	Description
	<v_0_10_to_1000000>	Aging time in seconds, 0 disables aging

2.3.49 mac address-table static

Description	MAC table entries/configuration	
Syntax	mac address-table static <v_mac_addr> vlan <v_vlan_id> interface (<port_type> [<v_port_type_list>])	
Parameter		
	Name	Description
	<v_mac_addr>	48 bit MAC address
	v_vlan_id	VLAN IDs 1-4095
	port_type	Select an interface to configure
	v_port_type_list	Port list

2.3.50 more

Description	File in FLASH or on TFTP server
Syntax	more <Path>
Parameter	

2.3.51 no

Description	Function disable	
Syntax	no { debug port-securit terminal }	
Parameter		
	Name	Description
	debug	Debugging functions
	port-securit	Port security (psec limit)
	terminal	Set terminal line parameters

2.3.52 ping

Description	The ping function	
Syntax	ping { ip ipv6 }	
Parameter		
	Name	Description
	ip	IP (ICMP) echo
	ipv6	IPv6 (ICMPv6) echo

2.3.53 port-security

Description	Port security	
Syntax	port-security [aging] [time <v_10_to_10000000>]	
Parameter		
	Name	Description
	aging	Enable/disable port security aging
	time	Time in seconds between check for activity on learned MAC addresses
	v_10_to_10000000	<10-10000000> seconds

2.3.54 privilege

Description		
Syntax	privilege { exec configure config-vlan line interface if-vlan ipmc-profile snmps-host stp-aggr dhcp-pool rfc2544-profile } level <privilege> <cmd>	
Parameter		
	Name	Description
	config-vlan	VLAN Configuration Mode
	configure	Global configuration mod
	dhcp-pool	DHCP Pool Configuration Mode
	exec	Exec mode
	if-vlan	VLAN Interface Mode
	interface	Port List Interface Mode
	ipmc-profile	IPMC Profile Mode
	line	Line configuration mode
	rfc2544-profile	RFC2544 Profile Mode
	snmps-host	SNMP Server Host Mode
	stp-aggr	STP Aggregation Mode

2.3.55 reload

Description	System or configuration reset	
Syntax	reload { cold default }	
Parameter		
	Name	Description
	cold	Reload cold
	defaults	Reload defaults without rebooting

2.3.56 rmon

Description	RMON	
Syntax	rmon {alarm event}	
Parameter		
	Name	Description
	alarm	Configure an RMON alarm
	event	Configure an RMON event

2.3.57 rmon alarm

Description	RMON Alarm	
Syntax	rmon alarm <id> <oid_str> <interval> { absolute delta } rising-threshold <rising_threshold> [<rising_event_id>] falling-threshold <falling_threshold> [<falling_event_id>] { [rising falling both] }	
Parameter		
	Name	Description
	id	Alarm entry ID
	ifInDiscards	The number of inbound packets that are discarded even the packets are normal
	flnErrors	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol
	ifInNUcastPkts	The number of broad-cast and multi-cast packets delivered to a higher-layer protocol
	ifInOctets	The total number of octets received on the interface, including framing characters
	ifInUcastPkts	The number of uni-cast packets delivered to a higher-layer protocol

	ifInUnknownProtos	The number of the inbound packets that were discarded because of the unknown or un-support protocol
	ifOutDiscards	The number of outbound packets that are discarded event the packets is normal
	ifOutErrors	The number of outbound packets that could not be transmitted because of errors
	ifOutNUcastPkts	The number of broad-cast and multi-cast packets that request to transmit
	ifOutOctets	The number of octets transmitted out of the interface, including framing characters
	ifOutUcastPkts	The number of uni-cast packets that request to transmit
	interval	Sample interval
	absolute	Test each sample directly
	delta	Test delta between samples
	rising_threshold	<-2147483648-2147483647> rising threshold value
	rising_event_id	<0-65535> Event to fire on rising threshold crossing
	falling_threshold	<-2147483648-2147483647> falling threshold value
	falling_event_id	<0-65535> Event to fire on falling threshold crossing
	both	Trigger alarm when the first value is larger than the rising threshold or less than the falling threshold (default)
	falling	Trigger alarm when the first value is less than the falling threshold
	rising	Trigger alarm when the first value is larger than the rising threshold

2.3.58 rmon alarm

Description	RMON Event	
Syntax	rmon event <id> [log] [trap <community>] { [description <description>] }	
Parameter		
	Name	Description
	description	Specify a description of the event
	log	Generate RMON log when the event fires
	trap	Generate SNMP trap when the event fires

2.3.59 terminal

Description	Terminal control	
Syntax	terminal{ editing exec-timeout help history length width }	
Parameter		
	Name	Description
	editing	Enable command line editing
	exec-timeout	Set the EXEC timeout
	help	Description of the interactive help system
	history	Control the command history function
	length	Set number of lines on a screen
	width	Set width of the display terminal

2.3.60 vlan <vlanid>

Description	Configure VLAN.	
Syntax	vlan <vlanid>	
Parameter		
	Name	Description
	<vlanid>	Create an empty VLAN index. Valid values: 1 ~ 4094 Type: Mandatory

2.3.61 vlan <vlanid> <name>

Description	Configure VLAN's name.	
Syntax	vlan <vlanid> <name>	
Parameter		
	Name	Description
	<vlanid>	Create an empty VLAN index. Valid values: 1 ~ 4094 Type: Mandatory
	<name>	VLAN Name (0~31) String Size: 0~31 Type: Mandatory

2.3.62 *vlan disable <vlanid>*

Description	Delete VLAN memberset/setting.	
Syntax	vlan disable <vlanid>	
Parameter		
	Name	Description
	<vlanid>	Valid values: 1 ~ 4094 Type: Mandatory

2.3.63 *aging <time>*

Description	Configure aging time for a bridge port.	
Syntax	aging <time>	
Parameter		
	Name	Description
	<time>	Valid values: 10 ~ 1000000 (seconds) Type: Mandatory

2.3.64 *jumboframe {enable|disable}*

Description	Set jumbo frame settings.	
Syntax	jumboframe {enable disable}	
Parameter		
	Name	Description
	enable	Enable jumbo frame.
	disable	Disable jumbo frame.

2.3.65 *jumboframe mtu <value>*

Description	MTU size.	
Syntax	jumboframe mtu <value>	
Parameter		
	Name	Description
	<value>	Range. Valid values: 1536~9000 (bytes) Type: Mandatory

2.3.66 media-type

Description	Configure media-type	
Syntax	media-type { rj45 sfp dual }	
Parameter		
	Name	Description
	rj45	rj45 interface (copper interface).
	sfp	sfp interface (fiber interface).
	dual	Dual media interface (cu & fiber interface).

2.3.67 monitor destination interface

Description	The destination port. That is the port that traffic should be mirrored to.	
Syntax	monitor destination interface <port_type> <port_type_id>	
Parameter		
	Name	Description
	<port_type>	Port type
	<port_type_id>	Port Number

2.3.68 monitor source interface

Description	Mirror Interface traffic	
Syntax	monitor source { { interface (<port_type> [<v_port_type_list>]) } }	
Parameter		
	Name	Description
	port_type	1 Gigabit Ethernet Port
	v_port_type_lis	Port list

2.3.69 monitor source cpu

Description	Mirror Interface traffic	
Syntax	monitor source { cpu [<cpu_switch_range>] } { both rx tx }	
Parameter		
	Name	Description
	both	Setting source port to both will mirror both ingress and egress traffic
	rx	Setting source port to rx will mirror ingress traffic
	tx	Setting source port to tx will mirror egress traffic

2.3.70 speed

Description	Configures interface speed. If you use 10, 100, or 1000 keywords with the auto keyword the port will only advertise the specified speeds.	
Syntax	speed { 10g 2500 1000 100 10 auto { [10] [100] [1000] } }	
Parameter		
	Name	Description
	1000	1Gbps
	100	100Mbps
	10	10Mbps
	auto	Auto negotiation
	[10]	10Mbps
	[100]	100Mbps
	[1000]	1Gbps

2.3.71 traps

Description	trap event configuration	
Syntax	traps [aaa authentication] [system [coldstart] [warmstart]] [switch [stp] [rmon]]	
Parameter		
	Name	Description
	aaa authentication	AAA authentication fail event
	coldstart	Cold start event
	warmstart	Warm start event
	stp	STP event
	rmon	RMON event

2.3.72 upnp

Description	Set UPnP's configurations	
Syntax	upnp	
Parameter		

2.3.73 upnp advertising-duration

Description	Set UPnP's advertising duration	
Syntax	upnp advertising-duration <100-86400>	
Parameter		
	Name	Description
	100-86400	advertising duration

2.3.74 upnp ttl

Description	Set UPnP's TTL value	
Syntax	upnp ttl<1-255>	
Parameter		
	Name	Description
	1-255	TTL value

2.3.75 username

Description	User account	
Syntax	username <username> privilege <priv> password encrypted <encry_password> username <username> privilege <priv> password none username <username> privilege <priv> password unencrypted <password>	
Parameter		
	Name	Description
	username	<Username : word31> User name allows letters, numbers and underscores
	privilege	Set user privilege level
	priv	User privilege level
	password	Specify the password for the user
	encrypted	Specifies an ENCRYPTED password will follow
	none	NULL password
	unencrypted	Specifies an UNENCRYPTED password will follow

2.3.76 *web*

Description		
Syntax	web privilege group <group_name> level { [cro <cro>] [crw <crw>] [sro <sro>] [srw <srw>] }*1	
Parameter		
	Name	Description
	privilege	Web privilege
	group	Web privilege group
	group_name	Valid words are 'Aggregation' 'DHCP' 'Debug' 'Dhcp_Client' 'Diagnostics' 'EEE' 'Green_Ethernet' 'IP2' 'IPMC_Snooping' 'LACP' 'LLDP' 'Loop_Protect' 'MAC_Table' 'MVR' 'Maintenance' 'Mirroring' 'NTP' 'Ports' 'Private_VLANs' 'QoS' 'RPC' 'Security' 'Spanning_Tree' 'System' 'Timer' 'VCL' 'VLANs' 'Voice_VLAN' 'XXRP' 'sFlow'
	level	Web privilege group level
	cro	Configuration Read-only level
	crw	Configuration Read-write level
	sro	Status/Statistics Read-only level
	srw	Status/Statistics Read-write level
	cro	<Cro : 0-15>
	crw	<Crw : 0-15>
	sro	<Sro : 0-15>
	srw	<Srw : 0-15>

2.3.77 *flow-control {enable|disble}*

Description	Enable/Disable flow-control.	
Syntax	flow-control {enable disble}	
Parameter		
	Name	Description
	enable	Enable flow-control.
	disable	Disable flow-control.

2.3.78 speed

Description	Configure gigabit Ethernet speed and Copper/SFP for gigabit port 7~8. (port1~6 Only support copper, no SFP) (port 9, 10 only support auto)	
Syntax	speed {auto full-1000mbps full-100mbps full-10mbps half-100mbps half-10mbps}	
Parameter		
	Name	Description
	auto	Auto negotiation.
	full-1000mbps	Set 1000Mbps full duplexing.
	full-100mbps	Set 100Mbps full duplexing.
	full-10mbps	Set 10Mbps full duplexing.
	half-100mbps	Set 100Mbps half duplexing.
	half-10mbps	Set 10Mbps half duplexing.

2.3.79 port {enable/disable}

Description	Set interface gigabit port enable or disable.	
Syntax	port {enable/disable}	
Parameter		
	Name	Description
	disable	Turn off gigabit port.
	enable	Turn on gigabit port.

2.3.80 Date/Time

Description	Set device date and time	
Syntax	clock datetime <2000-2037> <1-12> <1-31> <0-23> <0-59> <0-59>	
Parameter		
	Name	Description
	<2000-2037>	year
	<1-12>	month
	<1-31>	Date
	<0-23>	Hour
	<0-59>	minute
	<0-59>	Second

2.4 VLAN Commands (Configuration Mode)

2.4.1 *vlan*

Description	VLAN commands	
Syntax	vlan <vlan_list>	
Parameter		
	Name	Description
	vlan_lis	ISL VLAN IDs 1~4095

2.4.2 *vlan ethertype s-custom-port*

Description	Vlan Ether type for custom S-ports configuration	
Syntax	vlan ethertype s-custom-port <0x0600-0xffff>	
Parameter		
	Name	Description
	0x0600-0xffff	Ethertype (Range: 0x0600-0xffff)

2.4.3 *vlan protocol*

Description		
Syntax	vlan protocol { { eth2 { <0x600-0xffff> arp ip ipx at } } { snap { <0x0-0xffff> rfc_1042 snap_8021h } <0x0-0xffff> } { llc <0x0-0xff> <0x0-0xff> } } group <word16>	
Parameter		
	Name	Description
	0x600-0xffff	Ether Type(Range: 0x600 - 0xFFFF)
	arp	Ether Type is ARP
	ip	Ether Type is IP
	ipx	Ether Type is IPX
	at	Ether Type is AppleTalk
	0x0-0xfffff	SNAP OUI (Range 0x000000 - 0FFFFFFF)
	rfc_1042	SNAP OUI is rfc_1042
	snap_8021h	SNAP OUI is 8021h
	0x0-0xffff	PID (Range: 0x0 - 0xFFFF)
	0x0-0xff	DSAP (Range: 0x00 - 0xFF)
	0x0-0xff	SSAP (Range: 0x00 - 0xFF)

	word16	Group Name (Range: 1 - 16 characters)
--	--------	---------------------------------------

2.4.4 *switchport access vlan*

Description	Set switch access mode of the interface Note: This command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	switchport access vlan <vlan_id>	
Parameter		
	Name	Description
	vlan_id	VLAN ID of the VLAN when this port is in access mode

2.4.5 *switchport forbidden vlan*

Description	Adds or removes forbidden VLANs from the current list of forbidden VLANs Note: This command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	switchport forbidden vlan { add remove } <vlan_list>	
Parameter		
	Name	Description
	add	Add to existing list.
	remove	Remove from existing list.
	vlan_list	VLAN IDs

2.4.6 *switchport hybrid acceptable-frame-type*

Description	Set acceptable frame type on a port Note: This command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	switchport hybrid acceptable-frame-type { all tagged untagged }	
Parameter		
	Name	Description
	all	Allow all frames
	tagged	Allow only tagged frames
	untagged	Allow only untagged frames

2.4.7 *switchport hybrid allowed vlan*

Description	Set allowed VLAN characteristics when interface is in hybrid mode Note: This command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	switchport hybrid allowed vlan { all none [add remove except] <vlan_list> }	
Parameter		
	Name	Description
	all	All VLANs
	none	No VLANs
	add	Add VLANs to the current list
	remove	Remove VLANs from the current list
	except	All VLANs except the following
	vlan_list	VLAN IDs of the allowed VLANs when this port is in hybrid mode

2.4.8 *switchport hybrid egress-tag*

Description	Egress VLAN tagging configuration Note: This command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	switchport hybrid egress-tag { none all [except-native] }	
Parameter		
	Name	Description
	none	No egress tagging
	all	Tag all frames
	except-native	Tag all frames except frames classified to native VLAN of the hybrid port

2.4.9 *switchport hybrid ingress-filtering*

Description	VLAN Ingress filter configuration Note: This command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.
Syntax	switchport hybrid ingress-filtering
Parameter	

2.4.10 *switchport mode*

Description	Set switching mode This command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	switchport mode { access trunk hybrid }	
Parameter		
	Name	Description
	access	Set mode to ACCESS unconditionally
	trunk	Set mode to TRUNK unconditionally
	hybrid	Set mode to HYBRID unconditionally

2.4.11 *switchport trunk allowed vlan*

Description	Set allowed VLAN characteristics when interface is in trunk mode Note: This command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	switchport trunk allowed vlan { all none [add remove except] <vlan_list> }	
Parameter		
	Name	Description
	all	All VLANs
	none	No VLANs
	add	Add VLANs to the current list
	remove	Remove VLANs from the current list
	except	All VLANs except the following
	vlan_list	VLAN IDs of the allowed VLANs when this port is in trunk mode

2.4.12 switchport vlan protocol group

Description	Protocol-based VLAN group commands Note: This command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	switchport vlan protocol group <word16> vlan <vlan_id>	
Parameter		
	Name	Description
	word16	Group Name (Range: 1 - 16 characters)
	vlan_id	VLAN ID required for the group to VLAN mapping (Range: 1-4095)

2.5 DHCP Commands (Configuration Mode)

2.5.1 interface

Description	Interface configuration	
Syntax	interface <port_type> [<port_type_list>]	
Parameter		
	Name	Description
	port_type	Port type in Fast, Giga or Tengigaethernet
	port_type_list	List of Port ID, ex, 1/1,3-5;2/2-4,6

2.5.2 interface vlan

Description	VLAN interface configurations	
Syntax	interface vlan<vlan_list>	
Parameter		
	Name	Description
	vlan_list	List of VLAN interface numbers, 1~4095

2.5.3 ip address

Description	IPv4 address configurations Note: The command is only valid in “Vlan Interface Config Mode”. Refer to section 1.8 for information to enter “Vlan Interface Config Mode” mode.	
Syntax	ip address { { <ipv4_addr><ipv4_netmask> } { dhcp [fallback <ipv4_addr><ipv4_netmask> [timeout <uint>]] } }	

Parameter		
	Name	Description
	ipv4_addr	IP address
	ipv4_netmask	IP netmask
	dhcp	Enable DHCP
	fallback	DHCP fallback settings
	ipv4_addr	DHCP fallback address
	ipv4_netmask	DHCP fallback netmask
	timeout	DHCP fallback timeout
	uint	DHCP fallback timeout in seconds

2.5.4 *ip name-server*

Description	Interface Internet Protocol config commands Domain Name System	
Syntax	ip name-server { <ipv4_ucast> dhcp [interface vlan<vlan_id>] }	
Parameter		
	Name	Description
	ipv4_ucast	A valid IPv4 unicast address
	vlan_id	VLAN identifier(s): VID

2.5.5 *ip dhcp excluded-address*

Description	Prevent DHCP from assigning certain addresses	
Syntax	ip dhcp excluded-address <low_ip> [<high_ip>]	
Parameter		
	Name	Description
	low_ip	Low IP address
	high_ip	High IP address

2.5.6 *ip dhcp pool*

Description	Pool name in 32 characters
Syntax	ip dhcp pool <pool_name>
Parameter	

2.5.7 *ip dhcp server*

Description	DHCP Server
Syntax	ip dhcp server
Parameter	

2.5.8 *ip dhcp relay*

Description	DHCP relay agent configuration
Syntax	ipdhcp relay
Parameter	

2.5.9 *ip dhcp relay information option*

Description	IP DHCP relay information option (Option 82)
Syntax	ipdhcp relay information option
Parameter	

2.5.10 *ip dhcp retry interface vlan*

Description	Restart the DHCP query process	
Syntax	ipdhcp retry interface vlan <vlan_id>	
Parameter		
	Name	Description
	vlan_id	Vlan ID

2.5.11 *ip dhcp snooping*

Description	IP DHCP snooping
Syntax	ipdhcp snooping
Parameter	

2.5.12 *ip helper-address*

Description	DHCP relay server	
Syntax	ip helper-address <v_ipv4_ucast>	
Parameter		
	Name	Description
	Ip : ipv4_ucast	IP address of the DHCP relay server

2.5.13 *ipv6 address*

Description	Configure the IPv6 address of an interface Note: The command is only valid in “Vlan Interface Config Mode”. Refer to section 1.8 for information to enter “Vlan Interface Config Mode” mode.	
Syntax	ipv6 address <ipv6_subnet>	
Parameter		
	Name	Description
	ipv6_subnet	IPv6 prefix x:x::y/z

2.5.14 *ipv6mtu*

Description	IPv6 Maximum transmission unit	
Syntax	ipv6 mtu<1280-1500>	
Parameter		
	Name	Description
	1280-1500	MTU value in bytes

2.6 *RingV2 Group Mode Commands (Configuration Mode)*

2.6.1 *ringv2 protect*

Description	To configure ring protection.	
Syntax	ring protect	
Parameter		
	Name	Description
	group1	Configure ring protection v2 group1
	group2	Configure ring protection v2 group2
	group3	Configure ring protection v2 group3

2.6.2 *guard-time*

Description	Set guardtime Note: This command is only valid in “RingV2 Group Config Mode”. Refer to section 1.8 for information to enter “RingV2 Group Config Mode” mode.	
Syntax	guard-time { <ringGuardTimerDef> }	
Parameter		
	Name	Description
	ringGuardTimerDef	<10-3600>, unit: second. Default is 10 seconds

2.6.3 *mode*

Description	Enable/Disable ring group	
Syntax	mode { disable enable }	
Parameter		
	Name	Description
	disable	Set the specified Ring group to Disabled
	enable	Set the specified Ring group to Enabled

2.6.4 *node1 interface GigabitEthernet <portNo>*

Description	Set interface of ring protection node	
Syntax	node1 interface GigabitEthernet <portNo>	
Parameter		
	Name	Description
	<portNo>	Valid values: 1~max port index.

2.6.5 *node2 interface GigabitEthernet <portNo>*

Description	Set interface of ring protection node	
Syntax	Node2 interface GigabitEthernet <portNo>	
Parameter		
	Name	Description
	<portNo>	Valid values: 1~max port index.

2.6.6 *role*

Description	Set role for group	
Syntax	role { ring-master ring-slave coupling-primary coupling-backup dual-homing chain-head chain-tail chain-member b-chain-terminal-1 b-chain-terminal-2 b-chain-central-block b-chain-member }	
Parameter		
	Name	Description
	ring-master	Set role to ring master
	ring-slave	Set role to ring slave
	coupling-primary	Set role to coupling primary
	coupling-backup	Set role to coupling backup
	dual-homing	Set role to dual homing
	chain-head	Set role to chain head
	chain-member	Set role to chain member
	chain-tail	Set role to chain tail
	b-chain-central-block	Set role to balancing chain central block
	b-chain-member	Set role to balancing chain member
	b-chain-terminal-1	Set role to balancing chain terminal 1
	b-chain-terminal-2	Set role to balancing chain terminal 2

2.7 *Spanning Tree (configuration Mode)*

2.7.1 *spanning-tree*

Description	Enable/disable STP on this interface Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	spanning-tree	
Parameter		
	Name	Description

2.7.2 *spanning-tree aggregation*

Description	Spanning Tree protocol	
Syntax	spanning-tree aggregation	
Parameter		
	Name	Description

2.7.3 *spanning-tree auto-edge*

Description	Auto detect edge status Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	1.1.1 <i>spanning-tree auto-edge</i>	
Parameter		
	Name	Description

2.7.4 *spanning-tree bpdu-guard*

Description	Enable/disable BPDU guard Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	spanning-tree bpdu-guard	
Parameter		
	Name	Description

2.7.5 *spanning-tree edge*

Description	Enable edge port Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	spanning-tree edge	
Parameter		
	Name	Description

2.7.6 *spanning-tree edge bpdu-filter*

Description	Enable BPDU filter (stop BPDU tx/rx)	
Syntax	spanning-tree edge bpdu-filter	
Parameter		
	Name	Description

2.7.7 *spanning-tree mode*

Description	Configure Spanning-tree mode	
Syntax	spanning-tree mode { stp rstp mstp }	
Parameter		
	Name	Description
	stp	802.1D Spanning Tree
	rstp	Rapid Spanning Tree (802.1w)
	mstp	Multiple Spanning Tree (802.1s)

2.7.8 *spanning-tree mst cost*

Description	Configure MSTP path cost parameter Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	spanning-tree mst <0-7> cost { <1-200000000> auto }	
Parameter		
	Name	Description
	<0-7>	instance 0-7 (CIST=0, MST2=1...)
	<1-200000000>	STP Cost of this port

2.7.9 *spanning-tree mst port-priority*

Description	Configure MSTP port-priority Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	spanning-tree mst <0-7> port-priority <0-240>	
Parameter		
	Name	Description

	<0-7>	instance 0-7 (CIST=0, MST2=1...)
	<0-240>	STP priority of this port

2.7.10 *spanning-tree mst priority*

Description	Configure MSTP priority	
	The unit of priority is in seconds	
Syntax	spanning-tree mst <0-7> priority <0-61440>	
Parameter		
	Name	Description
	<0-7>	instance 0-7 (CIST=0, MST2=1...)
	<0-61440>	Priority of the instance

2.7.11 *spanning-tree mst vlan*

Description	Configure MSTP VLAN	
Syntax	spanning-tree mst <0-7> vlan <vlan_list>	
Parameter		
	Name	Description
	<0-7>	instance 0-7 (CIST=0, MST2=1...)
	<vlan_list>	Range of VLANs

2.7.12 *spanning-tree mst forward-time*

Description	Configure MSTP forward-time	
	Delay between port states	
Syntax	spanning-tree mst forward-time <4-30>	
Parameter		
	Name	Description
	<4-30>	Delay between port states

2.7.13 spanning-tree mst max-age

Description	Configure MSTP max-age timer	
Syntax	spanning-tree mst max-age <6-40> [forward-time <4-30>]	
Parameter		
	Name	Description
	<6-40>	Max bridge age before timeout
	<4-30>	forward-time

2.7.14 spanning-tree mst max-hops

Description	Configure MSTP bridge max hop count	
Syntax	spanning-tree mst max-hops <6-40>	
Parameter		
	Name	Description
	<6-40>	MSTP bridge max hop count

2.7.15 spanning-tree mst name

Description	Configure name of multiple spanning-tree region	
Syntax	spanning-tree mst name <word32> revision <0-65535>	
Parameter		
	Name	Description
	<word32>	Name of the bridge
	<0-65535>	Revision keyword

2.7.16 spanning-tree mst <instance>

Description	Configure instance per priority of VLAN	
Syntax	spanning-tree mst <instance> priority <prio> spanning-tree mst <instance> vlan <v_vlan_list>	
Parameter		
	Name	Description
	instance	<Instance : 0-7> instance 0-7 (CIST=0, MST2=1...)
	priority	Priority of the instance
	vlan	VLAN keyword
	prio	<Prio : 0-61440> Range in seconds
	v_vlan_list	<vlan_list> Range of VLANs

2.7.17 *spanning-tree recovery*

Description	Configure the error recovery timeout	
Syntax	spanning-tree recovery interval <interval>	
Parameter		
	Name	Description
	interval	The interval
	interva	Interval : 30-86400> Range in seconds

2.7.18 *spanning-tree transmit*

Description	Configure max number of transmit BPDUs per second	
Syntax	spanning-tree transmit hold-count <holdcount>	
Parameter		
	Name	Description
	hold-count	Max number of transmit BPDUs per sec
	holdcount	<Holdcount : 1-10> 1-10 per sec, 6 is default

2.8 *sFlow Configure Command (configuration Mode)*

2.8.1 *sflow*

Description	Enables/disables flow sampling on this port. Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	sflow [<range_list>]	
Parameter		
	Name	Description
	< range_list >	Sampler instance

2.8.2 *sflow agent-ip*

Description	The agent IP address used as agent-address in UDP datagrams. Defaults to IPv4 loopback address.	
Syntax	sflow agent-ip{ ipv4 <ipv4_addr> ipv6 <ipv6_addr> }	
Parameter		
	Name	Description

	< ipv4_addr >	Ipv4 address
	< ipv6_addr>	ipv6 address

2.8.3 *sflow collector-address*

Description	Sflow runtime, see sflow_icli_functions	
Syntax	1.1.2 <i>sflow collector-address [receiver <range_list>] [<word>]</i>	
Parameter		
	Name	Description
	< range_list >	Sampler instance

2.8.4 *sflow max-datagram-size*

Description	Statistics flow Maximum datagram size.	
Syntax	sflow max-datagram-size [receiver <range_list>] <200-1468>	
Parameter		
	Name	Description
	<range_list>	receiver list
	<200-1468>	packet byte

2.8.5 *sflow max-sampling-size*

Description	Specifies the maximum number of bytes to transmit per flow sample. Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	sflow max-sampling-size [sampler <range_list>] [<14-200>]	
Parameter		
	Name	Description
	< range_list >	Sampler instance
	<200-1468>	packet byte

2.8.6 *sflow collector-port*

Description	Collector UDP port	
Syntax	sflow collector-port [receiver <rcvr_idx_list>] <collector_port>	
Parameter		

	Name	Description
	collector_port	<Collector Port : 1-65535> Port number

2.8.7 *sflow sampling-rate*

Description	Specifies the statistical sampling rate. The sample rate is specified as N to sample 1/Nth of the packets in the monitored flows. There are no restrictions on the value, but the switch will adjust it to the closest possible sampling rate. Note: The command is only valid in "Gigabit Interface Config Mode". Refer to section 1.8 for information to enter "Gigabit Interface Config Mode" mode.	
Syntax	sflow sampling-rate [sampler <range_list>] [<1-4294967295>]	
Parameter		
	Name	Description
	< range_list >	Sampler instance
	<1-4294967295>	Sampling rate

2.8.8 *sflow timeout*

Description	Receiver timeout measured in seconds. The switch decrements the timeout once per second, and as long as it is non-zero, the receiver receives samples. Once the timeout reaches 0, the receiver and all its configuration is reset to defaults.	
Syntax	sflow timeout [receiver <range_list>] <0-2147483647>	
Parameter		
	Name	Description
	< range_list >	Sampler instance
	<0-2147483647>	Number of seconds.

2.9 *SNMP Configure Command (Configuration Mode)*

2.9.1 *snmp-server*

Description	Enable SNMP server	
Syntax	snmp-server	
Parameter		
	Name	Description

2.9.2 *snmp-server access*

Description	snmp-server access configuration	
Syntax	snmp-server access < group name > model { v1 v2c v3 any } level { auth noauth priv } [read <word255>] [write <word255>]	
Parameter		
	Name	Description
	< group name >	32 words
	< v1 v2c v3 any >	V1~v3 security model
	< level >	security level
	{ auth noauth priv }	authNoPriv Security Level
		noAuthNoPriv Security Level
		authPriv Security Level
	read	specify a read view for the group
	<word255>	read view name

2.9.3 *snmp-server community v2c*

Description	Set the SNMP v2c community	
Syntax	snmp-server community v2c <word127> [ro rw]	
Parameter		
	Name	Description
	< word127 >	Community word
	< ro >	Read only
	<rw>	Read write

2.9.4 *snmp-server community v3*

Description	S Set the SNMP v3 community	
Syntax	snmp-server community v3 <word127> [<ipv4_addr> <ipv4_netmask>]	
Parameter		
	Name	Description
	< word127 >	Community word
	< ipv4_addr >	IPv4 address
	<ipv4_netmask>	IPv4 netmask

2.9.5 *snmp-server host*

Description	Set SNMP server's configurations	
Syntax	snmp-server host <word32>	
Parameter		
	Name	Description
	< word32 >	Name of the host configuration

2.9.6 *snmp-server host traps*

Description	Set SNMP host's configurations	
Syntax	snmp-server host < Name of the host configuration > traps [linkup] [linkdown] [lldp]	
Parameter		
	Name	Description
	< Name of the host configuration >	Name of the host configuration
	<200-1468>	packet byte
	[linkup]	Link up event
	[linkdown]	Link down event
	[lldp]	LLDP event

2.9.7 *snmp-server trap*

Description	Set SNMP server's configurations	
Syntax	snmp-server trap	
Parameter		
	Name	Description

2.9.8 *snmp-server user*

Description	Set the SNMPv3 user's configurations	
Syntax	snmp-server user <Username> engine-id <Engine ID octet string> [{ md5 <word8-32> sha <word8-40> } [priv { des aes } <word8-32>]]	
Parameter		
	Name	Description
	<Username >	32 words
	<Engine ID octet string>	word10-32
	MD5	Set MD5 protocol

	sha	Set SHA protocol
	<word8-40>	SHA password
	priv	Set Privacy
	{ des aes }	Set DES/AES protocol
	<word8-32>	Set privacy password

2.9.9 *snmp-server version*

Description	Set the SNMP server's version	
Syntax	snmp-server version { v1 v2c v3 }	
Parameter		
	Name	Description
	{ v1 v2c v3 }	SNMP v1,v2c,v3

2.9.10 *snmp-server view*

Description	Snmp MIB view configuration	
Syntax	snmp-server view <word32> <word255> { include exclude }	
Parameter		
	Name	Description
	< word32 >	MIB view name
	< word255>	MIB view OID
	{ include exclude }	Included/Excluded type from the view

2.9.11 *SNMP trap receive ipv6 host*

Description	host configuration	
Syntax	host <ipv6_ucast> [<1-65535>] [traps informs]	
Parameter		
	Name	Description
	ipv6_ucast	IP address of SNMP trap host
	1-65535	UDP port of the trap messages
	traps	Send Trap messages to this host
	informs	Send Inform messages to this host

2.9.12 snmp-server contac

Description	SNMP server contact	
Syntax	snmp-server contact <v_line255>	
Parameter		
	Name	Description
	v_line255	<line255> contact string

2.9.13 snmp-server engine-id

Description	SNMP server engine ID	
Syntax	snmp-server engine-id local <engineID>	
Parameter		
	Name	Description
	local	Set SNMP local engine ID
	engineID	<Engineid : word10-32> local engine ID

2.9.14 snmp-server location

Description	SNMP server location	
Syntax	snmp-server location <v_line255>	
Parameter		
	Name	Description
	v_line255	<line255> location string

2.9.15 snmp-server security-to-group

Description	SNMP server security	
Syntax	snmp-server security-to-group model { v1 v2c v3 } name <security_name> group <group_name>	
Parameter		
	Name	Description
	model	security model
	v1	v1 security model
	v2c	v2c security model
	v3	v3 security model
	name	security user

	security_name	<SecurityName : word32> security user name
	group	security group
	group_name	<GroupName : word32> security group name

2.9.16 *SNMP trap receive ipv4 host*

Description	host configuration	
Syntax	host { <ipv4_ucast> <hostname> } [<1-65535>] [traps informs]	
Parameter		
	Name	Description
	ipv4_ucast	IP address of SNMP trap host
	hostname	hostname of SNMP trap host
	1-65535	UDP port of the trap messages
	traps	Send Trap messages to this host
	informs	Send Inform messages to this host

2.10 *Qos Function Command (Configuration Mode)*

2.10.1 *qos qce*

Description	QCE setting	
Syntax	qos qce { <Id : 1-256> refresh update }	
Parameter		
	Name	Description
	<Id : 1-256>	QCE ID
	refresh	Refresh QCE tables in hardware
	update	Update an existing QCE

2.10.2 *qos storm*

Description	QoS storm	
Syntax	qos storm { unicast multicast broadcast } { { <rate> [kfps] } { 1024 kfps } }	
Parameter		
	Name	Description
	broadcast	Police broadcast frames
	multicast	Police multicast frames
	unicast	Police unicast frames

	<rate>	1024, Rate is 1024 kfps <Rate : 1,2,4,8,16,32,64,128,256,512>Policer rate (default fps)
--	--------	--

2.10.3 qos cos

Description	Class of service configuration Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	qos cos <0-7>	
Parameter		
	Name	Description
	<0-7>	Specific class of service

2.10.4 qos dscp-classify

Description	Set qos dscp-classify. Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	qos dscp-classify { zero selected any }	
Parameter		
	Name	Description

2.10.5 qos dscp-remark

Description	Set qos dscp-remark Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	qos dscp-remark { rewrite remap remap-dp }	
Parameter		
	Name	Description

2.10.6 qos dscp-translate

Description	Enable qos dscp-translate mode Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	qos dscp-translate	

2.10.7 qos map cos-dscp

Description	Configure cos mapping to dscptable	
Syntax	qos map cos-dscp <0~7> dpl <0~1> dscp { <0-63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } }	
Parameter		
	Name	Description
	<0~7>	Cos level
	<0~1>	Specific drop precedence level
	<0-63>	Dscp level
	be	Default PHB(DSCP 0) for best effort traffic
	af11~13	Assured Forwarding PHB 11~13(DSCP 10,12,14)
	af22~23	Assured Forwarding PHB 22~23(DSCP 20,22)
	af31~33	Assured Forwarding PHB 31~33(DSCP 26,28,30)
	Af41~43	Assured Forwarding PHB 41~43(DSCP 34,36,38)
	cs1~7	Class Selector PHB CS1~7 precedence 1~7(DSCP 8*(cs value))
	ef	Expedited Forwarding PHB(DSCP 46)
	va	Voice Admit PHB(DSCP 44)

2.10.8 qos map cos-dscp

Description	Configure dscp mapping to cos table	
Syntax	qos map dscp-cos { <0~63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } } cos <0-7> dpl <dpl>	
Parameter		
	Name	Description
	<0~7>	Cos level
	<0-63>	Dscp level
	be	Default PHB(DSCP 0) for best effort traffic
	af11~13	Assured Forwarding PHB 11~13(DSCP 10,12,14)
	af22~23	Assured Forwarding PHB 22~23(DSCP 20,22)
	af31~33	Assured Forwarding PHB 31~33(DSCP 26,28,30)
	Af41~43	Assured Forwarding PHB 41~43(DSCP 34,36,38)
	cs1~7	Class Selector PHB CS1~7 precedence 1~7(DSCP 8*(cs value))
	ef	Expedited Forwarding PHB(DSCP 46)
	va	Voice Admit PHB(DSCP 44)
	<0~1>	Specific drop precedence level

2.10.9 qos map dscp-egress-translation

Description	Configure dscp egress-translation	
Syntax	<pre>qos map dscp-egress-translation { <0~63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } } <0~1> to { <0-63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } }</pre>	
Parameter		
	Name	Description
	<0~7>	Cos level
	<0-63>	Dscp level
	be	Default PHB(DSCP 0) for best effort traffic
	af11~13	Assured Forwarding PHB 11~13(DSCP 10,12,14)
	af22~23	Assured Forwarding PHB 22~23(DSCP 20,22)
	af31~33	Assured Forwarding PHB 31~33(DSCP 26,28,30)
	Af41~43	Assured Forwarding PHB 41~43(DSCP 34,36,38)
	cs1~7	Class Selector PHB CS1~7 precedence 1~7(DSCP 8*(cs value))
	ef	Expedited Forwarding PHB(DSCP 46)
	va	Voice Admit PHB(DSCP 44)
	<0~1>	Specific drop precedence level

2.10.10 qos map dscp-ingress-translation

Description	Configure dscp ingress-translation	
Syntax	<pre>qos map dscp-ingress-translation { <0~63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } } to { <0-63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } }</pre>	
Parameter		
	Name	Description
	<0~7>	Cos level
	<0-63>	Dscp level
	be	Default PHB(DSCP 0) for best effort traffic
	af11~13	Assured Forwarding PHB 11~13(DSCP 10,12,14)
	af22~23	Assured Forwarding PHB 22~23(DSCP 20,22)
	af31~33	Assured Forwarding PHB 31~33(DSCP 26,28,30)
	Af41~43	Assured Forwarding PHB 41~43(DSCP 34,36,38)
	cs1~7	Class Selector PHB CS1~7 precedence 1~7(DSCP 8*(cs value))
	ef	Expedited Forwarding PHB(DSCP 46)
	va	Voice Admit PHB(DSCP 44)
	<0~1>	Specific drop precedence level

2.10.11 qos policer

Description	Configure qos policer Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	qos policer <unit> [fps] [flowcontrol]	
Parameter		
	Name	Description
	< unit >	Traffic meter
	< fps >	Frame rate

	[flowcontrol]	Enable flowcontrol mode
--	-----------------	-------------------------

2.10.12 qos wrr

Description	Specifies qos wrr mode Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	qos wrr <1-100> <1-100> <1-100> <1-100> <1-100> <1-100>	
Parameter		
	Name	Description
	<1-100>	every level proportion

2.10.13 qos queue-shaper

Description	Configure queue-shaper command Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	qos queue-shaper queue <0~7> <uint> [excess]	
Parameter		
	Name	Description
	<1-100>	every level proportion
	<unit>	Traffic meter
	[excess]	Agree the shaper could be excess or not

2.10.14 qos queue-policer

Description	Configure queue-policer command	
Syntax	qos queue-policer queue <0~7> <uint>	
Parameter		
	Name	Description
	<0~7>	Queue number
	<uint>	Traffic meter

2.10.15 qos shaper <unit>

Description	Configure qos shaper command Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	qos shaper <uint>	
Parameter		
	Name	Description
	<1-100>	every level proportion
	<unit>	Traffic meter

2.11 IGMP Functional Commands (Configuration Mode)

2.11.1 ip igmp host-proxy [leave-proxy]

Description	IGMP proxy for leave configuration	
Syntax	ipigmp host-proxy [leave-proxy]	
Parameter		
	Name	Description
	leave-proxy	IGMP proxy for leave

2.11.2 ip igmp snooping

Description	Snooping igmp	
Syntax	ipigmp snooping	
Parameter		

2.11.3 ip igmp snooping immediate-leave

Description	IP IGMP snooping immediate leave configuration Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	ipigmp snooping immediate-leave	
Parameter		

2.11.4 ip igmp snooping last-member-query-interval

Description	IP IGMP snooping Last Member Query Interval in tenths of seconds Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	ipigmp snooping last-member-query-interval <0-31744>	
Parameter		
	Name	Description
	0-31744	0 - 31744 tenths of seconds

2.11.5 ip igmp snooping max-groups

Description	IGMP group throttling configuration Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	ipigmp snooping max-groups <1-10>	
Parameter		
	Name	Description
	1-10	Maximum number of IGMP group registration

2.11.6 ip igmp snooping mrouter

Description	IPIGMP snooping Multicast router port configuration Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	ipigmp snooping mrouter	
Parameter		

2.11.7 ip igmp snooping querier

Description	IP IGMP querier configuration Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	ipigmp snooping querier { election address <ipv4_ucast> }	
Parameter		
	Name	Description
	election	Act as an IGMP Querier to join Querier-Election
	address	IGMP Querier address configuration

	ipv4_ucast	A valid IPv4 unicast address
--	------------	------------------------------

2.11.8 ip igmp snooping query-interval

Description	IP IGMP snooping Query-Interval in seconds Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	Ip igmp snooping query-interval <1-31744>	
Parameter		
	Name	Description
	1-317	1 - 31744 seconds

2.11.9 ip igmp snooping vlan

Description	ipigmp snooping vlan IDs	
Syntax	ipigmp snooping vlan<vlan_list>	
Parameter		
	Name	Description
	vlan_list	VLAN identifier(s): VID

2.11.10 ip igmp ssm-range

Description	SSM range	
Syntax	ip igmp ssm-range <v_ipv4_mcast> <ipv4_prefix_length>	
Parameter		
	Name	Description
	v_ipv4_mcast	Valid IPv4 multicast address
	ipv4_prefix_length	Length

2.11.11 ip igmp unknown-flooding

Description	IP IGMP flooding unregistered IPv4 multicast traffic	
Syntax	ipigmp unknown-flooding	
Parameter		

2.11.12 clear ip igmp snooping statistics

Description	clear ip igmp snooping statistics	
Syntax	clear ip igmp snooping [vlan<vlan_list>] statistics	
Parameter		

	Name	Description
	vlan_list	VLAN list.

2.12 MVR Functional Commands (Configuration Mode)

2.12.1 mvr

Description	Multicast VLAN Registration configuration	
Syntax	mvr	
Parameter		
	Name	Description

2.12.2 mvr immediate-leave

Description	mvr immediate leave configuration Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	mvr immediate-leave	
Parameter		
	Name	Description

2.12.3 mvr name channel

Description	Multicast VLAN name and channel configuration	
Syntax	mvr name <word16> channel <word16>	
Parameter		
	Name	Description
	name <word16>	MVR multicast VLAN name
	channel <word16>	Profile name in 16 char's

2.12.4 mvr frame priority

Description	Multicast VLAN interface CoS priority	
Syntax	mvr name <word16> frame priority <0-7>	
Parameter		
	Name	Description
	name <word16>	MVR multicast VLAN name
	priority <0-7>	CoS priority ranges from 0 to 7

2.12.5 mvr name <word16> frame tagged

Description	MVR control frame in TX, Tagged IGMP/MLD frames will be sent	
Syntax	mvr name <word16> frame tagged	
Parameter		
	Name	Description
	name <word16>	MVR multicast VLAN name

2.12.6 mvr name <word16> igmp-address <ipv4_ucast>

Description	MVR address configuration used in IGMP	
Syntax	mvr name <word16> igmp-address <ipv4_ucast>	
Parameter		
	Name	Description
	name <word16>	MVR multicast VLAN name
	<ipv4_ucast>	A valid IPv4 unicast address

2.12.7 mvr name <word16> last-member-query-interval <0-31744>

Description	Configure last Member Query Interval in tenths of seconds	
Syntax	mvr name <word16> last-member-query-interval <0-31744>	
Parameter		
	Name	Description
	name <word16>	MVR multicast VLAN name
	<0-31744>	0 - 31744 tenths of seconds

2.12.8 mvr name <word16> mode

Description	Dynamic MVR operation mode	
Syntax	mvr name <word16> mode { dynamic compatible }	
Parameter		
	Name	Description
	dynamic	Dynamic MVR operation mode
	compatible	Compatible MVR operation mode

2.12.9 mvr name <word16> type

Description	MVR port role configuration Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	mvr name <word16> type { source receiver }	
Parameter		
	Name	Description
	source	MVR source port
	receiver	MVR receiver port

2.12.10 mvr vlan

Description	Multicast VLAN Registration configuration	
Syntax	mvr vlan <vlan_list> [name <word16>]	
Parameter		
	Name	Description
	< vlan_list >	MVR multicast VLAN list
	name <word16>	MVR multicast VLAN name in 16 char's

2.12.11 mvr vlan <vlan_list> channel

Description	MVR channel configuration	
Syntax	mvr vlan <vlan_list> channel <word16>	
Parameter		
	Name	Description
	< vlan_list >	MVR multicast VLAN list
	channel <word16>	MVR multicast channel name in 16 char's

2.12.12 mvr vlan <vlan_list> frame priority

Description	Interface CoS priority	
Syntax	mvr vlan <vlan_list> frame priority <0-7>	
Parameter		
	Name	Description
	< vlan_list >	MVR multicast VLAN list
	<0-7>	CoS priority ranges from 0 to 7

2.12.13 mvr vlan <vlan_list> frame tagged

Description	Set tagged IGMP/MLD frames will be sent	
Syntax	mvr vlan <vlan_list> frame tagged	
Parameter		
	Name	Description
	< vlan_list >	MVR multicast VLAN list

2.12.14 mvr vlan <vlan_list> igmp-address

Description	Set tagged IGMP/MLD frames will be sent	
Syntax	mvr vlan <vlan_list> igmp-address <ipv4_ucast>	
Parameter		
	Name	Description
	< vlan_list >	MVR multicast VLAN list
	<ipv4_ucast>	A valid IPv4 unicast address for IGMP

2.12.15 mvr vlan <vlan_list> mode

Description	Dynamic MVR vlan operation mode	
Syntax	mvr vlan <vlan_list> mode { dynamic compatible }	
Parameter		
	Name	Description
	< vlan_list >	MVR multicast VLAN list
	dynamic	Dynamic MVR operation mode
	compatible	Compatible MVR operation mode

2.12.16 mvr vlan <vlan_list> type

Description	MVR vlan role configuration Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode” mode.	
Syntax	mvr vlan <vlan_list> type { source receiver }	
Parameter		
	Name	Description
	< vlan_list >	MVR multicast VLAN list
	source	MVR source port

	receiver	MVR receiver port
--	----------	-------------------

2.13 MLD Functional Commands (Configuration Mode)

2.13.1 ipv6 mld host-proxy

Description	IPv6 MLD proxy configuration	
Syntax	ipv6 mld host-proxy [leave-proxy]	
Parameter		
	Name	Description
	leave-proxy	MLD proxy for leave configuration

2.13.2 ipv6 mld snooping

Description	ipv6 mld snooping
Syntax	ipv6 mld snooping
Parameter	

2.13.3 ipv6 mld snooping compatibility

Description	IPv6 MLD snooping compatibility configuration Note: The command is only valid in “Vlan Interface Config Mode”. Refer to section 1.8 for information to enter “Vlan Interface Config Mode”.	
Syntax	ipv6 mld snooping compatibility { auto v1 v2 }	
Parameter		
	Name	Description
	auto	Compatible with MLDv1/MLDv2
	v1	Forced MLDv1
	v2	Forced MLDv2

2.13.4 ipv6 mld snooping immediate-leave

Description	IPv6 MLD snooping immediate-leave configuration Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode”.	
Syntax	ipv6 mld snooping immediate-leave	
Parameter		

2.13.5 *ipv6 mld snooping last-member-query-interval*

Description	ipv6 mld snooping last member query interval in tenths of seconds Note: The command is only valid in “Vlan Interface Config Mode”. Refer to section 1.8 for information to enter “Vlan Interface Config Mode”.	
Syntax	ipv6 mld snooping last-member-query-interval <0-31744>	
Parameter		
	Name	Description
	0-31744	0 - 31744 tenths of seconds

2.13.6 *ipv6 mld snooping max-groups*

Description	IPv6 MLD group throttling configuration Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode”.	
Syntax	ipv6 mld snooping max-groups <1-10>	
Parameter		
	Name	Description
	1-10	Maximum number of MLD group registration

2.13.7 *ipv6 mld snooping mrouter*

Description	IPv6 MLD group throttling configuration Note: The command is only valid in “Gigabit Interface Config Mode”. Refer to section 1.8 for information to enter “Gigabit Interface Config Mode”.	
Syntax	ipv6 mld snooping mrouter	
Parameter		

2.13.8 *ipv6 mld snooping query-interval*

Description	IPv6 MLD snooping query interval in seconds Note: The command is only valid in “Vlan Interface Config Mode”. Refer to section 1.8 for information to enter “Vlan Interface Config Mode”.	
Syntax	ipv6 mld snooping query-interval <1-31744>	
Parameter		

	Name	Description
	1-31744	1 - 31744 seconds

2.13.9 *ipv6 mld snooping query-max-response-time*

Description	IPv6 MLD snooping querymaxresponse interval in tenths of seconds Note: The command is only valid in “Vlan Interface Config Mode”. Refer to section 1.8 for information to enter “Vlan Interface Config Mode”.	
Syntax	ipv6 mld snooping query-max-response-time <0-31744>	
Parameter		
	Name	Description
	0-31744	0 - 31744 tenths of seconds

2.13.10 *ipv6 mld snooping vlan*

Description	ipv6 mld snooping vlan	
Syntax	ipv6 mld snooping vlan<vlan_list>	
Parameter		
	Name	Description
	vlan_list	VLAN identifier(s): VID

2.13.11 *ipv6 mld ssm-range*

Description	SSM range	
Syntax	ipv6 mld ssm-range <v_ipv6_mcast> <ipv6_prefix_length>	
Parameter		
	Name	Description
	v_ipv6_mcast	Valid IPv6 multicast address
	ipv6_prefix_length	length

2.13.12 *ipv6 mld unknown-flooding*

Description	Flooding unregistered IPv6 multicast traffic	
Syntax	ipv6 mld unknown-flooding	
Parameter		

2.13.13 ipv6 route

Description	IPv6 Route	
Syntax	ipv6 route <v_ipv6_subnet> { <v_ipv6_ucast> interface vlan <v_vlan_id> <v_ipv6_addr> }	
Parameter		
	Name	Description
	v_ipv6_subnet	IPv6 prefix x:x::y/z
	v_ipv6_ucast	IP address of the DHCP relay server
	v_vlan_id	VLAN ID
	v_ipv6_addr	IP address

2.14 LLDP Configure Commands (Configuration Mode)

2.14.1 lldp holdtime

Description	Sets LLDP hold time (The neighbor switch will discard the LLDP information after \"hold time\" multiplied with \"timer\" seconds).	
Syntax	lldp holdtime <2-10>	
Parameter		
	Name	Description
	<2-10>	Holdtime 2-10 seconds

2.14.2 lldp med

Description	LLDP MED		
Syntax	See Description		
Parameter			
	Name	Description	
	datum	Datum (geodetic system) type	
		nad83-mlw	Mean lower low water datum 1983
		nad83-navd88	North American vertical datum 1983
		wgs84	World Geodetic System 1984
	fast	Number of times to repeat LLDP frame transmission at fast start	
		<v_1_to_10>: <1-10>	
	location-tlv	LLDP-MED Location Type Length Value parameter	

		altitude	Altitude parameter
		civic-addr	Civic address information and postal information
		elin-addr	Emergency Location Identification Number, (e.g. E911 and others), such as defined by TIA or NENA.
		latitude	Latitude parameter
		longitude	Longitude parameter
	media-vlan-policy	Use the media-vlan-policy to create a policy, which can be assigned to an interface <Index : 0-31> : Policy id for the policy which is created	

2.14.3 *lldp receive*

Description	Enable/Disable decoding of received LLDP frames.
Syntax	lldp receive

2.14.4 *lldp reinit <1-10>*

Description	LLDP tx reinitialization delay in seconds.	
Syntax	lldp reinit <1-10>	
Parameter		
	Name	Description
	<1-10>	Reinitialization delay time

2.14.5 *lldp timer <5-32768>*

Description	Sets LLDP TX interval (The time between each LLDP frame transmitted in seconds).	
Syntax	lldp timer <5-32768>	
Parameter		
	Name	Description
	<5-32768>	5-32768 seconds.

2.14.6 *lldp tlv-select*

Description	Which optional TLVs to transmit.
--------------------	----------------------------------

Syntax	lldp tlv-select { management-address port-description system-capabilities system-description system-name }	
Parameter		
	Name	Description
	management-address	Enable/Disable transmission of management address
	port-description	Enable/Disable transmission of port description
	system-capabilities	Enable/Disable transmission of system capabilities
	system-description	Enable/Disable transmission of system description
	system-name	Enable/Disable transmission of system name.

2.14.7 *lldp transmission-delay*

Description	Sets LLDP transmission-delay. LLDP transmission delay (the amount of time that the transmission of LLDP frames will be delayed after LLDP configuration has changed) in seconds.)	
Syntax	lldp transmission-delay <1-8192>	
Parameter		
	Name	Description
	<1-8192>	transmission-delay seconds

2.14.8 *lldp transmit*

Description	Enable/Disabled transmission of LLDP frames.
Syntax	lldp transmit
Parameter	

2.15 *GVRP Configure Commands (Configuration Mode)*

2.15.1 *gvrp*

Description	Enable GVRP on port(s)
Syntax	gvrp
Parameter	

2.15.2 *gvrpjoin request vlan*

Description	Emit a Join-Request for test purpose
Syntax	gvrp join-request vlan<vlan_list>

Parameter		
	Name	Description
	vlan_list	List of VLANs

2.15.3 *gvrpleave request vlan*

Description	Emit a leave-Request for test purpose	
Syntax	gvrp leave-request vlan<vlan_list>	
Parameter		
	Name	Description
	vlan_list	List of VLANs

2.15.4 *gvrp max-vlans*

Description	gvrpmaximum number of VLANs	
Syntax	gvrp max-vlans<1-4095>	
Parameter		
	Name	Description
	<1-4095>	A valid range is from 1-4095.

2.15.5 *gvrp time { [join-time <1-20>] [leave-time <60-300>] [leave-all-time <1000-50>] }*

Description	Set gvrp time	
Syntax	gvrp time { [join-time <1-20>] [leave-time <60-300>] [leave-all-time <1000-5000>] }	
Parameter		
	Name	Description
	1-20	join timer, available from 1 to 20
	60-300	leave timer, available from 60 to 300
	1000-5000	leave all timer, available from 1000 to 5000

2.16 *Profile alarm Commands (Configuration Mode)*

2.16.1 *profile alarm*

Description	Profile alarm
Syntax	profile alarm
Parameter	

2.16.2 alarm

Description	Set alarm content	
Syntax	alarm <alarmId> { mask unmask major minor }	
Parameter	101~108: GE-1~8 Port link down	
	Name	Description
	alarmId	151: set Power alarm
	mask	Set alarm as mask, it means event will not be send notify
	unmask	Set alarm as un-mask, it means event will be send notify
	major	Set alarm level as major
	minor	Set alarm level as minor

**GE Automation and Controls
Information Centers**

Headquarters:

1-800-433-2682 or 1-434-978-5100

Global regional phone numbers
are available on our web site

www.geautomation.com

Additional Resources

For more information, please visit
our web site:

www.geautomation.com

Copyright © 2002-2017 General Electric Company. All Rights
Reserved

*Trademark of General Electric Company.

All other brands or names are property of their respective
holders.

