


# PACSystems™ RX3i

## FIBER I/O TERMINAL BLOCK (IC695FTB001)

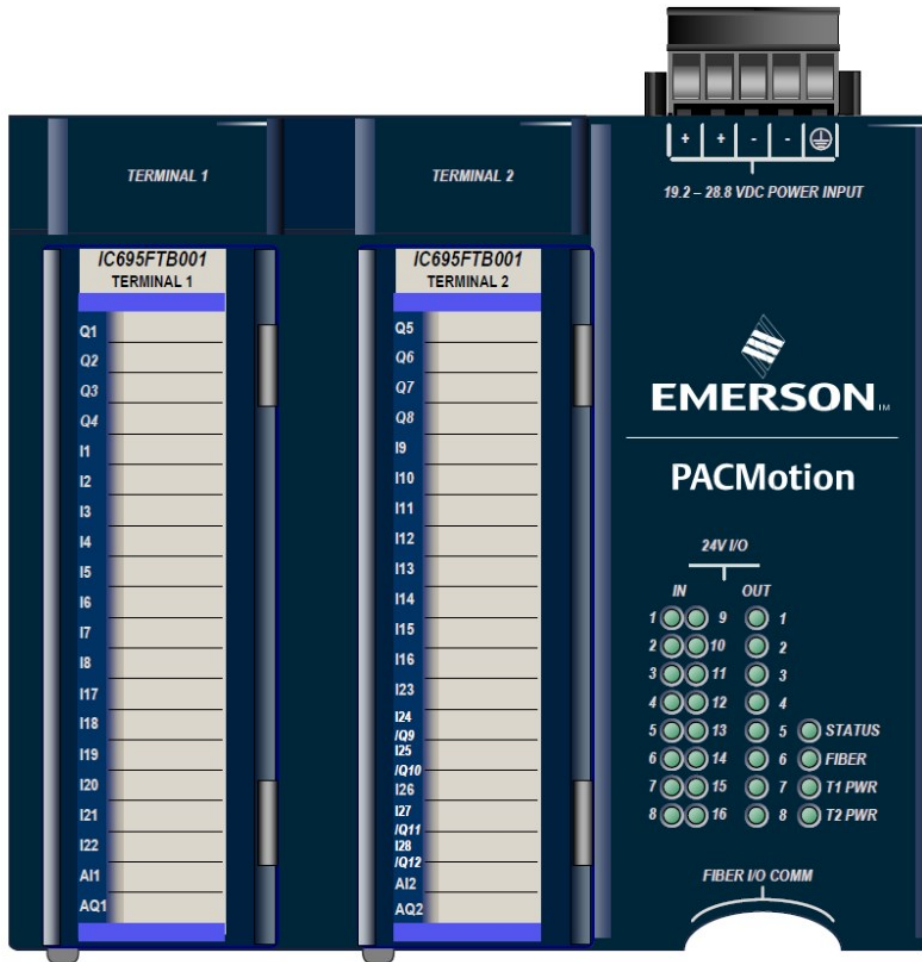

**⚠ WARNING**

Warning notices are used in this publication to emphasize that hazardous voltages, currents, temperatures, or other conditions that could cause personal injury exist in this equipment or may be associated with its use.

In situations where inattention could cause either personal injury or damage to equipment, a Warning notice is used.

---

**⚠ CAUTION**

Caution notices are used where equipment might be damaged if care is not taken.

---

Note: Notes merely call attention to information that is especially significant to understanding and operating the equipment.

These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met during installation, operation, and maintenance. The information is supplied for informational purposes only, and Emerson makes no warranty as to the accuracy of the information included herein. Changes, modifications, and/or improvements to equipment and specifications are made periodically and these changes may or may not be reflected herein. It is understood that Emerson may make changes, modifications, or improvements to the equipment referenced herein or to the document itself at any time. This document is intended for trained personnel familiar with the Emerson products referenced herein.

Emerson may have patents or pending patent applications covering the subject matter in this document. The furnishing of this document does not provide any license whatsoever to any of these patents.

Emerson provides the following document and the information included therein as-is and without warranty of any kind, expressed or implied, including but not limited to any implied statutory warranty of merchantability or fitness for a particular purpose.

## Introduction

The Fiber I/O Terminal Block (FTB) provides an active fiber interface that extends the I/O capability of the IC695PMM335 and IC695PMM345 PACMotion Multi-Axis Motion Controller. The FTB provides a broad range of configurable I/O for the axes on the PMM335 and PMM345, supporting extensive distributed, configurable digital and analog I/O for complex machines.

The FTB allows motion-centric I/O to be distributed up to 100 meters from the RX3i rack.

In addition to simple I/O, FTB I/O is configurable for motion-specific functionality such as Touch Probe inputs, Over Travel Limit switches, Home switches, and A Quad B Encoder and Marker inputs.

In the event of a system malfunction, such as loss of communication with the PMM, the FTB sets its I/O to the user-configured state.

## Features

- Twelve differential high speed 5 volt inputs with fault detection. Six may be configured to operate as single ended inputs. Four may be configured to operate as differential inputs or outputs.
- Sixteen optically isolated 24 volt inputs.
- Eight optically isolated 24 volt outputs with integrated short circuit protection
- Two +/- 10 volt general-purpose analog inputs.
- Two +/- 10 volt general-purpose analog outputs.
- DIN rail mounting allows convenient location of I/O.
- Removable RX3i terminal block headers provide ease of use.
- A 5VDC power source for external quadrature encoders.

## Specifications

For RX3i environmental specifications, refer to the PACSystems Rx3i System Manual, GFK-2314.

Specification	Description	Comments
Mounting Dimensions:	35 mm DIN Rail	Must be mounted on a vertical surface for proper cooling
inches	5.56 W x 4.94 H x 2.46 D	—
mm	141.2 W x 125.5 H x 62.5	—
Interface to PACMotion Module	Fiber Optic Cable	Maximum cable length is 100 meters; Interface uses a unique user selectable ID for each PMM/FTB pair to prevent cross-connection
Power Requirements	19.2VDC –28.8VDC; 0.45 Amps @ 24V	One AWG #14 (2.1mm <sup>2</sup> ) or two AWG #16 (1.3mm <sup>2</sup> ) copper wires per terminal
24V Outputs	8 optically isolated; source; open load & short detection	2 groups of 4; 1.5 A max. per point; 4 A max. per group
24V General Purpose Inputs	16 optically isolated; source/sink	4 groups of 4
5V Inputs / Outputs (differential)	4	RS422 Line Driver with short circuit protection; 48 mA max.
5V Inputs	8 (6 differential/single-ended; 2 differential)	RS422 / RS485 Line Receiver with fault detection
Analog Inputs	2, ±10V differential	14 bit resolution
Analog Outputs	2, ±10V single-ended	12 bit resolution
24V Power Output		Reverse polarity protected by replaceable fuse
5V Power Output	0.5 amp max.	electronic overload protected

Specification	Description	Comments
Quad Encoder Open Circuit Detection	Yes	—
I/O Function Assignment	Configurable	I/O functions are assigned during module hardware configuration

## Revision History

Catalog Number	Firmware Version	Date	Description
IC695FTB001-BA	1.00	Sep 2020	Documentation updates to support PMM345.
IC695FTB001-BA	1.00	Sep 2019	Following Emerson's acquisition of this product, changes have been made to apply appropriate branding and registration of the product with required certification agencies. No changes to material, process, form, fit or functionality.
IC695FTB001-AA	1.00	Nov 2008	Initial Release

## Functional Compatibility

Subject	Description
PMM Version	Use of the FTB001 requires PACMotion firmware release 1.00 or later.

## Restrictions and Open Issues

Restriction/Problem	Description
Analog Output 2 does not output Actual Motor Current	Analog Output 2 does not output Actual Motor Current. Instead, a 0x005F event is logged. The MC_WriteDwordParameter instance that sets analog Output 2 to output actual motor current does not report an error. Analog Output 1 correctly outputs actual motor current.
Analog Output Source not set back to default	If the user sets the Analog Output Source by calling the MC_WriteParameter function with parameter number 2104 or 2105, and then later stores hardware configuration, the output source is not set back to the default, which is the MC_WriteAnalogOutput value. To work around this issue, execute another MC_WriteParameter function call to reset the output source.

## Related Documents

PACSystems CPU Reference Manual	GFK-2222
PAC Machine Edition Logic Developer-PLC Getting Started	GFK-1918
PACSystems RX3i Hardware and Installation Manual	GFK-2314
Servo Products Specifications Guide	GFH-001
AC Servo Motor $\beta$ s Series - Descriptions Manual	GFZ-65302EN
PACMotion PMM335 to PMM345 Migration Guide-	GFK-3135
PACMotion Multi-Axis Motion Controller PMM345 User Manual	GFK-3140
PACMotion Multi-Axis Motion Controller PMM335 User Manual	GFK-2448

In addition to these manuals, product update documents describe individual product revisions. The most recent PACSystems documentation is available at the Emerson website: <https://www.emerson.com/Industrial-Automation-Controls/support>. PLCopen, [www.plcopen.org](http://www.plcopen.org)

## Ordering Information

Product	Catalogue Number	Description
Fiber I/O Terminal Block	IC695FTB001	Motion I/O Expansion
Motion Controller	IC695PMM335 and IC695PMM345	PACMotion Motion Controller for RX3i
Fiber Optic Cables	ZA66L-6001-0023#L150R0	FSSB and FTB I/O Cable 0.15 Meter
	ZA66L-6001-0023#L300R0	FSSB and FTB I/O Cable 0.3 Meter
	ZA66L-6001-0023#L1R003	FSSB and FTB I/O Cable 1 Meter
	ZA66L-6001-0023#L3R003	FSSB and FTB I/O Cable 3 Meter
	ZA66L-6001-0026#L1R003	FSSB and FTB I/O Cable Sheathed, 1 Meter
	ZA66L-6001-0026#L3R003	FSSB and FTB I/O Cable Sheathed, 3 Meter
	ZA66L-6001-0026#L5R003	FSSB and FTB I/O Cable Sheathed, 5 Meter
	ZA66L-6001-0026#L10R03	FSSB and FTB I/O Cable Sheathed, 10 Meter
	ZA66L-6001-0026#L20R03	FSSB and FTB I/O Cable Sheathed, 20 Meter
	ZA66L-6001-0026#L30R03	FSSB and FTB I/O Cable Sheathed, 30 Meter
	ZA66L-6001-0026#L50R03	FSSB and FTB I/O Cable Sheathed, 50 Meter
	ZA66L-6001-0026#L100R3	FSSB and FTB I/O Cable Sheathed, 100 Meter
Terminal Header Options (ordered separately – two required per FTB)		
IC694TBS032	High Density 36 point Spring Clip Terminals	14-26 AWG
IC694TBB032	High Density 36 point Captive Screw Terminals	14-26 AWG
IC694TBS132	High Density Spring Clip Terminals, Extended Shroud	14-28 AWG
IC694TBB132	High Density Captive Screw Terminals, Extended Shroud	14-28 AWG

## Installation in Hazardous Locations

The following information is for products bearing the UL marking for Hazardous Locations:

### **⚠ WARNING**

- EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2;
- EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES; AND
- EXPLOSION HAZARD - DO NOT CONNECT OR DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS.
- EQUIPMENT LABELED WITH REFERENCE TO CLASS I, GROUPS A, B, C & D, DIV. 2 HAZARDOUS LOCATIONS IS SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C, D OR NON-HAZARDOUS LOCATIONS ONLY.

## Technical Support & Contact Information

Home link: <http://www.Emerson.com/Industrial-Automation-Controls>

Knowledge Base: <https://www.emerson.com/Industrial-Automation-Controls/support>

**Note:** If the product is purchased through an Authorized Channel Partner, please contact the seller directly for any support.

Emerson reserves the right to modify or improve the designs or specifications of the products mentioned in this manual at any time without notice. Emerson does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson product remains solely with the purchaser.

© 2020 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their respective owners.

