


PACSystems™ RX3i

40W POWER SUPPLY, 120/240VAC or 125VDC
(IC695PSA040)

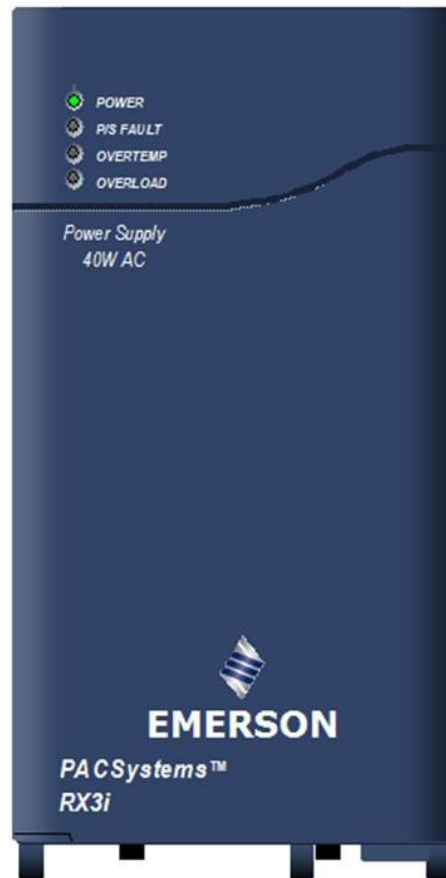

Warnings and Caution Notes as Used in this Publication

WARNING

Warning notices are used in this publication to emphasize that hazardous voltages, currents, temperatures, or other conditions that could cause personal injury exist in this equipment or may be associated with its use.

In situations where inattention could cause either personal injury or damage to equipment, a Warning notice is used.

CAUTION

Caution notices are used where equipment might be damaged if care is not taken.

Note: Notes merely call attention to information that is especially significant to understanding and operating the equipment.

These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met during installation, operation, and maintenance. The information is supplied for informational purposes only, and Emerson makes no warranty as to the accuracy of the information included herein. Changes, modifications, and/or improvements to equipment and specifications are made periodically and these changes may or may not be reflected herein. It is understood that Emerson may make changes, modifications, or improvements to the equipment referenced herein or to the document itself at any time. This document is intended for trained personnel familiar with the Emerson products referenced herein.

Emerson may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not provide any license whatsoever to any of these patents.

Emerson provides the following document and the information included therein as-is and without warranty of any kind, expressed or implied, including but not limited to any implied statutory warranty of merchantability or fitness for a particular purpose.

Introduction

The PACSystems RX3i power supply IC695PSA040 is a 40-Watt supply that operates from an input voltage source in the range of 85 to 264 VAC or 100 VDC to 300 VDC.

This power supply provides three outputs:

- +5.1 VDC output.
- +24 VDC relay output that can be used to power circuits on Output Relay modules.
- +3.3 VDC. This output is used internally by RX3i modules with IC695 catalog numbers.

⚠ CAUTION

- Only one IC695PSA040 can be installed in a PACSystems RX3i (IC695 catalog number) Universal Backplane. This Power supply cannot be used with other RX3i power supplies in redundant or increased capacity modes.

Power Supply version IC695PSA040C and earlier may cause equipment damage if inadvertently installed in the same backplane as another RX3i power supply.

If the number of modules required exceeds the capacity of the Power Supply, the additional modules must be installed in Expansion or Remote backplanes or power supplies capable of increased capacity mode operation must be used.

The Power Supply indicates when an internal fault occurs so the CPU can detect loss of power or log the appropriate fault code.

⚠ WARNING

- The power supply's door must be closed. During normal operation with an AC power source either 120 VAC or 240 VAC is present on the AC Power Supply. The door protects against accidental shock hazard that could cause severe or fatal injury to personnel.

LEDs

Four LEDs on the Power Supply indicate:


- **Power (Green/Amber).** When this LED is green, it indicates power is being supplied to the backplane. When this LED is amber, power is applied to the Power Supply but the Power Supply switch is off.
- **P/S Fault (Red).** When this LED is lit, it indicates the Power Supply has failed and is no longer supplying sufficient voltage to the backplane.
- **Over Temperature (Amber).** When this LED is lit, it indicates the Power Supply is near or exceeding its maximum operating temperature.
- **Overload (Amber).** When this LED is lit, it indicates the Power Supply is near or exceeding its maximum output capability on at least one of its outputs.

The CPU Fault Table shows a fault if any Overtemperature, Overload, or P/S Fault occurs.

On/Off Switch

The ON/OFF switch is located behind the door on the front of the module. The switch controls the operation of the outputs of the supply. It does NOT interrupt line power. A projecting tab next to the switch helps prevent accidentally turning it on or off.

Figure 1: Module in Door Open Position

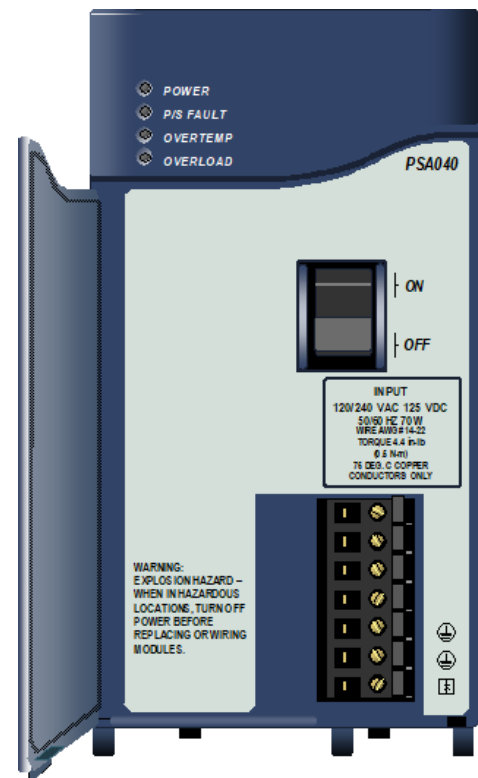

Wiring Terminals

Terminals for +24V and –24V power, ground, and MOV disconnect accept individual 14 to 22AWG wires.

Specifications: IC695PSA040

Specification	Description
Nominal Rated Voltage	120/240 VAC or 125 VDC
Input Voltage Range	85 to 264 VAC 100 to 300 VDC
Input Power (Maximum with Full Load)	70 Watts maximum
Inrush Current	4 Amps, 250 milliseconds maximum *
Output Power	40 Watts maximum total 5.1 VDC = 30 Watts maximum 3.3 VDC = 30 Watts maximum The maximum total output power available depends on the surrounding air temperature, as shown.
Output Voltage	24 VDC: 19.2 VDC to 28.8 VDC 5.1 VDC: 5.0 VDC to 5.2 VDC (5.1 VDC nominal) 3.3 VDC: 3.1 VDC to 3.5 VDC (3.3 VDC nominal)
Output Current	24 VDC: 0 to 1.6 Amps 5.1 VDC: 0 to 6 Amps 3.3 VDC: 0 to 9 Amps
Isolation (input to backplane):	250 VAC continuous; 1500 VAC for 1 minute
Ripple (all outputs)	150 mV
Noise (all outputs)	150 mV
Ride-through time	20 ms. This is the length of time the Power Supply maintains valid outputs if the power source is interrupted
Wiring Terminals	Each terminal accepts one 14 AWG to 22 AWG wire.
Current per Terminal	6 Amps
Number of Daisy-Chained PSA040 Supplies	Up to 4
<p>* The Inrush Current specification is given as a guide for sizing the external power source for the IC695PSA040. Peak inrush current may be higher for shorter durations.</p> <p>For product standards, general operating specifications, and installation requirements, refer to the PACSystems RX3i System Manual, GFK-2314.</p>	

Installation Information for Hazardous Areas

The following information is for products bearing the UL marking for Hazardous Locations or ATEX marking for explosive atmospheres:

⚠ WARNING

- EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2;
- EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES; AND
- EXPLOSION HAZARD - DO NOT CONNECT OR DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS.
- EQUIPMENT LABELED WITH REFERENCE TO CLASS I, GROUPS A, B, C & D, DIV. 2 HAZARDOUS LOCATIONS IS SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C, D OR NON-HAZARDOUS LOCATIONS ONLY.


ATEX Marking

II 3 G Ex nA IIC T3C 0C≤Ta≤60C

Thermal Deratings

The maximum output power for Power Supply PSA040 depends on the surrounding air temperature, as shown below. Full output power is available up to at least 32°C (89.6°F).

Figure 2: Thermal Derating

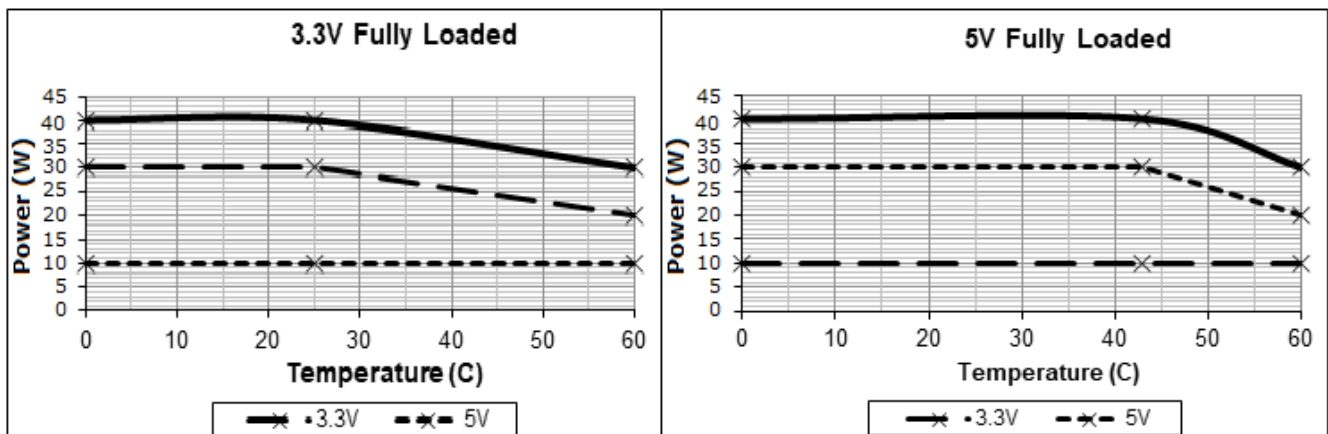

Overcurrent Protection

The 5.1 VDC output is electronically limited to 7 Amps. The 3.3 VDC output is limited to 10 Amps. If an overload (including short circuits) occurs, it is sensed internally and the Power Supply shuts down. The Power Supply continually tries to restart until the overload condition is removed. A non-repairable internal fusible link in the input line is provided as a backup. The Power Supply usually shuts down before the fuse blows. The fuse also protects against internal supply faults. The CPU Fault Table shows a fault if any Overtemperature, Overload, or P/S Fault occurs. There is no additional indication if the Power Supply fuse blows.

FIELD WIRING: IC695PSA040

Power Source and Ground Connections

The wires from the power source and ground connect to the terminals on the Power Supply as shown at right.

⚠ WARNING

- If the same external DC power source is used to provide power to two or more power supplies in the system, connection polarity must be identical at each RX3i power supply. A resulting difference in potential can injure personnel or cause damage to equipment. Also, each backplane must be connected to a common system ground.

Input Overvoltage Protection

The bottom terminal is normally connected to frame ground with a user-installed jumper as shown at lower right. If overvoltage protection is not required or is supplied upstream, no jumper is required.

To Hi-pot test this supply, overvoltage protection must be disabled during the test by removing the jumper. Re-enable overvoltage protection after testing by reinstalling the jumper.

Power Supply Field Wiring Terminals

Each terminal accepts one AWG 14 to AWG 22 wire. The end of each wire should be stripped at least 3/8-inch (9mm). The terminal can accept a wire that is stripped up to 11 mm (.433 in) while providing full seating of the insulator. The wire must be fully inserted as shown at left, so that the insulation meets the insulation stop position inside the terminal. Tightening the terminal screw pivots the clamp firmly against the stripped end of the wire, holding it in place. If the wire is not fully inserted as shown at right, tightening the terminal screw may push the wire upward so that it is not connected. When tightening the screw terminals, do not exceed the maximum torque limit of 0.5 N-m (4.4 inch-lbs).

Figure 3: Field Wiring

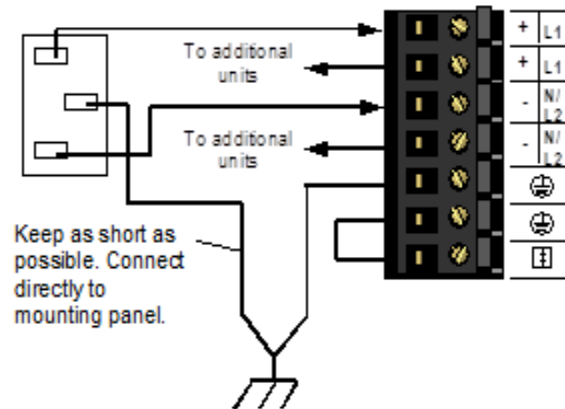


Figure 4: Overvoltage Protection


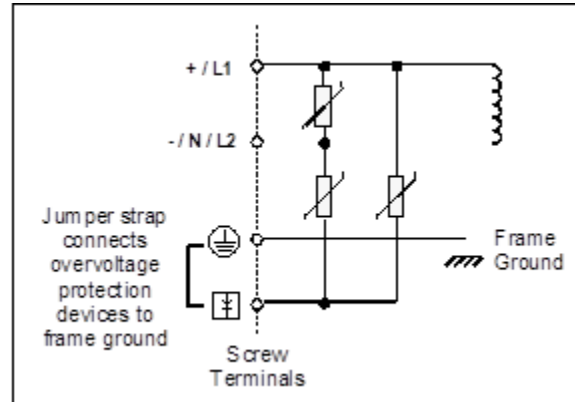


Figure 5: Field Terminals

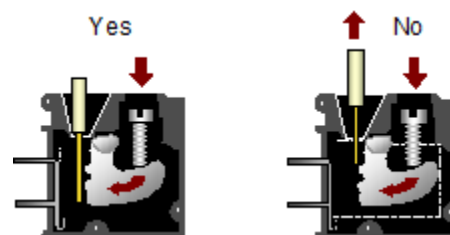

Revision History

Module Revision	Date	Description
IC695PSA040CAN IC695PSA040LTN IC695PSA040N	Oct 2021	The product's labels have been updated to show compliance with new certifications. For updated certifications, please refer to https://emerson-mas.force.com/communities/en_US/Article/Certifications-and-Agency-Approvals-Landing-Page .
IC695PSA040M	Nov 2020	Manufacturing update. No change to fit, form, or function.
IC695PSA040L	Sep 2019	Following Emerson's acquisition of this product, changes have been made to apply appropriate branding and registration of the product with required certification agencies. No changes to material, process, form, fit or functionality.
IC695PSA040K	Jan 2016	Updated modules are RoHS converted product with applicable exemptions. No change in form-fit-functionality
IC695PSA040J	May 2013	Increases the margin of the 5V and 3.3V under voltage detectors to prevent PS faults during power-up.
IC695PSA040H	Aug. 2012	Resolves an issue with powering up under light loads.
IC695PSA040G	Jun. 2011	Hardware modification improves radiated RF susceptibility and removes the requirement to install control systems that use this product in a grounded metal enclosure to meet the EU EMC Directive.
IC695PSA040F	Sep. 2006	Hardware modification. Previous versions of this Power Supply occasionally failed to power up when installed in a 16-Slot Universal Backplane, IC695CHS016. This update resolves the issue.
IC695PSA040E	Mar. 2006	The D version of this Power Supply (IC695PSA040D) incorrectly reported that it was a PSA140 power supply, causing a Configuration Mismatch error. The E version and versions prior to D report their identification correctly.
IC695PSA040A	Oct. 2005	Initial release

Problems Resolved with This Revision

None

General Contact Information

Home link: <http://www.emerson.com/industrial-automation-controls>

Knowledge Base: <https://www.emerson.com/industrial-automation-controls/support>

Technical Support

Americas

Phone: 1-888-565-4155
1-434-214-8532 (If toll free option is unavailable)

Customer Care (Quotes/Orders/Returns): customercare.mas@emerson.com

Technical Support: support.mas@emerson.com

Europe

Phone: +800-4444-8001
+420-225-379-328 (If toll free option is unavailable)

Customer Care (Quotes/Orders/Returns): customercare.emea.mas@emerson.com

Technical Support: support.mas.emea@emerson.com

Asia

Phone: +86-400-842-8599
+65-6955-9413 (All other Countries)

Customer Care (Quotes/Orders/Returns): customercare.cn.mas@emerson.com

Technical Support: support.mas.apac@emerson.com

Any escalation request should be sent to: mas.sfdcescalation@emerson.com

Note: If the product is purchased through an Authorized Channel Partner, please contact the seller directly for any support.

Emerson reserves the right to modify or improve the designs or specifications of the products mentioned in this manual at any time without notice. Emerson does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson product remains solely with the purchaser.

© 2021 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their respective owners.